

# B23W User Manual

## Function

Support functions of Bluetooth, Handsfree, FM , TF, AUX , Clock and Wireless Charging


## Contents

1. 1pc bluetooth speaker
2. 1pc 80cm charging cable
3. Use Manual 1pc

## Spec

1. Material: ABS+MDF (medium density fiberboard)
2. Bluetooth: V5.0
3. Bluetooth Range: 10m
4. Speaker: 4Ω/5W
5. Frequency Response: 80Hz-20KHz
6. Signal Noise Rate: >85dB
7. Battery: 1200mAh
8. Play time: 3-5Hours
9. Size: 152\*78\*84mm
10. Weight: 515g

## Operation Instruction

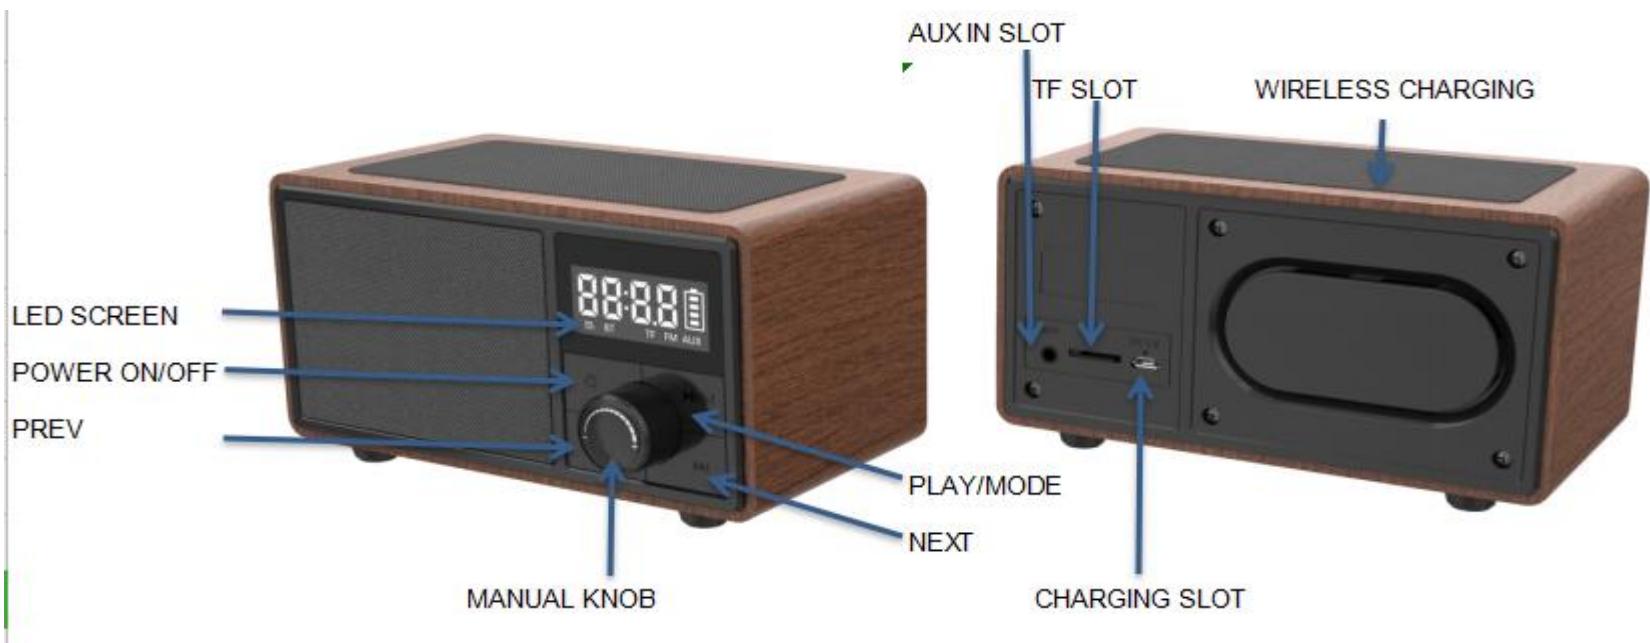

Key Function Name	Operation	Playing Mode				Time and Alarm Clock		Hands Free						
		Bluetooth Mode	TF Mode	FM Mode	AUX Mode	Standby Clock	Alarm Clock	Coming Call						
POWER ON/OFF	Short Press	Standby clock interface to show time				Cancel alarm clock								
	Long Press	Power On/Off												
	Double Click	NC				Redial the latest call								
PLAY/MODE	Short Press	Play/Pause	Play/Pause	Silence	Silence	Sleep timing power off setting from 00/30/60/90 minutes		Answer call / reject call						
	Long Press	Switch BT/TF/FM/AUX Mode					Alarm clock setting	Reject call						
	Double Click	Connect/disconnect bluetooth	NC	Memorize FM stations	NC	Standard time setting								
NEXT	Short Press	Next song	Next song	Next FM station	NC	Snooze								
	Long Press	NC	Fast forward	Automatic search next station	NC									
	Double Click	NC	NC			NC								
PREV	Short Press	Previous song	Previous song	Previous FM station	NC	Snooze								
	Long Press	NC	Fast backward	Automatic search previous station	NC									
	Double Click	NC	NC			NC								
MANUAL KNOB	Turn right	Continuous volume up			Number value up	Snooze								
	Turn Left	Continuous volume down			Number value down									
LED SCREEN	Show standard time, existing playing mode status													
AUX IN SLOT	Audio source in by connecting audio cable													
TF SLOT	Audio source in by connecting TF card													
CHARGING SLOT	5V 2A (If play speaker and do wireless charge in same time, the used adapter and charging cable should be 5V 2A accordingly)													

### Bluetooth Pairing

1.Power on Bluetooth speaker

2.Bluetooth speaker will automatically enter pairing mode.

3.Search for "AV:Link-Fusion" on the pairing device;

4.Enter Pon/password "0000" if required

5.Double click "PLAY/MODE" button to connect or disconnect bluetooth with phone

## **Handsfree**

1. When call in coming, short press "PLAY/MODE" button to answer call, during the calling, short press it again to reject call.
2. When call in coming, long press "PLAY/MODE" button to reject call directly.
3. Double click "POWER ON/OFF" button to redial the latest call.

## **FM Function**

1. When play FM function, please plug in Aux cable as antenna so that the FM signal could be better.
2. Long press "PLAY/MODE" button to FM mode, then, long press "NEXT" button to automatic search next valid sation, or short press it to foward the station number continually.
3. Long press "PREV" button to automatic search previous valid sation, or short press to it backward the station number continually.

## **Time and Clock Alarm Setting**

### **1. Time Setting**

- 1a. Short press "POWER ON/OFF" button to standard time display.
- 1b. Double click "PLAY/MODE" button to enter into setting, turn right or turn left the "MANUAL KNOB" to adjust the hour and minute, double click "PLAY/MODE" button to confirm.

### **2. Clcok Alarm Setting**

- 2a. Set the standard time as above Time Setting
- 2b. Short press "POWER ON/OFF" button to standard time display.
- 2c. Long press "PLAY/MODE" button to enter into setting, turn right or turn left the "MANUAL KNOB" to adjust the hour and minute, short press "PLAY/MODE" button to confirm.
- 2d. Turn right or turn left the "MANUAL KNOB" to select the alarm parameters that alarm on/off, ring count, alarm tone modes.
- 2e. When the clock alarms, short press "POWER ON/OFF" button to cancel the clock alarm. Or short press other 3 buttons to set snooze time from OFF/30/60/90 minutes

### **3. Sleep timing Power off setting**

Under standard time displaymode, short press "PLAY/MODE" button to set sleep timing power off setting from 00/30/60/90 minutes

## **Wireless Charging**

1. Before wireless charging, make sure the used phone support wireless charging.
2. Plug in the 5V 2A charging cable to use the DC power for charging, not the battery one, power from battery can't do wireless charge.
3. Put the phone on the speaker top section of "WIRELESS CHARGING" to use.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part

15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Warning Statements:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment shall be installed and operated with minimum distance 20cm between the radiator & body.