


WTV-AW15 ACTIVE WEAR BLUETOOTH HEADPHONES INSTRUCTIONS

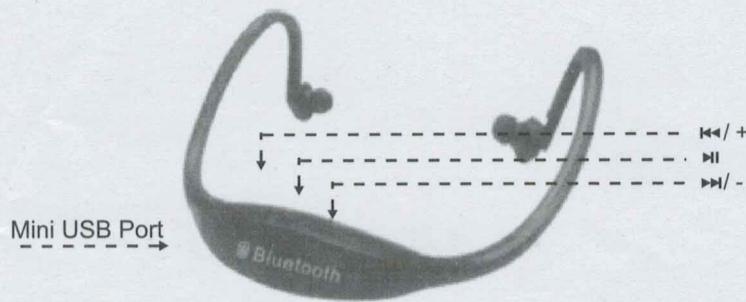

Package includes:

- Bluetooth Headphones with built-in microphone
- Mini USB Cable

Specifications

Battery Charge Time: between 30~60 minutes

Play Time: approximately 3 hours

Bluetooth Range: 32 feet

Bluetooth Version: V3.0

Charging the Bluetooth Headphones

Using the Mini USB Cable provided, connect the Bluetooth Headphones to a power source such as a PC, laptop or AC/USB power outlet. The red LED on Bluetooth Headphones is lit while it is charging. The red LED turns off when it is fully charged.

Operating the Bluetooth Headphones

1. Press and hold **▶/II** button for 5 seconds to turn on the headphones. Blue LED flashes quickly for 4 times to indicate the power is on.
2. When the power is on, press and hold **▶/II** button for 3 seconds to turn off the headphones. Red LED flashes quickly for 4 times to indicate the power is off.

3. The LED on headphones flashes to indicate different operation modes:

Pairing Mode: alternating blue/red LED flashes.

In order to connect these headphones with a Bluetooth device (such as your smartphone or tablet), you must first establish a wireless connection between the headphones and your device. This is the "pairing" process. Check to make sure your device's Bluetooth setting is enabled. Locate & select these headphones on the Bluetooth device list. If your device requires a passkey, enter "0000".

Standby Mode (Connected): blue LED flashes 2 times every 3 seconds.

Once the headphones are successfully connected to your Bluetooth device, blue LED flashes 2 times every 3 seconds to indicate headphones are ready to use.

Standby Mode (Unconnected): blue LED flashes 1 time every 3 seconds.

When the headphones are not connected to a Bluetooth device, they will automatically transition into standby mode 1 minute after the power is turned on. Blue LED flashes 1 time every 3 seconds to indicate headphones are in standby mode.

4. Once the headphones are connected to your Bluetooth device, you may listen to music or answer incoming calls using these headphones:

To Answer Incoming Calls

Short press **▶/II** button 1 time to answer a call.

Press and hold **▶/II** button for 3 seconds to reject a call.

To Adjust Music Settings

Short press **▶/II** button to play/pause music.

Short press **▶/II** or **◀/▶** button to skip forward/backward in your music playlist.

Press and hold **▶/II** or **◀/▶** button to increase/decrease music volume.



FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.