

# G101F TWS earphone User Manual



FCCID: 2AHN6-AUBE245

## Warning

Special Note: Before using the earphone for the first time, please put the earphone into the ordinary charging case once and then remove it. Only then can touch be effective.

Please read the warnings below carefully. Store this manual with product packaging. The safety precaution manual reduce the risk of fire or injury when correctly complied to

To reduce the risk of injury :

Keep batteries out of reach of children.

Do not heat, open, or dispose of battery pack in fire.

Do not allow metal objects to touch the battery on the device.

Do not expose battery pack to excessive heat.

Do not use a high current charger, or the charging line will burn out.

Please Charging with a DC 5V adapter (not included in the package).

## Paring

### 1: Auto Pairing

Taking the earphones out of the charging case, and then the earphones will automatically turn on, sync together and enter pairing mode.

### 2: Syncing your earphones..

When earphones do not sync together or enter disconnected state during use.

1): Turn off both earphones and turn back on.

2): If that does not work, placing both earphones back into case, closing the charging case and then open the charging case again.

3): While earphones is out of the charging case. Press and hold both earphones for 3 seconds. This will force the earphones to turn off and on again and sync with each other.

3: Open up Bluetooth setting on your smart device and scan for **XXXX**.

## Operation

### 1: Power on/off . (长按3秒开机, 长按5秒关机)

- 1.) Take the earphones out of the charging case, automatically turn on;  
Put the earphones back to the charging case, automatically turn off;
- 2.) Long press 3 seconds to turn on  
Long press 5 seconds to turn off.

### 2: Play/Pause music. (单击播放暂停)

When listening to music.  
Tap left/right earphones once to play or pause the music.

### 3: Previous /Next Song (双击上下曲, 左耳上一曲, 右耳下一曲)

When listening to music.  
Quick double tap left earphones to go to previous song.  
Quick double tap right earphones to go to next song.

### 4: Volume -/+ (三击加减音量. 左耳音量减, 右耳音量加)

Quick tap left earphones 3 times to decrease the volume.  
Quick tap right earphones 3 times to increase the volume.

### 5: Answer/Hang up (单击接挂)

When there is an incoming call.  
Tap left or right earphones once to answer the call.  
Tap left or right earphones again to end the call.

### 6: Reject (长按2秒拒接)

When there is an incoming call.  
Long press left or right earphones for 2 seconds to reject the call.

### 7: Voice assistant (长按左/右耳 2秒 开启语音助手)

Long press left or right earphones for 2 seconds

# Charging Function

Fully charge the case and earphones before using for the first time.

1: Charging the charging case 仓充电时，屏幕显示数字，满电后显示100%。

When the charging case is charging, the screen will show the capacity, when it is full, show 100%

LR亮着表示耳机也在充，LR灭了表示耳机满了。

2: Earphone charging 耳机在仓里充电时，红灯亮。满电后熄灭。

When battery is low, each 5s flash once for left and right side red light at the same time, you will listen to a warning sign or tone. It will turn off when the earphones completely out of battery.

(a) Place the earphones into the charging case.

(b) red light on the earphones turn on when charging has begun. The light will turn off when charging is complete.

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception, which can be determined by turning the device off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

--Reorient or relocate the receiving antenna.

--Increase the separation between the device and receiver.

--Connect the device into an outlet on a circuit different from that to which the receiver is connected.

--Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) this device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation.