

SHARPER IMAGE®

Bluetooth Speaker



SI-AU-BS-104



Notice:
Please read user manual carefully and keep it for your records.


Package includes:

- 1 Speaker
- 1 Charging cable
- 1 User Manual

Safety instructions:

- Do not let small children play this product.
- Do not expose the speaker to liquid, moisture or humidity to avoid the product's internal circuit being affected.
- Do not use abrasive cleaning solvents to clean the speaker.
- Store the speaker out of direct sunlight and extreme temperatures (above 45°C/113°F or below -10°C/14°F), as this may shorten the battery life, affect the operation or degrade the performance of your speaker.
- Do not dispose of the speaker in a fire to sharp objects as this will cause scratches and damage.
- Do not drop the speaker. This may cause damage to the internal circuitry.
- If the speaker is left for long period without use, charge once per month to avoid the overconsumption of the battery.
- This appliance is for indoor use only. Please do not use or store the unit in high temperature or hazardous locations. Please do not submerge the unit into water, as this will ruin the speaker.
- The unit comes with a rechargeable battery, so please do not throw or put it in a fire to avoid explosion.
- The warranty for this product is invalidated if the

products had been damaged, repaired or modified in any way.

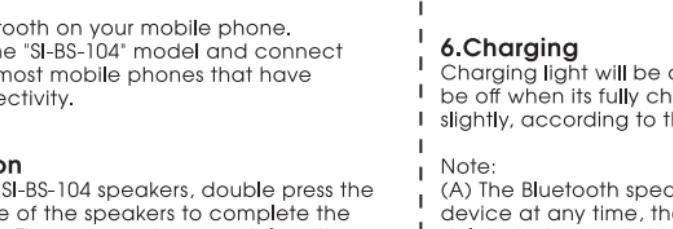

1. Bluetooth Connection

1. Turn on the power button in the default Bluetooth mode.
2. Turn on Bluetooth on your mobile phone.
3. Search for the "SI-BS-104" model and connect.
5. Suitable for most mobile phones that have Bluetooth connectivity.

6. Charging

Charging light will be on when its on charging and be off when its fully charged. Play time may vary slightly, according to the volume.

2. TWS function

Turn on the two SI-BS-104 speakers, double press the M button on one of the speakers to complete the TWS connection. Then connect your mobile with any one of 2 speakers

3. FM Function:

1. Turn on the unit, short press the M button to switch to FM mode.
2. Connect the Type-C interface as an antenna.
3. Double press the button to start automatically stations searching
4. Then one press the buttons to switch the previous/next station. The radio signal and station availability is affected by the conditions in your area.

Troubleshooting

1. No power: Recharge your speaker using the included USB Type C charging cable. Try using a different cable.
2. Music is not playing over Bluetooth: Make sure your Bluetooth device has A2DP profile. Check if both devices are paired and connected over Bluetooth. Restart the speaker to reconnect our Bluetooth device.
3. Bluetooth device will not reconnect with the

5. LED light indicator

Long Press the light button to turn on/off the LED light.

speaker: Navigate to your Bluetooth settings menu on your Bluetooth device, tap "SI-BS-103" and select "Forget". Now follow the steps to pair your device again.

Frequently Asked Questions

Questions	Solutions
Unsuccessful Pairing for Connection	<ol style="list-style-type: none">1. Make sure the speaker is in Bluetooth mode.2. Make sure the speaker has not been connected with another device.3. Check if there are many Bluetooth devices working around, which may interfere with Bluetooth connection.4. Try to restart the Bluetooth on your phone or tablet and reconnect the speaker again.
No voice or Distortion of sound	<ol style="list-style-type: none">1. Check the volume of your phone or the speaker and adjust the volume.2. Check if the battery is too low, please recharge it.
Music breaking play	<ol style="list-style-type: none">1. Check if the device is beyond the effective connection distance.2. Check if there is any obstacle between the speaker and your device.

6. FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions.

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications not expressly approved by the user's responsible for compliance could void the user's authority to operate the equipment.

7. FCC Warning

This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

All trademarks and registered trademarks are property of their respective owners.

SHARPER IMAGE®

SHARPER IMAGE AND THE 7 LOGO AND RELATED ELEMENTS © & ™ THREE SIXTY BRANDS GROUP, LLC OR ITS AFFILIATES.

DISTRIBUTED BY BYTECH © 2024 BYTECH NY INC,
BROOKLYN, NEW YORK 11223. ALL RIGHTS RESERVED.

Contact Info:
2585 West 13th Street
Brooklyn, NY 11223
www.bytechintl.com
(718) 449-3700

3. Bluetooth device will not reconnect with the