



BC-AU-BS-128-BK



Bluetooth®
RGB LED • DUAL MOUNT
WIRELESS
SPEAKER

Notice:
 Please read user manual carefully and keep it for reference.

Package includes:

- 1 Wireless Speaker
- 1 Charging cable
- 1 User Manual

Warning:

Charge and operate only as indicated in this manual, as improper use may result in damage to the product or injury.

- To avoid risk of shock or injury, do not dismantle the device or insert any objects into the speaker.
- To avoid electronic interference and/or compatible conflicts, turn off the product in any facilities where posted notices instruct you to do so.
- Do not pull the speaker charging cable. Damage may result to the cable.
- Keep out of reach of children. This is not a toy.
- Avoid exposure to moisture, liquids, heat, flame and high voltage equipment.
- Do not short circuit the input terminals of the speaker.
- Do not drop, place heavy weight or allow heavy impact to the speaker.
- the internal battery should not be crushed, bent, or twisted.
- Do not disassemble and Do not dispose of in fire.


How to Use:

Power/Charging:

Connect the type-C charging cable to port that is to the left of the on-speaker control buttons and to an available USB the power adaptor. Please use a power adaptor with 10W or above to boost the speaker.

Turn ON/OFF:

Press and hold to turn ON/OFF the unit.

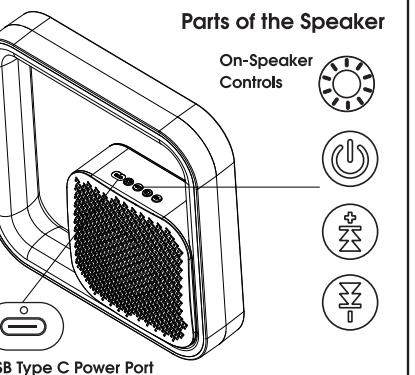

Switch between Bluetooth and FM Mode:
 Press twice to switch between Bluetooth and FM mode.

Connect to Bluetooth®:

1. Switch to Bluetooth® mode if in FM mode,
2. Search for Bluetooth® device named "BC-BS-128" on your mobile device when the LED indicator light flashes in blue,
3. You will hear a prompt sound when they are successfully paired.
4. The speaker will automatically turn off without connection after 5 minutes. To reconnect, you can turn on the speaker and it will automatically connect back to your device once they have been previously paired.

Bluetooth® Music Playback:

- Press once to play / pause the music,
- Press once to play the previous song.
- Press and hold to reduce the volume.
- Press once to play the next song.
- Press and hold to increase the volume.

FM Radio Mode:


1. Switch to FM radio mode by pressing the button twice.
2. Press button to scan and save the radio stations with strong signals. The first scanned station will then be played.
3. Press to play the next station;
- Press to play the previous station.

Specifications

- Bluetooth Version: 5.4
- Sound Output: 3inches speaker, 2Ω 5W
- Battery type: 2000 mAh 3.7V Li-Ion Battery
- Charge Time: 3-4 hr
- Play Time: 50% volume LED off: 5-6 hr
- Charging Cable length: USBA to TYPE C 3 ft
- Standby Time: Speaker will power down after 5 min without wireless connection.
- Operating Range: 33 ft
- Music playing time: 3-4H
- Input Power: 5V 1A 5W

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

How to Use the Remote Control:

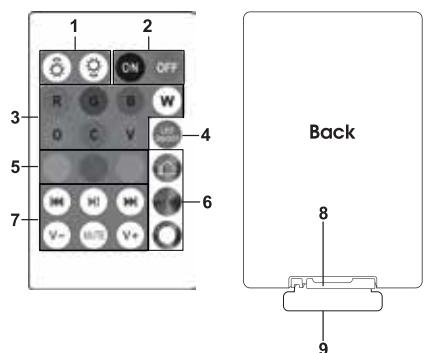

- 1 - LED Brightness section
- 2 - ON/OFF buttons
- 3 - Color Modes section
- 4 - LED square ON/OFF button
- 5 - LED square color modes section
- 6 - LED square color mode
- 7 - Music Control section
- 8 - Battery Tray
- 9 - Battery Preservation plastic tab

Note: To activate the remote control, remove the Battery Preservation plastic tab (9) by gently pulling it down, out of the battery compartment.

LED Brightness Section (1)

Control the brightness of the LED square frame with the buttons in the LED Brightness section, left button raises and right button lowers.

ON and OFF buttons (2)

By pressing the ON button, the LEDs in the LED square starts rotating. By pressing the OFF button, the device will power OFF. The LEDs will no longer light up and a voice will sound, indicating the device is powered off.

Color Modes (3-6)

Select the designated color by pressing the corresponding button in the color modes section (3). The color LED can be deactivated by pressing the LED square ON/OFF button (4), LED Square color modes section By pressing the LED square color modes section (5), you can select the desired color mode for the LED square. LED Square color modes section By pressing the LED dome color modes section (6), you can select the desired color mode for the LED dome.

Music Control (7)

You can control the music from your connected device once it is paired (see the Connect to Bluetooth section on the reverse side of this manual.)

- To play/pause music, press the .
- To increase the volume, press the .
- To decrease the volume, press the .
- To go to the next track, press the .
- To go to the previous track, press the .
- To mute the sound, press the MUTE button.

Inserting or Replacing the Batteries (8-9)

- Push in the security lock to the right and pull out the battery tray according to the diagram imprinted on the back of the remote (8).
- Remove the old battery and insert a new CR2025 battery into the battery tray, respecting the polarity of the previous battery.
- Place battery tray back in the slot being sure that the security lock pops back into place, securing the tray.

CAUTION: Any changes or modifications not expressly approved could void the user's authority to operate the equipment.

WARRANTY- 12 MONTH
 Please visit our website Bytechintl.com/warranty

©2025 BYTECH NY INC.
 B Iconic™ is a registered trademark of Bytech NY INC.
 Bluetooth® is a registered trademark of SIG, Inc.
 MADE IN CHINA

*All Trademarks and copyrights are the property of the respective companies.
 *Photos are for illustration purposes only

BICONIC
WWW.BYTECHINTL.COM
 Bytech NY Inc.
 2585 West 13 street
 Brooklyn NY 11223
 (718) 449-3700



WARNING

- **INGESTION HAZARD:** This product contains a button cell or coin battery.



- **DEATH or serious injury can occur if ingested.**
- A swallowed button cell or coin battery can cause Internal Chemical Burns in as little as 2 hours.

WARNING

- **KEEP new and used batteries OUT OF REACH of CHILDREN**
- **Seek immediate medical attention if a battery is suspected to be swallowed or inserted inside any part of the body.**