

BYTECH®
THE ART OF TECHNOLOGY

BY-AU-BS-151-BK



KARAOKE SPEAKER PARTY SPEAKER

Notice:

Please read user manual carefully and keep it for your records.

Package includes:

- 1-True Wireless Bluetooth® speaker
- 1- Wired Microphone
- 1- Micro USB Cable
- 1- Instruction Manual

Warnings:

- Do not let small children play this product - Do not expose the speaker to liquid, moisture or humidity to avoid the product's internal circuit being affected.
- Do not use abrasive cleaning solvents to clean the speaker.
- Store the speaker out of direct sunlight and extreme temperatures (above 45°C/113°F or below -10°C/- 14°F), as this may shorten the battery life, affect the operation or degrade the performance of your speaker.
- Do not dispose of the speaker in a fire as it might result in an explosion. - Do not expose the speaker to sharp objects as this will cause scratches and damage.
- Do not drop the speaker. This may cause damage to the internal circuitry.
- Do not attempt to disassemble the speaker. This may cause damage to the internal circuitry.
- If the speaker is left for long period without use, charge once per month to avoid the overconsumption of the battery.
- This appliance is for indoor use only. Please do not use or store the unit in high temperature or hazardous locations. Please do not submerge the unit into water, as this will ruin the speaker.
- The unit comes with a rechargeable battery, so please do not throw or put it in a fire to avoid explosion.
- The warranty for this product is invalidated if the product has been tampered, repaired or modified in any way.

Control Panel:

1. Mode (LINE IN, MP3, FM, BT)
2. Previous song (FM: Previous channel)
3. Play/ Pause (FM: Automatic Search)
4. Next song (FM: The next channel)
5. USB socket
6. Charging socket (DC 5V)
7. Audio input socket
8. Micro SD card socket
9. Knob (Power Switch and Volume Control)
10. With TWS function
11. With Microphone input jack
12. Wired microphone included

Operating Instructions:

1. Charging your speaker: Your speaker comes with a built-in rechargeable battery. Prior to using it for the first time, it is recommended to completely charge the battery for 3-4 hours. When the speaker is in low power status it will emit a tone. Please recharge the battery of the speaker.

2. Connect the provided USB cable to a compatible AC-charger, computer or laptop USB port. The red LED will be illuminated while charging. It takes approximately 3-4 hours to completely charge the battery. When charging is completed, the red LED will turn off.

3. Micro SD Function: With the speaker switched on, Press "MODE" on the product to switch to TF mode or just insert a Micro SD card, TF mode will start automatically. Press **⏮** to continue play/pause music. Press **⏭** button to go to next song. Press **⏪** to go back to previous song.

4. USB Function: With the speaker switched on, press "MODE" on the product to switch to USB mode or just insert a USB flash drive. USB mode will start automatically. Press **⏮** to continue play/pause music. Press **⏭** button to go to next song. Press **⏪** to go back to previous song.

5. FM Radio: Press "MODE" on the product to switch to FM mode. Radio will start automatically. Press **⏮** to enter into automatic FM channel searching. Press **⏭** button to go to next frequency. Press **⏪** to go back to previous frequency.

6. MIC Function: Plug the microphone into the port and enjoy the music.

7. Activate your device's Bluetooth and set your mobile phone to search for Bluetooth devices. After the search is completed, select BY-BS-151 from the Bluetooth device list.

8. You can now enjoy your music with the speaker by controlling the music via your music player and with the volume being adjusted on the speaker's volume knob.

9. Note: (A) The Bluetooth speaker will only sync with one device at any time, the connection cannot be deleted when matching. It can only be deleted in disconnected mode.
(B) A Bluetooth connection list cannot have two devices with the same name. This will cause one of the two devices to fail to connect via Bluetooth.

(C) If Bluetooth pairing fails, delete other Bluetooth devices in the connection list, restart speaker and try again.
(D) The disconnection of Bluetooth is not immediate and will take a few seconds delay to fully disconnect from the smart phone.

10.The pairing procedure is as follows:
When the two speakers are in bluetooth mode at the same time (one of the speakers is connected to the phone), choose one of them to long press the "M" button, and the two speakers will be connected automatically. When the connection is successful, long press the "M" button again, and the connection will be disconnected (the speaker connected to the phone will continue to sound).

Specifications

- Operating Range: Up to 33 feet
- Sound Output: 8W
- Charge Time: Up to 3 hours
- Play Time: up to 6 hours
- Standby Time: Up to 110 hours
- Battery MAH: 1200mah per speaker
- Size: 5.5 x 4.6 x 8.2 inches

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
FCC Radiation Exposure Statement:
This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications not expressly approved could void the user's authority to operate the equipment.

Bytech NY INC. warrants this product to be free from defects in materials and workmanship to the original purchaser for a period of 12 months from the original purchase date. Bytech's responsibility with regard to this limited warranty shall be limited solely to repair or replacement as its option, of any product which fails during normal consumer use. This warranty does not extend to damage or failure which results from misuse, neglect, accident, alteration, abuse, improper installation or maintenance. At any time during the 12 month period following the purchase, the product fails due to defects in material or workmanship, return the defective product (with freight prepaid) with proof of purchase. Please include \$5.00 for return shipping and handling.

WWW.BYTECHINTL.COM
Bytech NY Inc.
2585 West 13 street
Brooklyn NY 11223
(718) 449-3700
©2020 BYTECH NY INC.

*All trademarks and copyrights are the property of the respective com

FCC ID: 2AHN6-BYBS151



MADE IN CHINA