

USER MANUAL

Active Speaker

Model No.: DJ-8210



We greatly appreciate your purchase of the speaker. To be sure you take maximum advantage of all the speaker has to offer, read these instructions carefully and use the set properly. Be sure to keep this manual for future reference, should any questions or problems arise.

CAUTION

No user serviceable parts inside. Please return to the agents or a similarly qualified service centre for repair.

SAFETY INSTRUCTION

1. Please read the user manual carefully before use. Retain for future reference.
2. All warnings on the appliance and in the user manual should be adhered to.
3. Do not use the appliance near water
4. Ventilation – Do not block any of the ventilation opening.
 - Do not install near any heat sources or fire.
 - Do not install in an airtight location.
5. Keep the cord and plugs in good order.
6. The unit can be wiped down with a damp cloth only when the unit has been switched off and the plug removed.
7. Unplug during lighting storms or when not in use for long periods of time.
8. Keep foreign objects and liquid from entering the unit to avoid short circuit, fire and electrical accident.
9. Keep the appliance in a dry location.
10. Refer all servicing to the agent or a similarly qualified service centre for repair.

FCC STATEMENT :

This device complies with Part 15 of the FCC Rules.
Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ◆ Reorient or relocate the receiving antenna.
- ◆ Increase the separation between the equipment and receiver.
- ◆ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ◆ Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

SPECIFICATION

AMP

OUTPUT POWER: 3000Watt(p.m.p.o)

IMPEDANCE: 4ohms

FREQUENCY RESPONSE: 45-20KHz

S/N ratio: 93dB±3dB

OTHER ITEM

ELECTRLCITY SUPPLY :

100-125V~/220-240V~, 50/60Hz

PACKING LIST


MANUAL ----- 1 BOOK

REMOTE CONTROL----- 1 PIECE

SIGNAL WIRE----- 1 PIECE

POWER CORD -----1 PIECE


FUNCTION OF FRONT BOARD

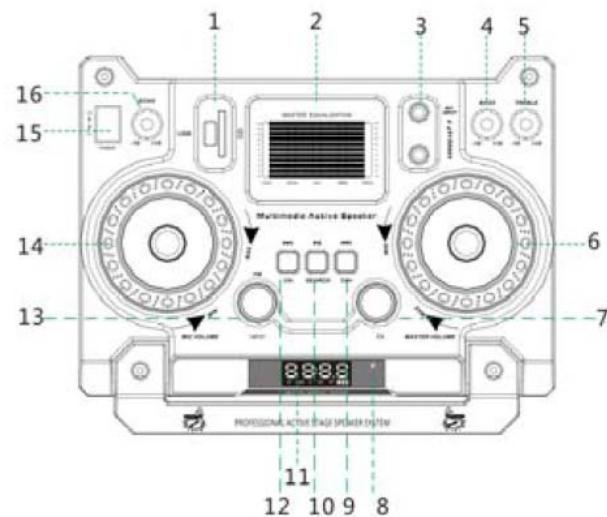

Function of front board:

1. USB/SD/MMC cord connector
2. Equalizer: 5 band EQ adjustment
3. MIC input jack
4. Bass adjustment
5. Treble adjustment
6. Volume adjustment
7. EQ input display
8. Remote control receiver
9. MP3 next song/FM next frequency/VOL+
10. MP3 pause/play
11. Working status display window
12. MP3 last song/FM last frequency/ VOL-
13. AUX/DVD/MP3/FM/BT input selected
14. MIC volume adjustment
15. Power on/off
16. MIC echo adjustment


REMOTE CONTROL

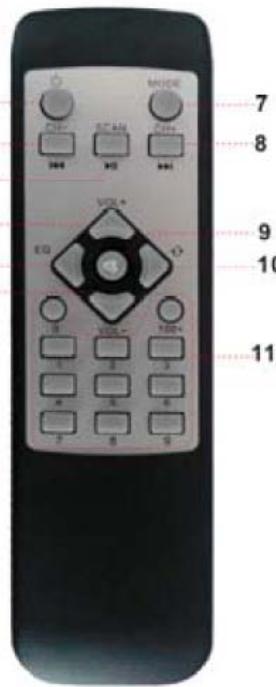

Function of Remote:

1. Standby
2. MP3 last song/FM last frequency
3. MP3 pause. Play/FM scan frequency
4. Sound volume "+" of main channel
5. EQ mode adjustment
6. Sound volume "-" of main channel
7. AUX/DVD/MP3/FM/BT input selected
8. MP3 next song/FM next frequency
9. Mute
10. Return MP3 last song/FM last frequency
11. 0-9:thru through selected song

FUNCTION OF BACKBOARD

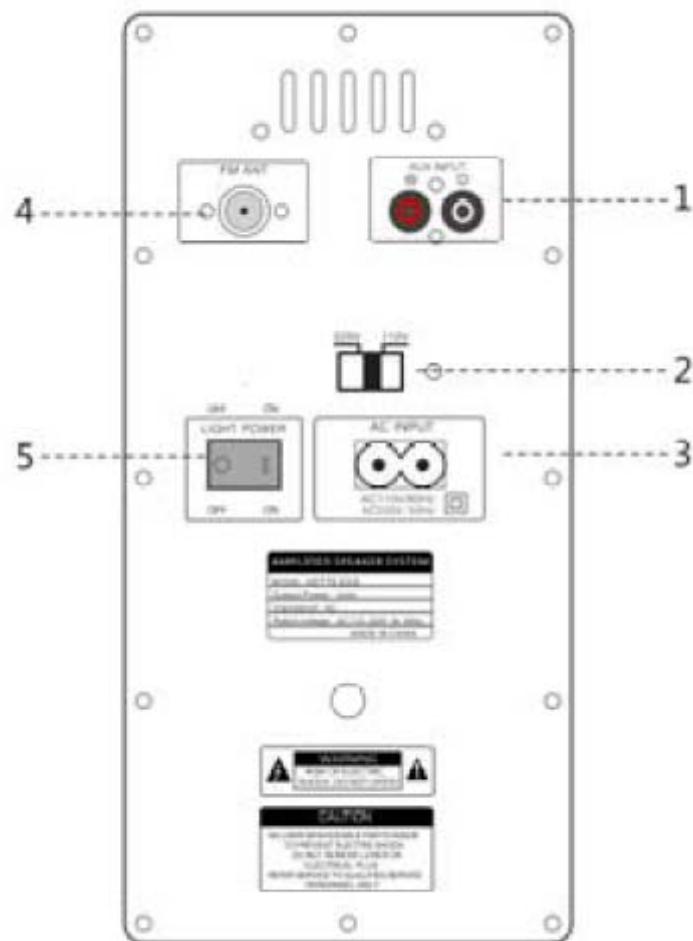

1. DVD/CD/MP3 Input
2. 100-125V~ or 220-240V~ Voltage Switch
3. Electricity Supply AC 100-125V/60Hz AC 220-240V/50Hz
4. FM ANT
5. LED Power ON/OFF