



## OPERATING MANUAL

MODEL:MPD129B



Carefully read User Guide to operate this unit properly.  
Keep for future reference.

### Connecting to BT

- Press "MODE" until you hear two beeps. BT Mode is on pair.
- Turn on your smartphone's BT and search for the device. Then you will read "MPD129B" on smartphone.
- Connect with "MPD129B" click the OK on smartphone.
- "Connected" message will appear. Connection is successful.

(play and select music with smartphone when connected through BT).

### MMC Function

- Press "MODE" on remote or "Mode" on back panel to switch to MMC Mode or just insert a MMC card. MMC mode will start automatically.
- Press "PLAY/PAUSE" to continue play/pause music.
- Press "NEXT" button to go to next song.
- Press "PREVIOUS" to go back to previous song.
- Press "REPEAT" to replay same song.


### USB Function

- Press "MODE" on remote or "Mode" on back panel to switch to USB Mode or just insert a USB flash drive. USB mode will start automatically.
- Press "PLAY/PAUSE" to continue play/pause music.
- Press "NEXT" button to go to next song.
- Press "PREVIOUS" to go back to previous song.
- Press "REPEAT" to replay same song.

### FM Radio Function

- Press "MODE" on remote or "Mode" on back panel to switch to FM Mode. Radio will start automatically.
- Press "PLAY/PAUSE" to enter into automatic FM channel searching.
- Press "NEXT" button to go to next frequency.
- Press "PREVIOUS" to go back to previous frequency.

## REMOTE CONTROL

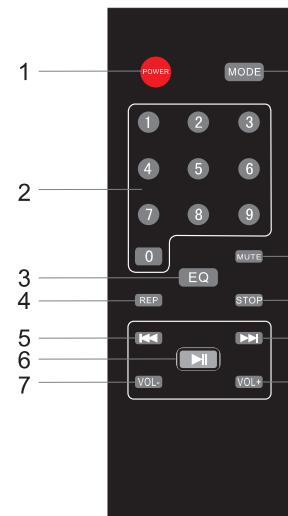


1. USB STANDBY
2. 0-9 DIGITAL SELECTIONS
3. ACOUSTIC FIELD MODEL
4. REPEAT PLAY
5. PREV
6. PLAY/PAUSE  
(FM:AUTOMATIC SEARCH)
7. VOLUME REDUCE
8. MODE SELECTION  
(LINE/MP3/FM/bBLUE)
9. MUTE
10. STOP
11. NEXT
12. VOLUME INCREASE

### Important Notes: CAUTION

1. Do not use the machine while charging. This may cause battery damage.
2. To save battery power, turn off speaker lights when not in-use.
3. Please keep machine away from water and moisture.
4. Do not open the machine or remove the back panel. This machine carries high voltage and could be very dangerous.
5. In case of service needed, please call a certified technician or our customer service department. Do not attempt to fix yourself.

## PANEL FUNCTION DECLARATION

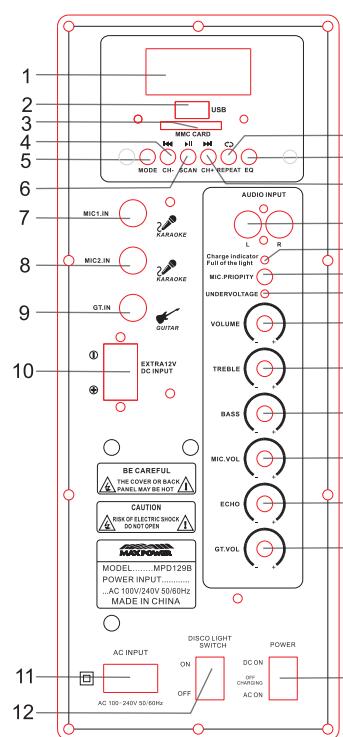

- 1.LED display
- 2.USB port
- 3.MMC card socket
- 4.Previous(FM:A channel)
- 5.Mode selection(switch USB,MMC card, BT, Radio, & AUX)
- 6.Play/pause(FM:Automatic search)
- 7.Microphone 1 input
- 8.Microphone 2 input
- 9.Guitar input
- 10.DC 12V input
- 11.AC 100-240V 50/60Hz input
- 12.Disco lamp switch(ON/OFF)
- 13.Power switch(DC ON: DC power supply)  
OFF/CHARGING:power OFF/CHARGE)
- 14.Guitar volume adjustment
- 15.Echo adjustment
- 16.Microphone volume adjustment
- 17.Bass adjustment
- 18.High adjustment
- 19.Main volume adjustment
- 20.Undervoltage lamp(undervoltage lights)
- 21.Microphone switch priority
- 22.Charge indicator(full of the light)
- 23.Audio input
- 24.Next song(FM:The next channel)
- 25.Equalizer
- 26.Repeat play

### **Federal Communications Commission (FCC) Statement**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications made to this device not expressly approved by Guangzhou Chuanghong Electronics Co., Ltd. may void the FCC authorization to operate this device.

Note: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.