

Micro Drone 3.0



You have control

Remember, when you fly an unmanned aircraft (or drone), the responsibility is yours.

Be safe, be legal

www.caa.co.uk/uas

CAP 1202



Always remember:

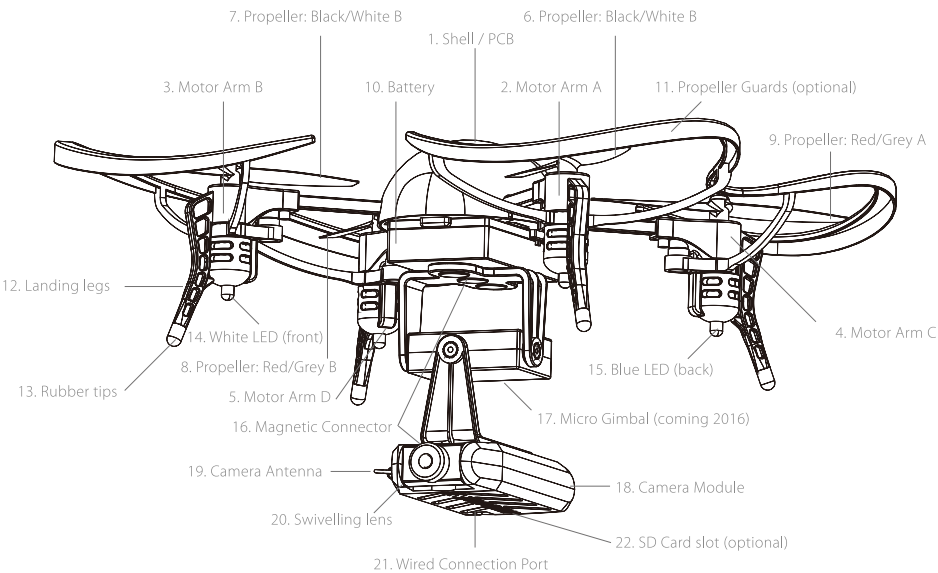 
 You are responsible for each flight	You are legally responsible for the safe conduct of each flight. Take time to understand the rules - failure to comply could lead to a criminal prosecution.	 Keep your distance	It is illegal to fly your unmanned aircraft over a congested area (streets, towns and cities). Also, stay well clear of airports and airfields.
 BEFORE each flight, check drone for damage	Before each flight check that your unmanned aircraft is not damaged, and that all components are working in accordance with the User Manual.	 Keep your distance 50 metres	Don't fly your unmanned aircraft within 50m of a person, vehicle, building or structure, or overhead groups of people at any height.
 Drone is in sight at all times	You must keep the unmanned aircraft within your sight at all times.	 Consider rights of privacy	Think about what you do with any images you obtain as you may breach privacy laws.
 YOU are responsible for avoiding collisions	You are responsible for avoiding collisions with other people or objects - including aircraft. Do not fly your unmanned aircraft in any way that could endanger people or property.	 Permission to use drones for paid work	If you intend to use an unmanned aircraft for any kind of commercial activity, you must get a 'Permission' from the Civil Aviation Authority, or you could face prosecution. For more details, visit www.caa.co.uk/uas

DISCLAIMER


Please read Instructions and Disclaimer carefully before operation. This product is not suitable for people under the age of 14. By using this product you hereby agree to this disclaimer. You agree that you are responsible for your own conduct while using this product and agree to never use this product in a way that infringes personal privacy, local laws and regulations. Extreme Fliers shall not be held liable for any damage or legal responsibilities and/or accidents resulting from the use of this product. Full guidance is available on www.microdrone.co.uk

MICRO DRONE 3.0: Flight in the Palm of Your Hand

The Micro Drone 3.0 is your personal Drone, bringing together sophisticated technology in a small size Device. Whether you're an expert pilot or first timer, it gives users a taste of features you would normally find in a larger system, which is safe, fun, easy to use, that anyone can fly.



HANDSET

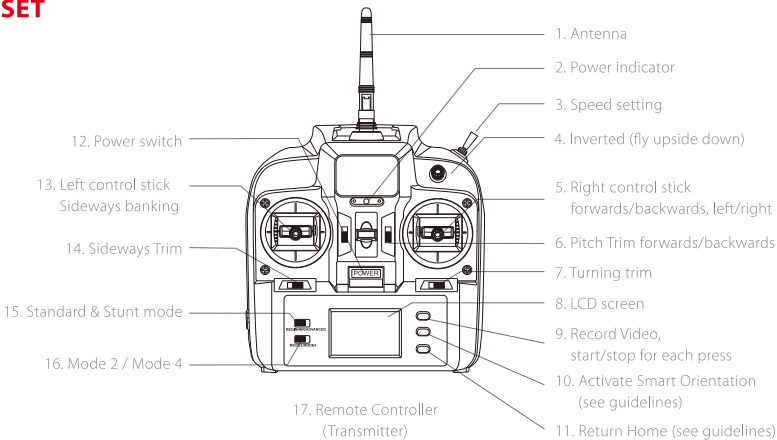 

Inverted flying requires Inverted Blades. Be sure to install these before attempting to Invert. Always set the Home Point when activating Return Home and Smart Orientation.

QUICK START GUIDE

1. DOWNLOAD THE APP

www.microdrone.co.uk/app

MICRO DRONE 3.0



Watch training videos



Watch training videos

2. CHECK / INSTALL BLADES

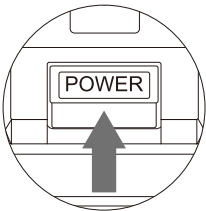 
Check you have the correct blades attached, Inverted flying Blades or Regular Blades (default)

- ⚠ Do not mix Inverted and Regular blades.
- Check the clockwise and counter clockwise blade has been correctly installed on the corresponding motor arm.


3. SET UP TRANSMITTER

Power on the handset
(4 x AA Batteries required).

Place the Drone on a flat, open ground with front facing away from you.



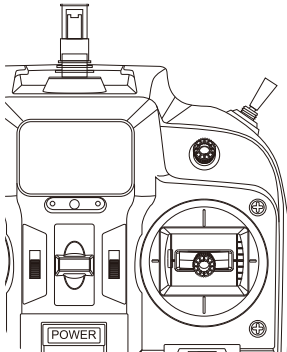 4. CHOOSE SPEED SETTING




Slow – ideal for beginners

Fast – highly responsive

⚠ Insane – suitable for expert users

5. POWER ON DRONE

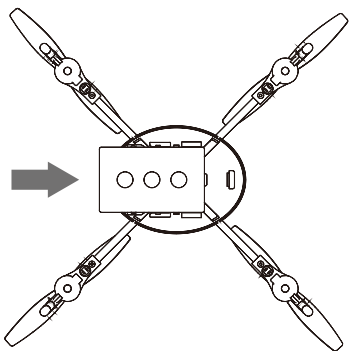 Insert the battery by sliding into position and attach the Camera with magnetic connection.



Do not force the battery

Pins may bend – carefully realign if necessary

6. SYNC THE DRONE

Wait until the blinking LEDs turn solid, then push the throttle stick up and down once.



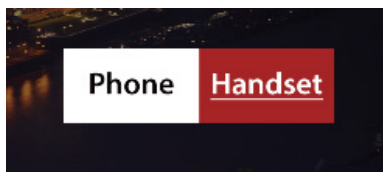 
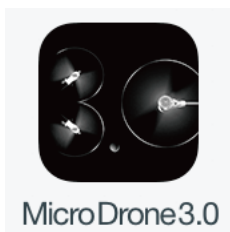 
Check blades spin freely by applying a little power.

7. LAUNCH THE APP

Search and connect to Micro Drone 3.0 WiFi

Enter the Fly Screen

Select Handset or Phone in App Settings



Place Smartphone into Flight Mode to prevent notifications and incoming calls causing disruptions

8. SET GYRO HOME POINT

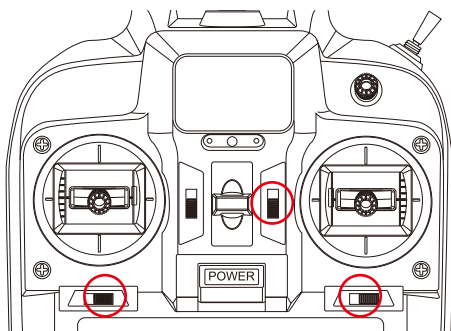 
Place Drone in the direction you intend to fly.

When Drone and Handset is Synced, hold both control sticks to the bottom right corner for 5 seconds.

 Essential for Smart Orientation and Return Home functionality.


9. SET TRIM SETTINGS

Trim settings should be set to the centre point for balanced flying, indicated by long beep.



10. TAKE OFF

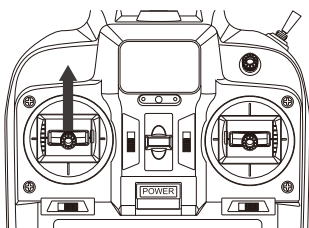 Push the left throttle stick up slowly to take off



 Gently toggle the left right control sticks to learn basic navigation

Keep low altitude and use wide open space for first flight

11. PHOTOS AND VIDEOS

Shoot photos or videos using the Micro Drone App, or Handset Function button.



Requires SD Card (Class 6 or above) to store footage on board the Drone.

To use Handset for activating Camera, connect the camera module using Wired Connection Port.

12. LANDING

To land, hover over a level ground and gently lower the throttle to descend.

After landing remove Camera and disconnect Battery.



Never approach or touch the Drone while blades are spinning.

Always cut the power using Controller/App first.

NOTES ON CHARGING

- Connect the USB charger to any USB plug such as a computer or wall charger.
 - Disconnect the battery from Micro Drone then connect to the USB charger jack, the red light on the charger will flash to indicate charging.
 - When charging is finished, the red light will turn solid green.
- Full charge takes about 60 mins.



1. Batteries should be removed from the handset before storing.

2. Always use new batteries in the handset to maintain a good connection.

Functions may not work when less than 50% capacity.

3. Never charge unattended.

OPERATING TIPS


- To ensure steady flight, set the 3 trimmers to fine tune the controls. The trim buttons are located aside to the left and right control sticks to set the turning, forward / backward pitch and side to side banking. Each time you click the trim button you will hear a beep, a long beep indicates that the trim is set to the centre. Note the trim buttons change depending on if it's in mode 2 or mode 4.
- Push the throttle up to around quarter or half way and Micro Drone will take off.
- We recommend removing the propeller guards when attaching the Camera or Camera/Gimbal.
- We do not recommend using the Inverted Blades with the Camera.

MODE 2 AND MODE 4: Explanation


Once you've learned to fly Micro Drone or any kind of Helicopter on a certain transmitter Mode, the chances are that you'll stick with that same mode throughout your flying days. Re-learning to fly on a different mode is essentially the same as starting from scratch, so we've made it with the two most common flight controls and outlined how these work for Micro Drone.

The transmitter modes for Micro Drone echo the ones for R/C Airplanes (in terms of turning). With that in mind we have designed Micro Drone with Mode 2 and Mode 4 industry standards making it user friendly for first time users or for Radio Control pilots accustomed to professional flying. The handset allows you to switch between Mode 2 and Mode 4. The slider is located at the bottom/left.






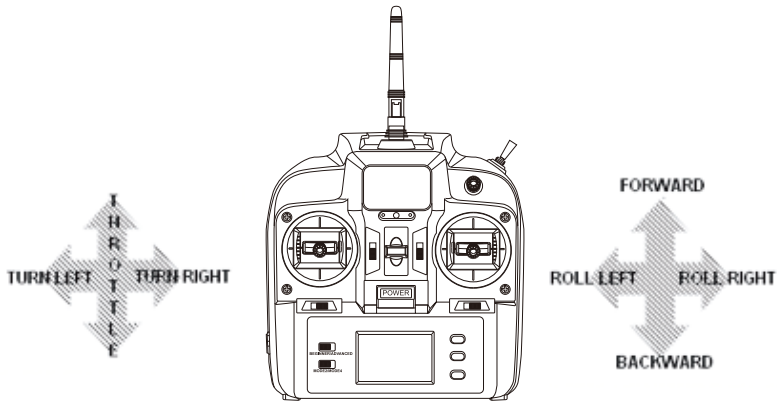 
Mode 2



Mode 4


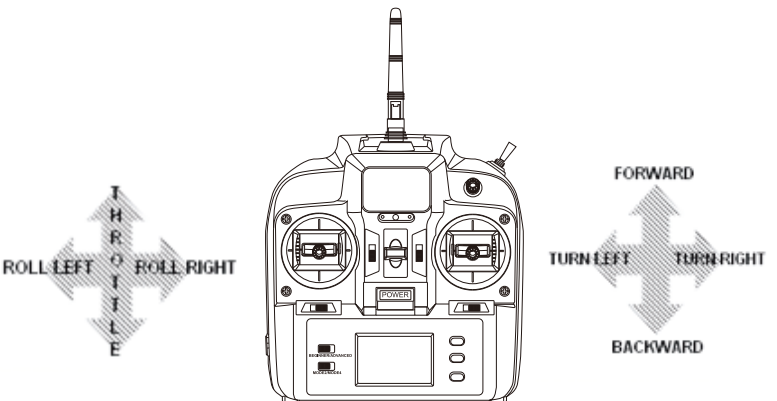 


FLIGHT OPERATIONS

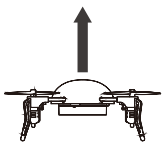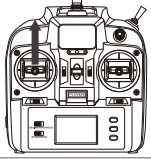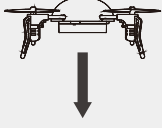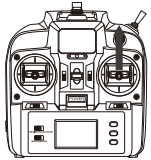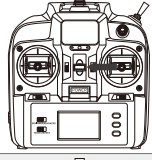      Direction	Drone	Mode 2	Mode 4	Notes
Up				For first flight power up to around 60% throttle then ease off to the hover position. Practice hovering at 1-2 metres
Down				Avoid landing on surfaces that are hard, dusty or wet. Do not land near people or objects that could collide or cause damage to the aircraft.
Forward				Push the navigation stick slowly to prevent the Drone from sudden movements.
Backward				Aim to fly in a straight line, cross wind may alter the course, toggle the roll stick to maintain trajectory if necessary.
Turn Left				Look at the White LED lights as reference for the Front of the Drone as you turn.
Turn Right				If the front of the Drone rotates to face you (nose in), the navigational controls will feel opposite to your position.
Banking (roll) to the Left				The roll stick controls the Drone's Left and Right tilt. When filming, avoid roll to capture quality level footage.
Banking (roll) to the Right				The further you push the control stick, the further the Drone will tilt, up to a 40 degree angle.

FULLY-FEATURED ACCOMPANYING APP

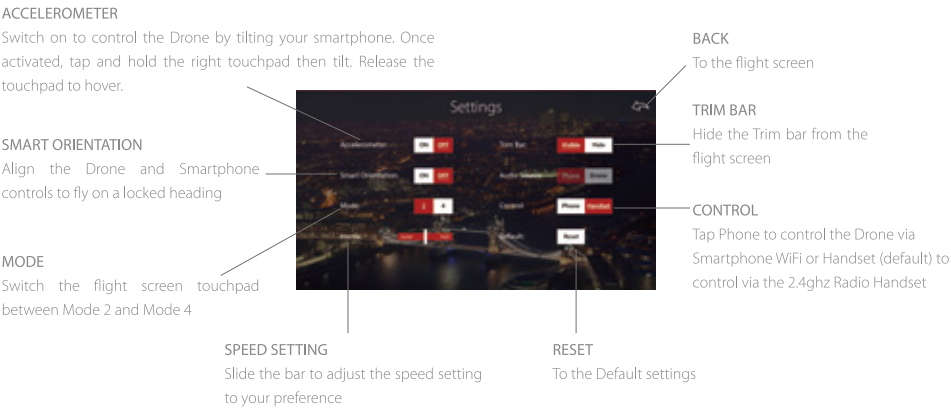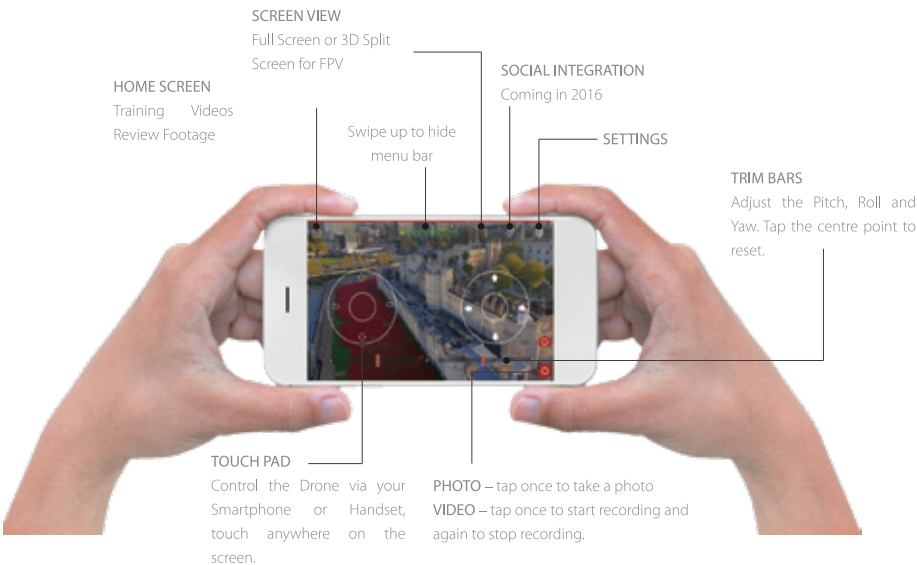  Micro Drone 3.0 has a companion App that is feature rich and intuitively designed. It can be used for First Person View via the live streaming video as well as control of the Drone and collecting, managing and sharing your videos.




Check periodically for new updates and features on the App Store and Google Play (iOS and Android)







iOS has some weird connection issue we couldn't figure out - when connecting iPhone to the Drone's WiFi, you might notice it connects, disconnects then reconnects again after 5 seconds (after that it's fine)

TRIMMER FUNCTIONS



 
Forward and Backwards Trim

Direction	Mode 2	Mode 4	Action Required
			If Micro Drone drifts forward, click the trim down until balanced.
			If Micro Drone drifts backward, click trim up until balanced.

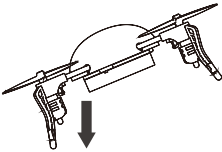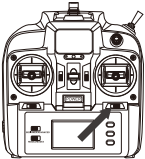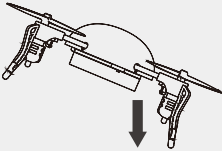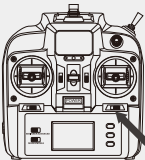    
Banking Trim (roll side to side)

			If Micro Drone drifts to the left, click the trim to the right until balanced.
			If Micro Drone drifts to the right, click the trim to the left until balanced.

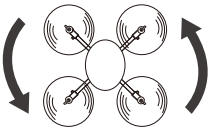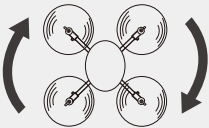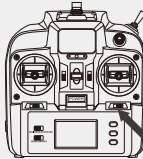   Turning Trim (rotating clockwise or counter-clockwise)

			If Micro Drone drifts to the left, click the trim to the right until balanced.
			If Micro Drone drifts to the right, click the trim to the left until balanced.


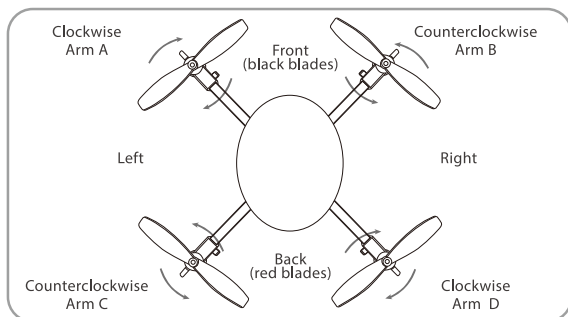 
MOTOR DIAGRAM



Ensure the Correct Blade is fitted to correct Clockwise or Counter-clockwise motor arm.

INVERTED FLYING

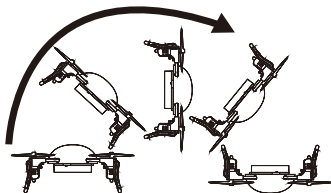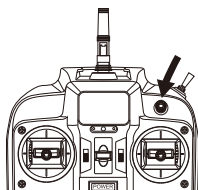  When fitting White and Grey Inverted blades: White A fits Arm A, White B fits Arm B, Grey B fits Arm C, Grey A fits Arm D.



To activate inverted mode in the air, flick the top right corner switch. The Drone will flip over and the motors will immediately go into reverse, to provide opposite thrust.

You can also place the Drone upside down to take off from the ground or by hand. Inverted mode will be activated automatically. Requires inverted blades (White/Grey) to use inverted mode. Blade must be correctly installed (White A / B at the front, Grey A / B at the back).



We recommend having adequate flying experience before using this feature.



Activating inverted with regular blades can result in serious damage to the Motors, Structure and Flight Board.



When the Drone is upside down, the controls will be reversed with the Blue LEDs becoming the Front.



Take care to ensure blades do not hit the ground, always land the Drone in the correct non-inverted orientation.



Activate inverted at least 3m from the ground with plenty of room.



Using Inverted blades reduces lifting capacity and flight time, use regular blades for high performance.

SMART ORIENTATION

This feature unlocks the orientation so that the navigation is not determined by the direction which the Drone is facing.

In standard mode with Smart Orientation off, the drone has a front and a back, determined by the Black / Red blades or White / Blue LEDs, so when you navigate forwards, it moves in the direction that the front is facing (ie if the black blades are facing you, it moves towards you). This can be difficult to make out when the Drone is a long distance away. Smart orientation helps with this.

Setting up Smart Orientation

When pairing the Drone, you must position the quadcopter such that its front points away from you. Once paired it's forward position will be fixed, every direction Forward/Backward/Left/Right will be set from this. Activate by pressing the button once, the red light will indicate it is on.

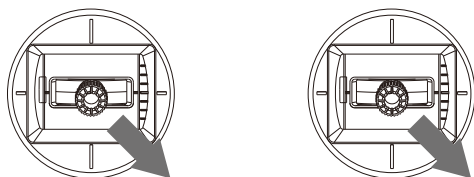 
When you take off with the Drone facing forward from you, the micro-controller continuously adjusts the navigation so that even when you turn the Drone 90 degrees to the left/right, it will still go forward/backward on the fixed axis you set at the beginning.

Smart orientation is useful for learning to fly the Drone, sending it out over long distance and more convenient for shooting video (as the Drone moves in fixed lines, allowing you to focus on the video and shoot panning shots while rotating the Drone at the same time).

RESET THE GYROS

In the event of the Gyro losing orientation, unstable flight, or drifting, the Gyros may need resetting.

Together: push the left control stick to the bottom right corner and push the right stick to the bottom right corner. Hold for 5 seconds and the Drone's LEDs will flash rapidly to indicate recalibration.




RETURN HOME

Users are advised to familiarise themselves with this feature before use. Unlike a GPS return home system, this uses a programmed method that memorises it's start heading and is designed to help pilots return the Drone on a straight axis when you have lost control.

For this to work correctly, when pairing the Drone, you must position the Drone on the ground such that its front points away from you on the line you wish it to return.

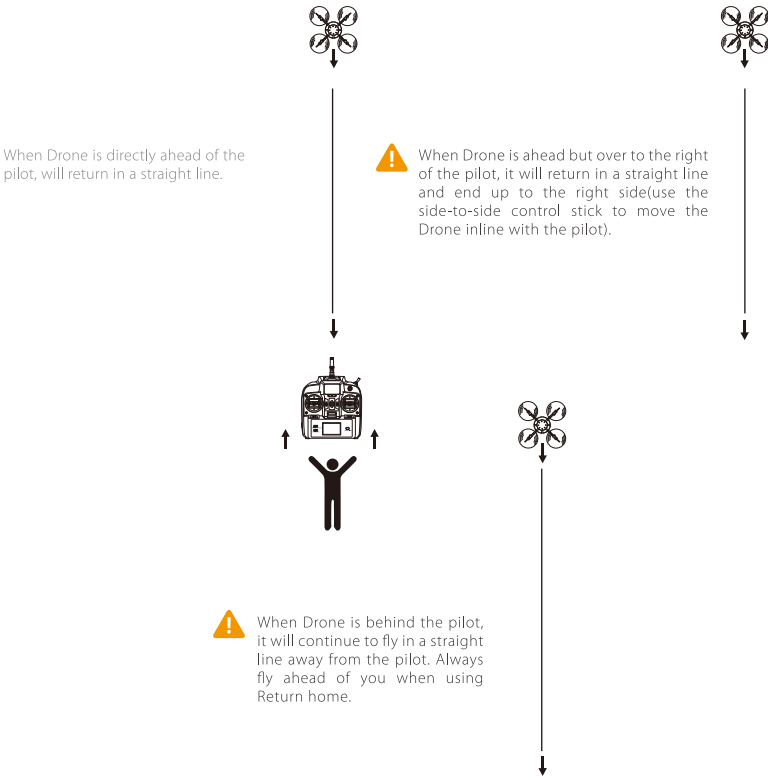 This function is based on the assumption that the user is flying the Drone in front of them. Hold down the Return home button and the Drone will fly back towards the pilot in a straight line on a fixed axis, let go of the button and the Drone will stop returning.











- ⚠ Use the roll stick depending on where the Drone is located in relation to you. The altitude stick must continue to be controlled while using return home. Select a faster Return speed by selecting one of the Speed Settings.

MID AIR FLIPS

Micro Drone can perform mid-air flips with a specially designed, preprogrammed algorithm. To activate this, it must be switched into Stunt Mode, slide to the right.

WARNING: in Stunt Mode, moving the control sticks will perform aggressive maneuvers and could cause Micro Drone to crash if not controlled carefully. If doing for the first time, we suggest familiarising yourself with the controls before attempting this. Hover Micro Drone at least 3 metres from the ground then push the control sticks in the direction you want to flip. Switch back in to Standard Mode for regular flying.

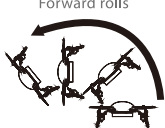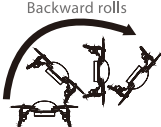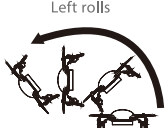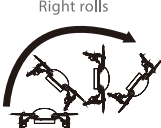        Aggressive Maneuvers and Flips

Forward rolls			Push the throttle up then push the right stick up to roll forward. Gently ease off to recover to the hover position.
Backward rolls			Push the throttle up then push the right stick down to roll backwards. Gently ease off to recover to the hover position.
Left rolls			Push the throttle up then push the banking stick left to roll left. Gently ease off to recover to the hover position.
Right rolls			Push the throttle up then push the banking stick right to roll right. Gently ease off to recover to the hover position.

TROUBLESHOOTING / FAQ's

 Inspect the Drone before every flight and replace any parts that are damaged. Change any blades that are bent, chipped or broken.

See our troubleshooting page on www.microdrone.co.uk/faq

GET INVOLVED

Drone technology is developing at a rapid pace and we encourage you to get involved as we continue building Micro Drone and this exciting hobby.

Find out about upcoming events, such as Battle of the Drones, Maker Events, First Person View racing meetups and other activities. Details and information will be posted on the Extreme Fliers Facebook page.

(DE) Micro Drone 3.0 Bedienungsanleitung und Anleitung

HAFTUNGSAUSSCHLUSS

Vor jedem Flug überprüfen Sie die Drohne bitte auf Schäden und tauschen ggfs. die defekten Teile aus. Dieses Produkt ist nicht geeignet für Personen unter 14 Jahren. Mit der Verwendung dieses Produkts stimmen Sie dieser Erklärung zu und dass Sie während der Nutzung der Drohne für Ihr eigenes Verhalten verantwortlich sind. Sie werden dieses Produkt niemals in einer Weise nutzen, die die persönliche Privatsphäre anderer verletzt oder gegen lokale Gesetze und Vorschriften verstößt. Extreme Fliers haftet nicht für Schäden oder übernimmt rechtliche Verantwortung für Unfälle, die aus der Verwendung dieses Produkts entstehen. Sie tragen dafür Sorge, dass Kollisionen mit anderen Personen, Flugzeugen oder Gegenständen vermieden werden. Das Fliegen in Flughafennähe ist gesetzlich geregelt. Bitte informieren Sie sich vollumfänglich bei den zuständigen Luftfahrt-Behörden Ihres (Bundes-)Landes. Ausführliche Anleitung finden Sie auf www.microdrone.co.uk

(PAGE 2)

Bild 1 Drohne

(1) Abdeckung/PCB. (2) Motor Arm A, (3). Motor Arm B, (4). Motor Arm C (5). Motor Arm D, (6). Propeller: Schwarz / Weiß A (7). Propeller: Schwarz / Weiß B (8). Propeller: Rot / Grau A (9). Propeller: Rot / Grau B (10). Batterie (11). Propeller Schutz (optional) (12). Landebeine (13). Gummispitzen (14). Weiße LED (vorne), (15) Blaue LED (Rückseite) (16). Magnet Verbinder (17). Micro Gimbal (kommt 2016) (18). Kamera-Modul (19). Kamera-Antenne (20). Schwenkbare Linse (21). Kabelverbindung Port (22). SD-Karten-Slot (optional)

Bild 2 Controller

(1). Antenne (2). Power-Anzeige (3). Geschwindigkeitseinstellung (4). Kopf-Über-Flug(Invers) (5). Rechter Steuerknüppel, vorwärts / rückwärts, links / rechts (6). Pitch trimmen vorwärts / rückwärts, seitlich (7). zur Seite drehen, Zähler gegen den Uhrzeigersinn / im Uhrzeigersinn (8). LCD-Bildschirm (9). Aufzeichnen von Video, Start / Stopp für jedes Drücken (10). Aktivieren Sie die „Smart Orientierung“ (siehe Richtlinien) (11). Zurück nach Hause „Return Home“ (siehe Richtlinien) (12). An/Aus (13). Linker Steuerknüppel, seitwärts Banking, drosseln nach oben / unten (14). seitwärts trimmen (15). Standard & Stunt-Modus (16). Mode 2 / Mode 4 (17). Fernbedienung (Sender)

GARANTIE

Die Micro Drone Garantie gilt nicht für Mängel aufgrund von Schäden, die durch eine Kollision verursacht werden oder für Mängel aufgrund einer nicht-konformen Nutzung der Drohne. Schrittweise Verlustleistung des Akkus im Laufe der Zeit stellt keinen Mangel dar. Ersatzteile sind von www.microdrone.co.uk erhältlich. Extreme Fliers garantiert, dass das erworbene Produkt zum Kaufdatum frei von Materialfehlern ist. Die Garantie beträgt für EU Kunden ab Kaufdatum 12 Monate, die Gewährleistung beträgt gesamt 24 Monate und gilt nur für Schäden die zum Zeitpunkt des Kaufs bestanden.

SCHNELLSTARTANLEITUNG

(1). Laden Sie die App. (2) Überprüfen/Anbringen der Propeller gem. Anleitung. (3). Controller startklar machen. (4). Wählen Sie Ihre bevorzugte Geschwindigkeit. (5). Batterie an der Drohne anschließen. (6). Synchronisierung mit der Drohne. (7). Verbinden Sie Ihr Smartphone mit dem WiFi-Netzwerk der Kamera und starten Sie die App. (8). Setzen Sie die HOME-Position (9). Setzen Sie die Trimmung. (10). Abheben/Starten (11). Fotos und Videos mit der App (12). Langsamer Abstieg für eine kontrollierte Landung (13). Laden Sie den Akku vor dem Gebrauch, NIE unbeaufsichtigt Laden

Siehe www.microdrone.co.uk für alle Hinweise und Betriebshinweise

Hiermit erklärt (Extreme fliers), dass sich das Gerät (Micro Drone 3.0) in Übereinstimmung mit den grundlegenden Anforderungen und den übrigen einschlägigen Bestimmungen der Richtlinie 199/5/EG befindet

Die Konformitätserklärung kann unter folgender Adresse gefunden werden: www.microdrone.co.uk