

SOUNDLOGIC™ XT

PULSE

LED LIGHT-UP BLUETOOTH KARAOKE SPEAKER



Product code: 34692

INSTRUCTION MANUAL

PLEASE READ ALL INSTRUCTIONS CAREFULLY

AND RETAIN FOR FUTURE USE

Getting Started

- Remove the speaker from the box.
- Please retain all packaging until you have checked and counted all the parts and the contents against the Package Contents list.

Package Contents

- LED Light-Up Bluetooth Karaoke Speaker
- Carrying Belt
- USB Charging Cable
- 3.5mm Aux Cable
- Instruction Manual


Key Features

- LED Light-Up Bluetooth Karaoke Speaker
- Connects to Bluetooth enabled devices; stream music wirelessly
- Color changing LED lights
- Multi-function: Bluetooth, FM radio, Micro-SD card slot & USB slot & Aux-jack & Mic input
- Powerful speakers with loud sound and bass
- Portable & suitable for all occasions
- Rechargeable battery
- Support TWS function

SAFETY INSTRUCTIONS

- Keep the unit away from heat sources, direct sunlight, humidity, water and any other liquids.
- Do not operate the unit if it has been exposed to water, moisture or any other liquids to prevent against electric shock, explosion and/or injury to yourself and damage to the speaker.
- Do not use the unit if it has been dropped or damaged in any way.
- Repairs to electrical equipment should only be performed by a qualified electrician. Improper repairs may place the user at serious risk.
- Do not use the unit with wet hands.
- Do not put objects into any of the openings.
- Keep the unit free from dust, lint etc.
- Do not use this unit for anything other than its intended use.
- Keep the unit out of reach of children.
- This unit is not a toy.

Description of Parts

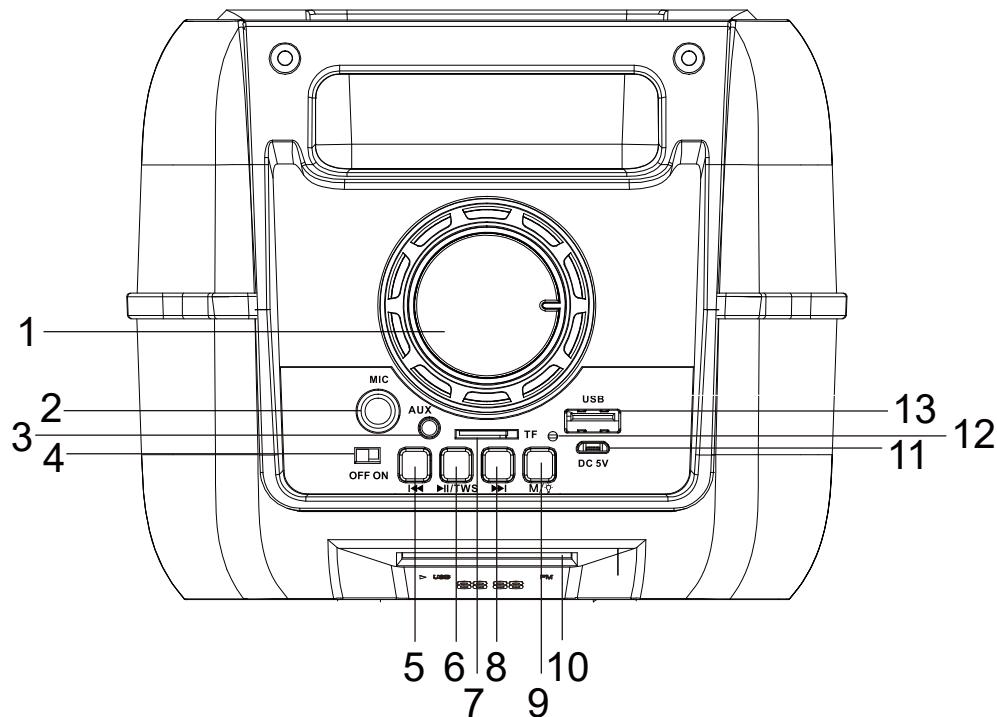

| Number | Item | Function |
|--------|-------------------------|--|
| 1 | VOLUME KNOB | Increases/Decrease the speaker volume |
| 2 | MIC INPUT | Microphone input |
| 3 | AUX IN | External audio input |
| 4 | POWER ON/OFF SWITCH | Turn the speaker On or Off |
| 5 | PREVIOUS TRACK/STATION | Bluetooth/USB/TF card mode: Skip to previous track, FM radio mode: Skip to the previous already saved radio station |
| 6 | PLAY/PAUSE/SCAN/TWS | PLAY/PAUSE/scan FM radio stations (only in FM radio mode)/TWS pairing and unpairing |
| 7 | MICRO SD (TF) CARD SLOT | Micro SD (TF) card input |
| 8 | NEXT TRACK/STATION | Skip to the next track in Bluetooth/USD/TF card mode, skip to the next radio station in FM radio |
| 9 | MODE/LIGHT BUTTON | Long press to change the mode between Bluetooth / FM radio / AUX / USB / TF, Short press to change the color changing LED light pattern (Not function in FM mode) |
| 10 | LED DISPLAY | Indicate the present function |
| 11 | DC 5V IN | Charging port |
| 12 | CHARGING INDICATOR | Indicate the charging status |
| 13 | USB SLOT | USB input (Flash Drive) |

INSTRUCTIONS FOR USE

Charging the Speaker

For best results, fully charge the unit before use.

1. Connect the USB charging cord (included) to the DC 5V charging port of the speaker and insert the other end into a port on your computer or similar power source.
2. Red LED turns on indicating that the battery is being charged. Once it is fully charged, the Red LED will turn off. It will take 4 - 6 hours to fully charge the battery.

Turn On/Off the Speaker

Slide the POWER ON/OFF SWITCH to ON position to turn on the unit with color changing LED lights, or OFF position to turn off the unit.

Pairing your device with the Speaker –

Your **Bluetooth Party Speaker** can stream wireless audio from any Bluetooth enabled device within the range of up to 33 feet. Simply follow the below steps.

1. Rotate the volume knob to your favorite sound level.
2. Turn ON the speaker.
3. LED display will show 'HIFI' and then 'bt' and indication tone would be heard. The speaker is now in pairing mode.
4. Turn on the Bluetooth on your Mobile Phone or Tablet or Computer.
5. It will search for available Bluetooth devices.
6. Powerhouse Bluetooth Wireless Speaker would appear as "PULSE", in the list of searched devices. Select it from the available list of devices.
7. You might be prompted with "Pair with PULSE?" message on your source device, with "Cancel" and "OK" options. Please click "OK".
8. If required, enter the password '0000' to confirm pairing.
9. Once paired successfully, another indication tone would be heard.
10. If you fail to pair it within a few seconds or you want to pair it with a new device, please repeat above steps.

Play your favorite song on the Bluetooth source device and music would now stream through the speaker.

Listening to Wireless Music

Please ensure that your device (iPhone, Tablet or Other Smart Phone) is paired with the speaker to stream wireless music. Once it is paired, play music from your device.

| Function | Operation | Button |
|-------------------------------|---------------|--|
| Increase / Decrease Volume | Playing music | Turn VOLUME KNOB to adjust the volume to your desired level, or Adjust volume from the source device (in Bluetooth mode only). |
| Pause | Playing music | Short press PLAY/PAUSE button once to pause music |
| Play | Pause | Short press PLAY/PAUSE button once to resume music |
| Previous track | Playing music | Short press the PREVIOUS TRACK/STATION button to the previous track |
| Next track | Playing music | Short press the NEXT TRACK/STATION button to the next track |

TWS pairing use (if you own 2 LED Light-Up Bluetooth Karaoke Speaker)

- Make sure both speakers are “ON” and not paired with any Bluetooth device. An indication tone would be heard from each speaker.
- Choose either one as your master speaker.
- Short press the TWS button twice on master unit.
- Both units will wirelessly connect with each other, and you would hear an indication tone after they pair together successfully.
- Activate the Bluetooth function on your source device (Mobile Phone, Tablet etc). Please refer to manufacturer’s instructions for instructions on enabling Bluetooth on your device.
- Search for available Bluetooth devices and you would find “PULSE” – Pair it with this device.
- You might be prompted with “Pair with PULSE?” message on your source device, with “Cancel” and “OK” options. Please click “OK”.
- If required, enter the password “0000” to pair with the device.
- Once paired successfully, another indication tone would be heard.
- You can now stream wireless music on your speaker through your source device.

Note: TWS stands for True Wireless. If you want to separate 2 speakers again for individual use, short press the TWS button twice on any one speaker.

Listening to Music using USB / Micro SD (TF) Card Slot

1. Turn on the speaker.
2. Insert USB flash drive into the USB slot or Micro SD (TF) card into the Micro SD (TF) card slot accordingly. An indication tone would be heard, LED display will show 'USb' or 'tf' and then 'USB' or 'TF' and MP3 with music would play automatically with LED display showing track number & then music time.
3. Short press the NEXT TRACK/STATION button or PREVIOUS TRACK/STATION button to move forward or backward on your playlist.
4. Short press PLAY/PAUSE/SCAN button to Play or Pause a track.

Note: USB / Micro SD (TF) Card: Supports up to 16GB; Supports music file format: MP3, WAV, WMA, APE, FLAC. USB Flash Drive or Micro SD (TF) Card not included.

Listening to Music using AUX-In

1. Turn on the speaker.
2. Plug the 3.5 mm Aux-in cable (included) into the AUX-In port of the speaker, an indication tone would be heard, and LED display will show 'LINE'.
3. Plug the other end of the cable to the audio device (such as computer / tablet / MP3 Player etc.).
4. Select your favorite song at the source device to play.

(Note: While using AUX-In function, except volume function, all functions such as playing next/previous track can be controlled only through your source device).

Listening FM radio

1. Turn on the speaker.
2. Long press the MODE button each time until it reaches FM radio mode, LED display will show 'Lod' and then a FM radio frequency with sound.
3. Long press the SCAN button for searching and recording all radio stations within frequency range 87.5-108MHz.
4. Short press the NEXT TRACK/STATION button or PREVIOUS TRACK/STATION button for listening next or previous already saved radio station.

Tips!!

1. Long press the MODE button to switch different functions of the speaker. The functions are – Bluetooth / FM radio / AUX / USB-Micro SD (TF).
(Note: This switching function cannot work in TWS pairing use.)
2. When the speaker is not in use, turn OFF the device to save the battery power.
3. Do not overcharge the speaker.

Color Changing LED light Mode (Not function in FM mode, and LEDs are not replaceable)

1. Turn on the speaker.
2. Short press the “LIGHT” button each time to change 4 different color changing LED light patterns (including off light mode).

Using the Microphone

1. Turn on the speaker.
2. Insert the plug of the Microphone (not included) into the MIC INPUT of the speaker.
3. Turn on the Microphone, and speak for microphone operation or sing for Karaoke operation with fix volume.

Do's and Don'ts

- Do not play music at excessive levels as damage to hearing and/or equipment may result.
- Do not use outdoors in wet or in damp surroundings.

Care and maintenance

Clean the unit with a soft, dry cloth. Never use chemicals or hard abrasives.

Keep this unit away from wet or damp surroundings.

Product Specifications:

Bluetooth version : 5.0

Unit size : 6.8" (L) x 5.9" (D) x 14.8" (H)

Unit weight : ~3.08 lbs

Power input : DC 5V

Charging time : 4 - 6 hours

Playtime : 1.5 - 2 hours (max. volume)

Bluetooth range : 33 feet

FM frequency range : 87.5-108MHz (Only receive)

Built-In Rechargeable Lithium Battery: 3.7V 2400mAh

USB / Micro SD (TF) Card: Supports up to 16GB, supports music file format: MP3, WAV, WMA, APE, FLAC

(Note: Battery life & charging time may vary based on usage, types of devices connected & wireless distance.)

TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|-------------------------|---|---|
| Low sound level | Source (Tablet, Mobile Phone, Laptop, etc.) volume too low. Battery dead | Adjust source volume. Charge Battery. |
| No sound | Volume in minimum position. The connected device is not in play mode. Input source incorrect. | Turn the VOLUME knob to increase the volume. Play the music in the connected device and make sure the volume level is in high level. Press the MODE button to set the input source to the desired function. |
| Sound distortion | Volume level too high | Turn the VOLUME knob to decrease the volume. |

FCC Instructions

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

NOTE: This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the product does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the product and receiver.
- Connect the product into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.