

iKar digital Technology Limited

Important

The instructions of this manual are for reference about the product. There may be differences due to updates.

NOTE : Charge the battery before first use for 4 hours.

"The operation of this equipment is subject to the following two conditions: (1) it is possible that this equipment or device may not cause harmful interference, and (2) this device or device must accept any interference, including interference that may cause undesired operation .

CAUTIONS


- Do not use or store the equipment near wet places. May cause malfunction or shock hazard.

HIGHLIGHTS

- The mini Bluetooth speaker can play your favorite music wirelessly.
- It has in-use blue indicator LED, and volume control, play and button for searching Bluetooth devices.
- What is more, includes an auxiliary input to connect other devices without Bluetooth function, and micro SD port.
- Compact size.
- Wireless Technology.
- Built-in battery.

CONTROLS

1. Micro SD Card Slot	6. On / off switch
2. Microphone	7. Answer/end/play/pause
3. LED indicator	8. Backward/increase volume
4. Volume rotary control.	9. M button: Bluetooth, Micro SD, FM radio or AUX.
5. Mini USB power input.	10. Forward / decrease volume

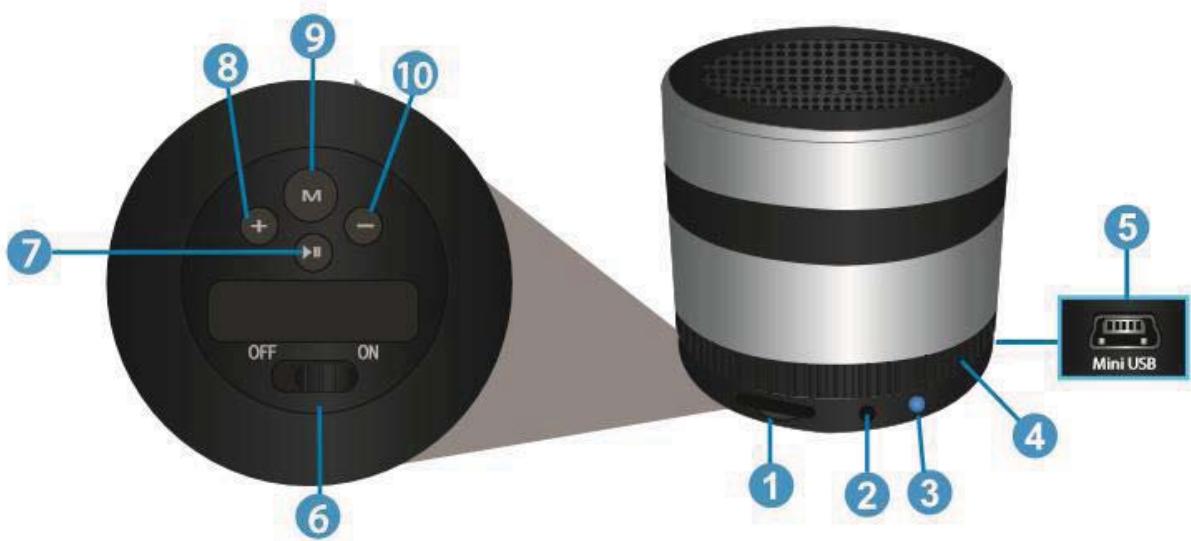

Charging the battery

1. Connect the USB cable to the speaker and a USB port on your computer or a wall outlet using an adapter (not included). The LED will light on while charging.

iKar digital Technology Limited



Pairing

1. Turn on the speaker, a tone will sound and the LED will flash in blue. The speaker is ready to be paired on.



2. Activate the Bluetooth feature on your device, the speaker will appear as "BOC-841", select it. Once connected, the speaker will emit a sound and blue LED stay on.

3. Each time you turn off the speaker, it will be linked to the last device you used and automatically connect to it unless you have another device connected.

In case your device does not automatically connect you will have to connect it from your device. If you want to pair a new device, disconnect the current device and repeat steps 1 and 2.

Bluetooth music playback mode

1. Once connected to your device, press the **▶||** to start listening music or pause playback.
2. To forward or backward press (-) and (+).
3. To raise and lower volume, hold the button (-) and (+)

It can also be done with the rotary volume control, turn knob clockwise to increase, do the opposite to decrease (controls view side).



Micro SD card

1. Insert a micro SD card with MP3 music on the slot indicated.
2. Click the M button until you select the micro SD card option.

FM radio

⚠ The included cable works as an antenna radio signal, keep it connected.

1. Click the M button until you select the FM radio option.
2. To change stations use the + and - buttons.

iKar digital Technology Limited

AUX cable connection

1. Use the M button to select the AUX option
2. Connect the micro USB cable to the speaker and AUX to your device.

⚠ You can also connect your portable player via the 3.5 mm cable (not included). When you use this function, you must control the playback from the device.

⚠ Consider that only one mode (Bluetooth, AUX, Micro SD card, FM radio) can be used at the same time.

Hands free:

To make a phone call from the BOC-841, you must have a mobile phone paired with the speaker. If you receive a call when your device is playing music, the speaker will change to hands-free mode function. You must only press the answer button **¶** to receive it and begin to speak. To end the call, press the same button **¶**.

After finishing the call, the system will return to the music playback function.

Press **¶** twice to redial last number.

-The speaker is compatible with the majority of mobile devices; however, it may be some functions incompatible with some specific models.

-To avoid signal loss, do not exceed 10 m between the devices. This distance depends also on the device that is connecting to the BOC-841.

Specification

Input: 5 V --- 500 mA (x USB)

Sensitivity: 80 dB +/- 2 dB

Power output: 3 W rms

Bluetooth version: 3.0

Frequency response: 100 Hz- 18 kHz

Battery: 3.7 V ---

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.