

User Manual

**Remote Control
Model No.: 9164-6001**

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

OPERATION

TURN ON AND SPEED SETTINGS

1. Press the ON/Speed button on the remote control to power on the device. The device will be running at low speed.
2. Press the ON/Speed button again to change the speed, and selected speed-high, medium, or low.

SET THE TIMER

A timer allows you to operate the device set the length of time (1, 2, 4 hours and clear the timer) that the device will operate before shutting off automatically. The device can be set the timer with the remote control only.

1. Press the TIME button on the remote control to start the timer. The cycle is 1 hour, 2 hours, 4 hours and clear the timer.
2. Press the TIME button on the remote control to set the timer.

MAINTENANCE

To replace the batteries in the remote control:

1. Open the remote control battery compartment
2. Replace used batteries with 2 AAA batteries
3. Close battery compartment