

# 14 x 14 - INSTANT CANOPY WITH LED LIGHTING SYSTEM




## Before you begin

Read all instructions thoroughly before beginning set up.


- Select a level site clear of rocks, branches, and other hard or sharp objects, to set up your shelter.

## WARNING: Keep clear of overhead power lines.


- Do not set up your shelter under trees because of potential lightning strikes or falling tree limbs in inclement weather.
- Secure with all stakes and guylines provided to prevent property damage or personal injury.
- Two people can easily setup this shelter in minutes.

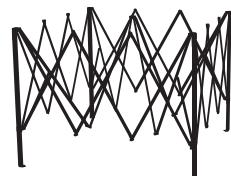

 (1) Frame

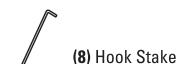

(8) Hook Stakes

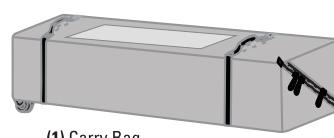

(1) Carry Bag



(1) Canopy



(1) Vent Cap



(1) Remote

STITCH LINE

## TO OPERATE LIGHT

Firstly, add 4-D batteries to compartment on canopy frame and 1 Lithium CR2032H battery to the remote.

### DIRECT FROM HUB

- Press button for High, Medium, and Low settings

### BY REMOTE

- Press button for High, Medium, and Low settings

## SET UP

1

### PARTIALLY EXTEND FRAME


Use 2 people, pulling from opposite corners.



3

### SECURE VENT CAP

Slipping webbed pockets over plastic hooks.

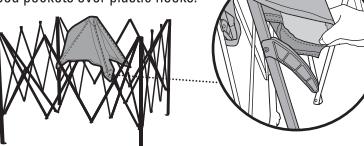

5

### FULLY EXTEND FRAME


Use two people pulling from opposite corners.



7

### ATTACH CANOPY TO FRAME

Placing metal canopy rods into corner pockets.

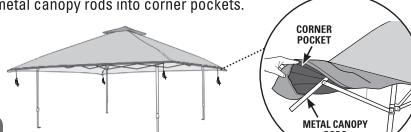

9

### EXTEND LEG POLES TO DESIRED HEIGHT

3-Stage Height Adjustment  
 HIGHEST  
 MEDIUM  
 LOWER



2


### DRAPE VENT CAP OVER HUB



4

### DRAPE CANOPY OVER FRAME


Making sure the canopy is tucked under the 4 corners of the vent cap.

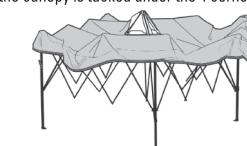

6

### LOCK CORNER BRACKETS

Press up on support brackets until blue button locks in place.

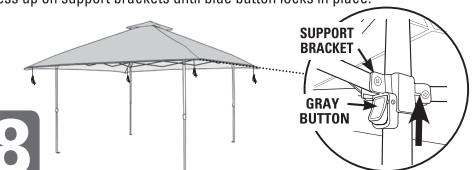

8

### SECURE CANOPY TO FRAME WITH HOOK AND LOOP FASTENERS


Making sure fabric pads are under supports.



10

### STAKE SHELTER FEET AND GUYLINES AT 45° ANGLE


Adjust guylines as needed using sliders.

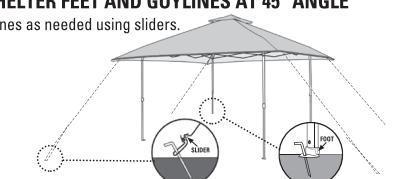

## TEAR DOWN


1

REMOVE STAKES AND LOWER LEG POLES

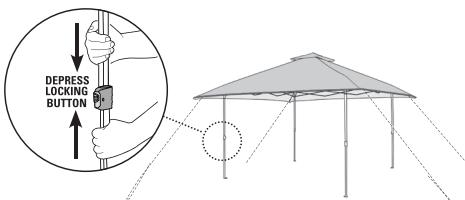


2

REMOVE CANOPY FROM FRAME

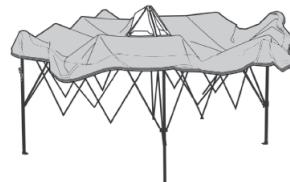


3

REMOVE VENT CAP FROM FRAME

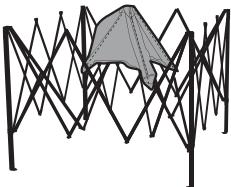

4

FOLD & STORE CANOPY, VENT CAP & FRAME

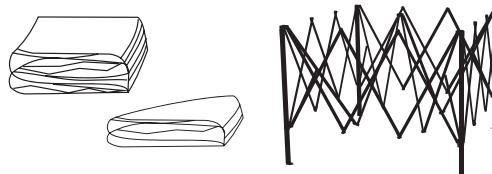

### Storing the Shelter

- Remove stakes and place in their storage bag.
- All stakes must be placed into stake bag before being placed into main carry bag to prevent damage to the tent fabric.
- Store in a clean, dry area.

### IMPORTANT FACTS:

- Never store shelter, even for a short period of time, without drying it thoroughly and brushing off caked dirt. Do not pack stakes inside your shelter. Use a separate storage bag.
- STAKES SHOULD BE REMOVED BY PULLING ON THE STAKE ITSELF. NEVER PULL ON THE SHELTER TO REMOVE STAKE.
- Do not leave your shelter set-up for weeks at a time. Be aware that exposure to ultraviolet rays from the sun can seriously damage material and/or cause it to become discolored.

### WARNING: Keep all flame and heat sources away from this shelter fabric.

This shelter meets the flammability requirements of CPAI-84. The fabric may burn if left in continuous contact with any flame source. The application of any foreign substance to the fabric may render the flame-resistant properties ineffective.



### WARNING: KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS SHELTER FABRIC

This shelter is made of flame-resistant fabric which meets CPAI-84 specifications. **IT IS NOT FIRE-PROOF**. The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the product fabric may render the flame-resistant properties ineffective.

**DO NOT** use fuel burning devices inside or near shelter materials.

**DO NOT** permit children to light matches, operate burning appliances, or handle any flame sources in or near the shelter.

- Do not smoke, use matches, candles or open flames of any kind in or near the shelter.
- Do not refuel lanterns, stoves or heaters inside shelter.
- Do not cook inside shelter.
- Do not store flammable liquids inside shelter.



### 6 Month Limited Warranty

Campvalley (Xiamen) Co., Ltd. warrants for a period of six months from the original date of purchase, this product against any defects in materials or workmanship. At its discretion, Campvalley may provide replacement parts to original purchaser. Original receipt or proof of purchase as well as proof of defect is required. Campvalley will not be responsible for shipping costs incurred outside the continental USA. Warranty is valid for the original purchaser six months from the date of purchase and is not transferable. This Warranty does not cover any product purchased through non-authorized dealers and/or online auction websites.

#### This Warranty Does Not Cover This

This 6 Month Limited Warranty does NOT cover normal wear and tear, abuse or misuse of this product including damage from inclement weather conditions, such as wind, rain, or hail. In case of inclement weather remove all valuables and persons and seek appropriate shelter. **Under no circumstances will Campvalley (Xiamen) Co., Ltd be liable or responsible for any incidental or consequential damages.**

This product is designed and intended for Recreational use only. Prolonged exposure to UV rays will cause any fabric to fade and deteriorate and is NOT covered by this 6 Month Limited Warranty.

All replacement products or parts will assume the remaining warranty of the original product. This warranty gives you specific legal rights. You may also have other rights which vary from state to state.

#### To Obtain Warranty Service

Call Toll Free 1-888-774-5840 for warranty service, repair parts, or product questions. Mon-Fri, 8:00 a.m. – 5:00 p.m. Central Time.

#### NOTICE: DO NOT RETURN PRODUCT TO RETAIL STORE.

Campvalley (Xiamen) Co., Ltd.  
No.18th, West Road 3, Jinyuan, Jimei District,  
Xiamen, Fujian 361022 (China)

Made in China • Printed in China

### REPAIR PARTS LIST

Part Number	Description
90850	Joint Endcap
90851	Scissor Joint
90852	Apex Support Pole
90853	Scissor Pole A
90854	Scissor Pole B
90855	Upper Roof Pole
90856	Lower Roof Pole
90857	Corner Button
90858	Roof Joint
90859	Gazebo Leg
90860	Wheeled Carry Bag
90861	Canopy Top (2 Parts)
90862	Awning Corner Pole (28")
90863	Awning Corner Pole (20")
90864	Vent Cap Hook (4x)
90865	Battery
90866	LED Light Tube
90867	Remote Controller

STITCH LINE

# FCC ID User Manual Warning

Model: 18B.09.17.393

FCC ID: 2AHRWLED003

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

"This device complies with FCC radiation exposure limits set forth for general population (uncontrolled exposure). This device must not be collocated or operating in conjunction with any other antenna or transmitter."


This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions : (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

# LED LIGHT INSTRUCTION SHEET

One button on battery box(show in picture 1).when press button,state of lamp change according to picture 2.

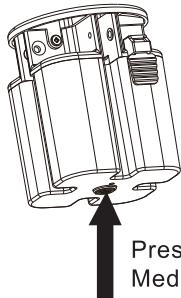

Picture 1

 


Picture 2


Press button for High,  
Medium and Low settings

## BATTERIES REPLACEMENT:


1. Press button to release the battery compartment.
2. Insert 4D batteries with correct polarity as shown inside the compartment.
3. Close the lighting compartment by sliding the cover over the base until it locks securely into place.

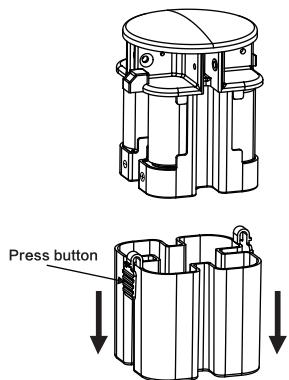

1

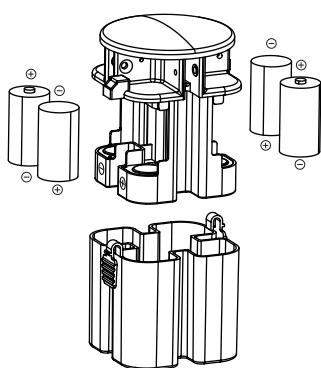

2

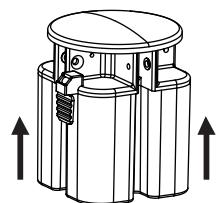

3


## WARNING

1. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
2. Only batteries of the same or equivalent type as those recommended are to be used.
3. Do not mix new and old batteries.
4. Do not dispose of batteries in fire, batteries may explode or leak.
5. Exhausted batteries are to be removed from the light. Remove batteries if light is not being used for a prolonged period of time.


MADE IN CHINA

# REMOTE CONTROLLER INSTRUCTION SHEET

One button on battery box(show in picture 1).when press button,state of lamp change according to picture 2.

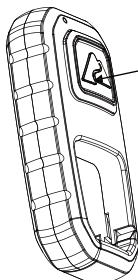


Picture 1

 


Picture 2

## BATTERIES REPLACEMENT:

Rotate battery cover by 90 degrees counterclockwise

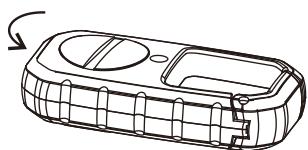


Open battery cover,take out old battery

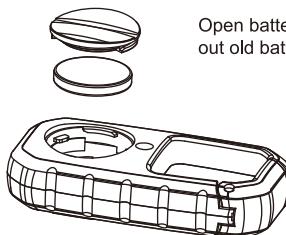

Put new battery into remote controller,close battery cover



rotate battery cover by 90 degrees clockwise lock battery cover

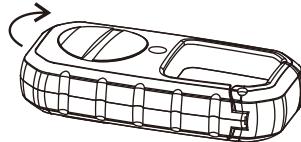

## WARNING

1. Do not mix alkaline,standard(carbon-zinc),or rechargeable(nickel-cadmium)batteries.
2. Only batteries of the same or equivalent type as those recommended are to be used.
3. Do not mix new and old batteries.
4. Do not dispose of batteries in fire,batteries may explode or leak.
5. Exhausted batteries are to be removed from the light. Remove batteries if light is not being used for a prolonged period of time.
6. When replace CR2032H battery on remote controller,need pay attention to polarity of battery.If Battery inserted incorrectly, may damage remote controller.

MADE IN CHINA