

HEADREST LCD MONITOR DVD PLAYER

DVD/VCD/CD/MP3/MP4/JPEG

Support MPEG5 Format

HDVD-94



USER'S MANUAL


Contents

Features	2
Appearance and functions	2
Remote control	3
Operation of DVD System	4
Wiring Diagram	6
Trouble Shooting	6
General	7

Features

- DVD/CD/VCD/MP3/WMA/DivX/MPEG4 Playback System
- USB 2.0 Port
- SD/MMC/MS Card Reader
- AV Input
- Earphone Socket
- IR Transmitter (2 Ch for Wireless Headphones)
- Wireless FM Modulator (8 Ch for Audio Output)
- On-Board Stereo Speakers
- Remote Control
- 800 x 480 Pixels Resolution
- LED Backlight
- 16:9 Screen Format
- Pole Adapters
- 12V DC Input

Appearance and functions

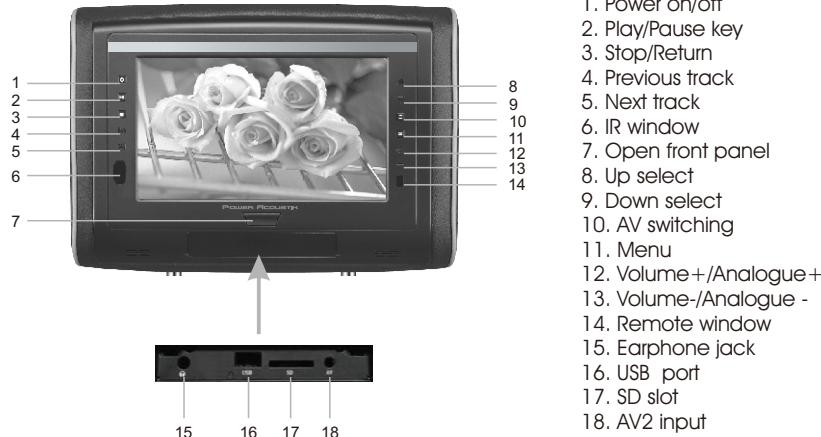

Remote control



Operation of DVD System

Play DVD/DCD/CD

When put the disc into the DVD player, pls keep the label toward back, auto-matically playing

Press **■/▲** on panel or **■/▲** on remote control to stop.

Press **■** on panel or **■** on remote control to pause.

Play Mp3

Insert the file storage media into the DVD Player to autoplay

Press **■/▲** on remote control to stop.

Press **■** on panel or **■** on remote control to pause.

Press **■** on panel or **■** on remote control when pausing to replay


1. press **AMS RPT** to repeat one or more songs

2. press numeric key to directly play the specified song

System Setup

Press button of setup on remote control to enter system and setting menu.

Press **↑ ↓ ← →** on remote control to choose modification item and press **ENTER** to enter, as below picture.

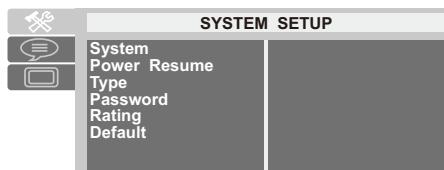


Introduction of USB/SD Function

- 1.Enter:press  under DVD mode and switch to the mode you need in DVD,USB and SD mode.
- 2.Exit:press  or  under USB/SD mode and then switch to DVD mode.

Menu Function Setup

In Av1 or Av2 state press  on panel or  on remote control to enter the main menu. Then press / on panel or     on remote control to setup and adjust

Wiring Diagram

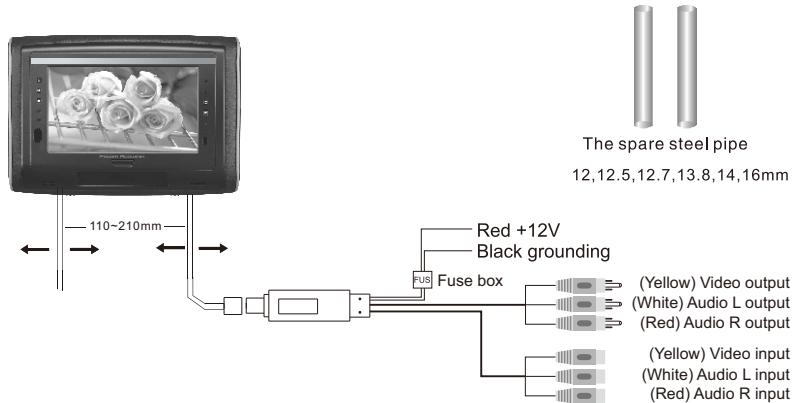

Trouble Shooting

Problem	Comment
No sound and image	Power is disconnected. Turn the machine on.
No image	Disc is scratched. Signal wire is disconnected.
No sound	Volume too low or the volume setup needs checking.
Black screen	Incorrect setup of image brightness and contrast. Low voltage.
Blurring and unstable image	Disc is scratched.
Colour Cast	Function menu setup is incorrect. Weak signal.
No power	Check interconnect circuit. Replace fuse if necessary.
No image after loading the disc	Only audio on the disc. Disc is scratched. Disc format is not supported
Unstable sound	DVD is dirty, scratched or seriously damaged. Clean or replace the disc

GENERAL

1. Do not expose the device to wet, damp or hot environments.
2. Do not disassemble or attempt to repair. Should a problem arise, consult a qualified technician.
3. Do not use abrasive chemical cleaners on the LCD or cabinet. Please use a soft dry cloth.
4. The storage temperature for this device is from -20°C to 70°C and the operating temperature is from -10° to 60°C.
5. This device supports DIVX/MPEG4/DVD/DVD+R/SVCD/VCD/DVCD/CD/MP3/WMA/CD-R/RW/HDCD+-R/JPEG or CD-ROM7.
6. In the interests of safety, please do not operate this device within view of the driver.
7. Power supply: DC12V (voltage range: 10V - 14V), negative ground.

NOTE:

When in use, the LED panel may contain a small number of bright spots on the screen. This is a normal phenomenon in active matrix display technology and does not mean the product is defective.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- o Reorient or relocate the receiving antenna.
- o Increase the separation between the equipment and receiver.
- o Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- o Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.