

**3. LED Status Indicator**

LED Indicators	Device Status
Red/Blue LED Blinks Swiftly	Pairing Up
Blue LED Blinks Once	Commands Received
Red LED Blinks Once	Commands Received Feedback
Solid green LED	Charging
Blinking Blue LED	Low Battery

# Note: The Connection between the Transmitter and Receiver can last for 20 seconds. The connection will automatically be terminated after 20 seconds of idle time.

**PI-RF50**  
RF Wireless Remote Controller

LawMate, innovation never stops

**LawMate**®

**1. PI-RF50 Transmitter Names and Parts**

1. Power LED(Blue) 5. WiFi LED(Orange)  
2. Power Key 6. Wi-Fi Key  
3. Rec LED(Red) 7. Power ON(Down) / OFF(Up) Switch  
4. Rec Key 8. Vibration ON(Down) / OFF(Up) Switch

**2. Package Content**

1. Receiver (Connecting to DVR)  
2. Transmitter

**3. Connect the PI-RF50 Receiver to the DVR**

1. Plug in the Receiver into the Control port (3). Once you see the Blue LED blinks for once, it suggests that the Receiver is working properly.
2. To control the DVR with the Transmitter, switch to "Power On" on the side of the Transmitter. The Blue LED will blink once and the Transmitter will vibrate twice.
3. Press (2) for 3 seconds to turn on the DVR, you'll see the monitor being turned on. Then the Red LED and Blue LED will both be on, the DVR will start the recording automatically.
4. If you want to stop the recording, press (4) to turn off the recording. The Red LED on the Rec Key will be off and the Transmitter will vibrate twice if the Rec is stopped successfully. You can resume the Rec by pressing (4) again. The Red LED will be on again and the Transmitter will also vibrate twice which indicates that the Rec has been on again.
5. If you want to start the P2P connection, please press (6) to turn on the WiFi. The Orange LED will be on and the Transmitter will vibrate twice, You can turn off the connection by pressing (6) again.

\* PI-RF50 supports PV-500HDW Pro only

**Warning Statement**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- o Reorient or relocate the receiving antenna.
- o Increase the separation between the equipment and receiver.
- o Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- o Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION : RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.

Extreme temperature: -20-45 °C

Declaration of Conformity

Hereby, LawMate International Co., Ltd. declares that this Wireless RF Remote Control product is in compliance with essential requirements and other relevant provisions of Directive 1999/5/EC. A copy of the Declaration of conformity can be found at LawMate International Co., Ltd.

**CE0700**