


• MADE IN CHINA.
 • WARNING! NOT SUITABLE FOR CHILDREN UNDER 36 MONTHS.
 • CHOKING HAZARD (DUE TO SMALL PARTS).
 • THE MANUFACTURER RESERVES THE RIGHT TO MODIFY THE TERMS, COLORS AND ELEMENTS WHICH MAKE UP THIS PRODUCT.
 • PLEASE RETAIN THIS PACKAGE FOR FUTURE REFERENCE OR WRITE DOWN THE ADDRESS FOR IDENTIFICATION.

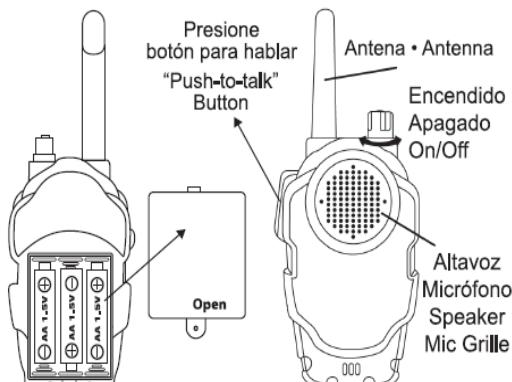

Utiliza 3 baterías tamaño "AA" (No incluidas) Use 3 "AA" size batteries (Not included)

WARNING:
CHOKING HAZARD
Small parts, not for children under 3 yrs.
Always use this product with adult supervision.

خذيرات:
• ينصح بالحذر من الألعاب غير مناسبة
• ينصح بالحذر من الألعاب غير مناسبة
• ينصح بالحذر من الألعاب غير مناسبة

¡PRECAUCIÓN!
PELIGRO DE ASFIXIA - Contiene piezas pequeñas
No recomendado para niños menores de 3 años.

- Non-rechargeable batteries are not to be recharged.
- Different types of batteries or new and used batteries are not to be mixed.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.

WALKIE-TALKIES FEATURES

• Use ON/OFF volume control to normal listening. • PUSH-TO-TALK release to listen button switch. • Flexible antenna for best transmission and reception. • Communication distance up to about 12-15 m. • Belt clip for ease carrying. • Fashionable and special design for easy handling. • The walkie-talkies have been fully adjusted prior to shipment. • Be sure not to touch internal components other than replacing the batteries. • When the sound becomes weak, it is time to change the batteries. • After use, turn the ON/OFF control switch to the OFF position. • Keep them in a dry place. • Take out the batteries when walkie-talkies are not in use. • Do not use rechargeable batteries.

HOW TO OPERATE

1. Open batteries cover and install batteries. • Close battery cover.
2. Turn the ON/OFF switch to ON and adjust the volume control to normal listening level.
3. Press the PUSH TO TALK button for transmitting and speaking in a normal voice level into the speaker microphone grille.
4. Release the push to talk button for receiving.
5. Best transmission and reception are obtained when the flexible antenna is held in vertical position.

REF. 11314



Hecho en / Manufactured by:
Toy Shock International Ltd
Unit 302-303, 3/F, Tower B, New Mandarin Plaza,
14 Science Museum Road, Tsim Sha Tsui East,
Kowloon, Hong Kong
Tel. No.: 852-2732-2272

www.toyshock.com | info@toyshock.com

TOY SHOCK

© Toy Shock International Limited



MADE IN CHINA
FABRICADO EN CHINA

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.