



FY WG2 3 Axis Wearable Gimbal

Compatible with Gopro Hero5 / Gopro Hero4
and cameras with similar dimensions

GuLin FeiYu Technology Incorporated Company



User Guide

Attention!

- (1) Please install the camera before powering on the gimbal.
- (2) When not in use, turn off the gimbal and then remove the camera.

1 Install the Camera

Install the camera on retainer plate, then fix the camera with retainer bar and screws.

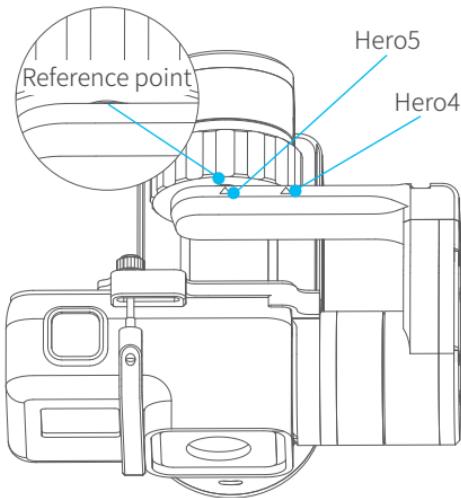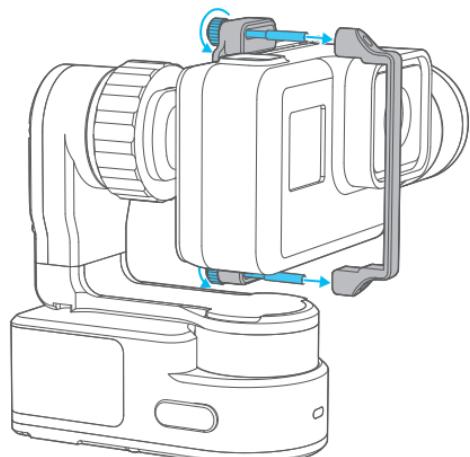


2 Power on / off

Attention: Make sure the camera is secure before powering on the Gimbal.

Power On: Press and hold function button until the green light is on.

Power Off: Press and hold function button until the red light changes from quick flashing to always on.

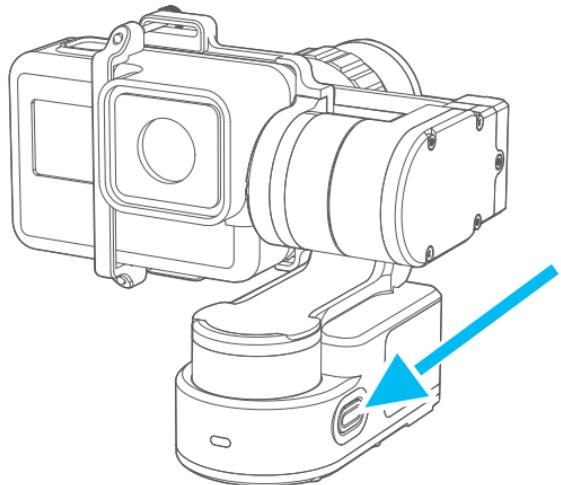


!

In case of low battery, the red LED indicator flashes for three times for every 5 seconds. Please charge WG2 .

3 Charging



Please make sure the battery is fully charged before you use the gimbal for the first time.



Charge with micro USB cable.

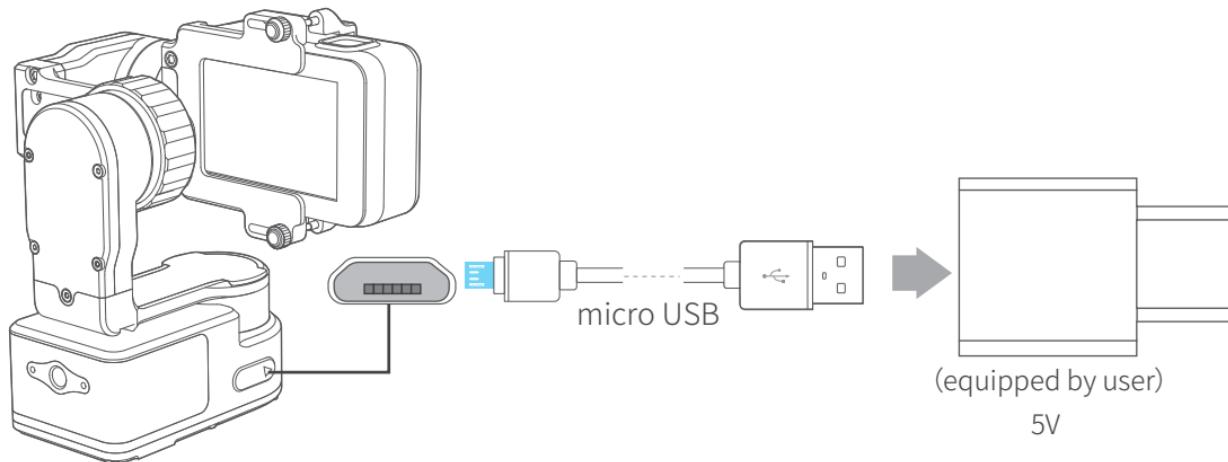


Product Overview

* The showing sports camera is only for reference

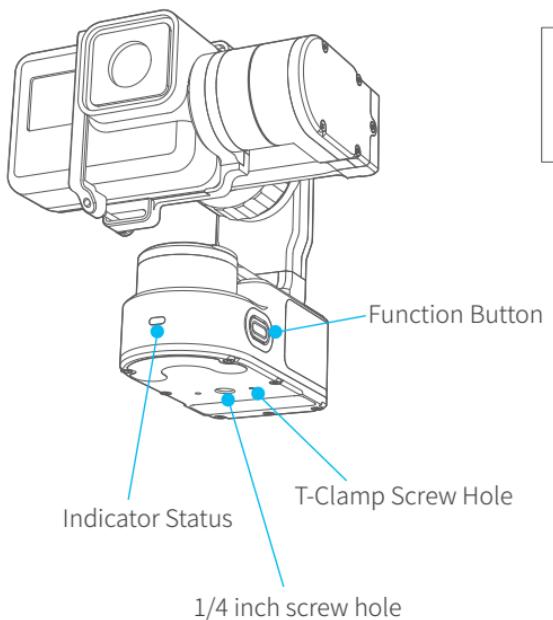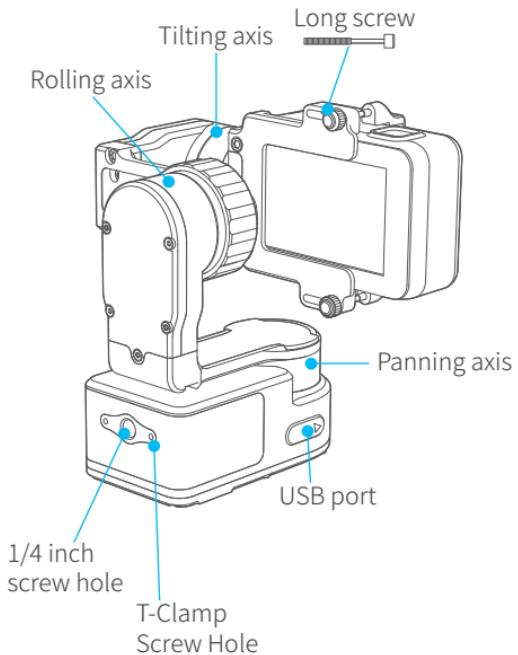

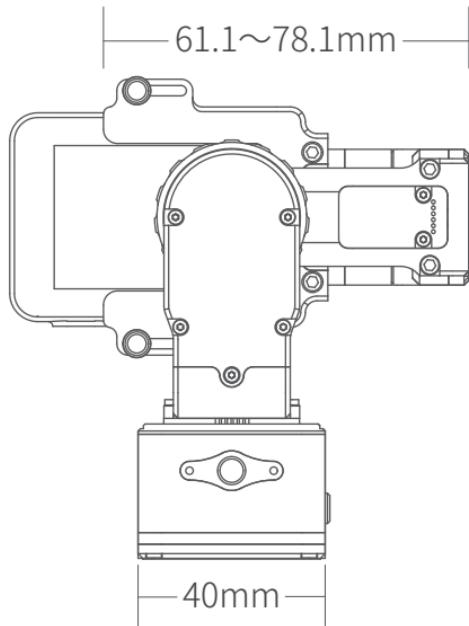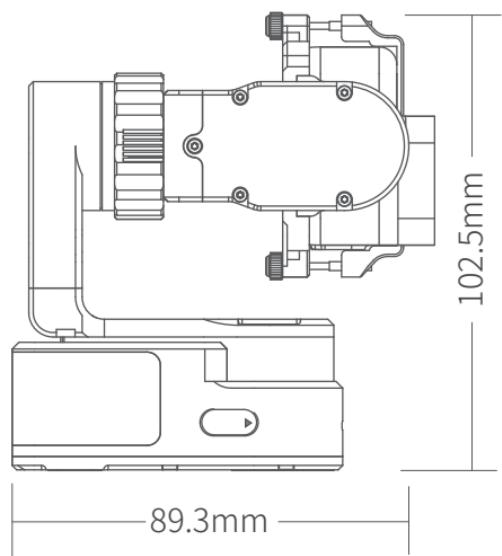


Vertical

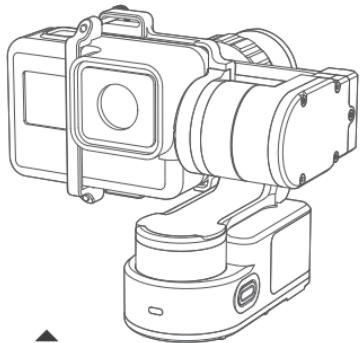


Camera in left

Forward

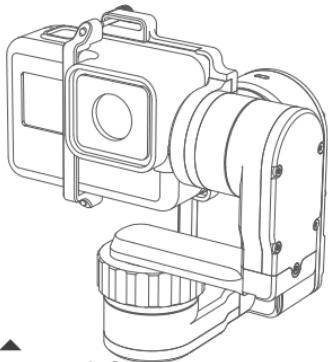


Inverted

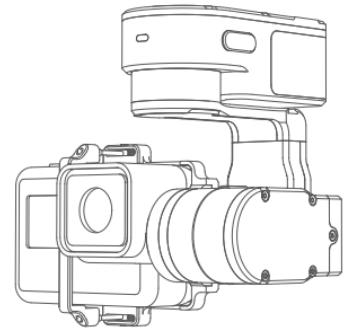

Camera in left

Camera in right

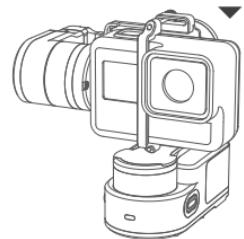

APP download and connect

1 Download APP

Download "Feiyu ON" and install it.

(1) iOS version:




(2) Android version:



2 Connect to APP

Start the app on your smartphone, follow the instructions to connect the smartphone with gimbal via Bluetooth.

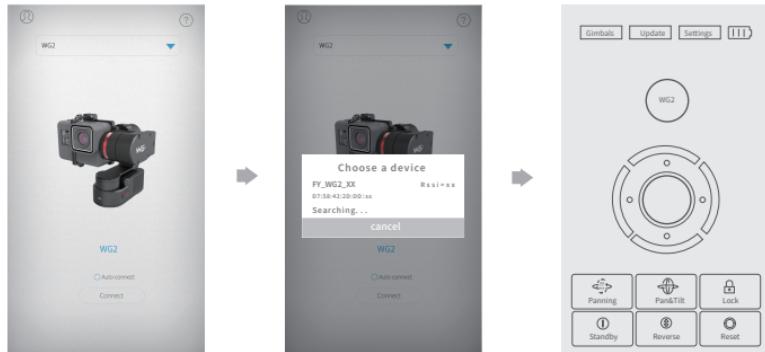

Mode /Function

Panning Mode

Tilting and rolling direction are fixed, and the camera lens moves according to the hand movement of the user.

Panning and Tilting Mode

The rolling direction is fixed, and the camera lens moves according to the hand movement of the user.

Lock Mode

The orientation of the camera is fixed.

Reset

Reset to initial status.

Indicator Status Mode / Status

Blue light flashes once	Panning
Blue light flashes twice	Panning and tilting mode
Blue light flashes three times	Standby
Blue light on steadily	Lock mode / Initializing
Blue light keeps flashing	Initialization failure / Malfunction
Red light flashes three times	Low battery
Red light keeps flashing	Switching to standby mode/ Gimbal will power off


Mode /Function Operation Instructions

Function Button	Mode /Function	Explanation
Single tap	Panning Mode / Lock Mode	Single tap to switch between panning mode and lock mode
Double tap	Panning and tilting mode	When in panning and tilting mode, press once to switch to lock mode
Triple tap	Inversion Mode	Pressing the function button three consecutive times in any operating mode, the gimbal will switch to the Inverted Mode . Pressing the function button three more times while in Inverted Mode to switch back to the original orientation.
Quadruple tap	Reset	Reset the tilting axis of the gimbal to initial orientation and initial mode
Long press until the red light flashes quickly	Standby	Single tap again to awake the gimbal, or triple tap to initialize the gimbal

Firmware Upgrade

(1) Option 1: connect the gimbal with PC via micro USB cable, and then upgrade the firmware.

Please visit the official website www.feiyu-tech.com to download the relevant programs for upgrading, including USB driver, firmware upgrade software and product firmware, and install the relevant software, decompress the firmware files for standby application.

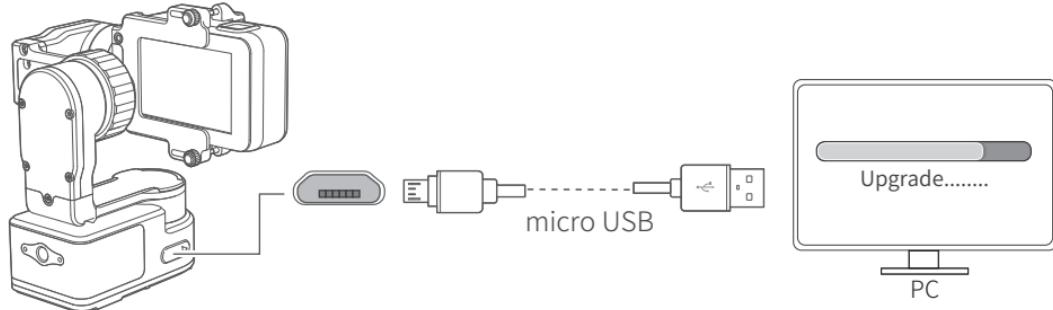

(2) Option 2: connect the gimbal with Smartphone via bluetooth, and then upgrade the firmware.

