

Shot Scope

H4

User Guide

support.shotscope.com



Contents

Inside your box	01
Setting up your Shot Scope H4	02
The Shot Scope App and Dashboard	07
Before you play for the first time	08
At the course	11
Post-round	18
Editing / Signing off	19
Leaderboards / Medals	21
Get the most out of your Shot Scope H4	22
Terms and Conditions	23

Shot Scope

Inside your box

Thank you for buying a Shot Scope H4. Before turning on the device, please read our full user guide to ensure the correct set up.

- 1 x Shot Scope H4
- 16 x Lightweight tags
- 1 x Charging cable
- 1 x Metal belt clip
- 1 x Carabiner clip



Setting up your Shot Scope H4

Step 1: Download and install the mobile app

 
Shot Scope provides both an Android and iOS app, these can be downloaded onto any compatible mobile or tablet.

To download or install the Shot Scope app, simply search for Shot Scope on either the App Store or the Google Play Store.



Register

To register an account, open the app and then click on the 'Register' button. Complete all sections and then press the 'Continue' button. Your password must contain at least one letter and one number

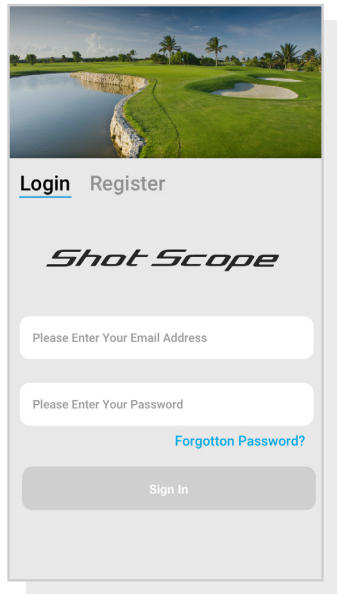A screenshot of the Shot Scope app's registration screen. At the top is a landscape photo of a golf course with a pond. Below the photo are two links: "Login" (underlined) and "Register". The "Shot Scope" logo is centered. There are two input fields: "Please Enter Your Email Address" and "Please Enter Your Password". A link "Forgotton Password?" is to the right of the password field. At the bottom is a "Sign In" button.

Login Register

Shot Scope

Please Enter Your Email Address

Please Enter Your Password

[Forgotton Password?](#)

Sign In

 
App registration screen

Step 2: Complete the tutorial on the app

The first time you enter the Shot Scope app after registering, you will be taken through a tutorial showing you how to use the handheld and the app. During this process, you will choose the settings for your device and sync the handheld to ensure it has the latest firmware installed. You must complete this process before using the H4.

Step 3: Connecting to Shot Scope

If you do need to connect the handheld to the mobile app, turn Bluetooth on in your phone settings, log into your app and then press the 'Connect' button at the top of the screen. The handheld screen will then change to show the connection has been made successfully.

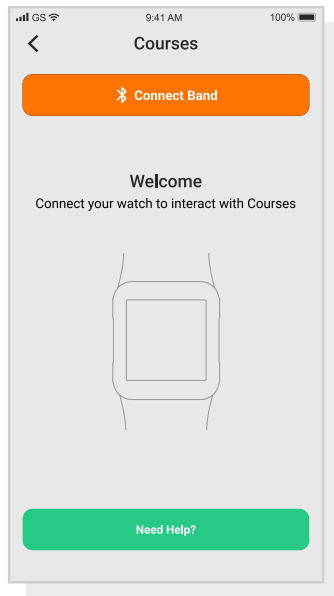


Set up tutorial

Step 4: Check course maps

We suggest that you check the mapping status of any courses you intend to play 48 hours before your tee off time. This is to make sure the course is in the system and has been mapped.

Most courses will be mapped and on the handheld, but there could be the occasional new course that isn't on the system or your course may have an update pending.

 To view the list of mapped courses on the Shot Scope system, navigate to the 'Courses' section in the app. This is present on the tab bar of the iOS app and the main menu of the Android app.

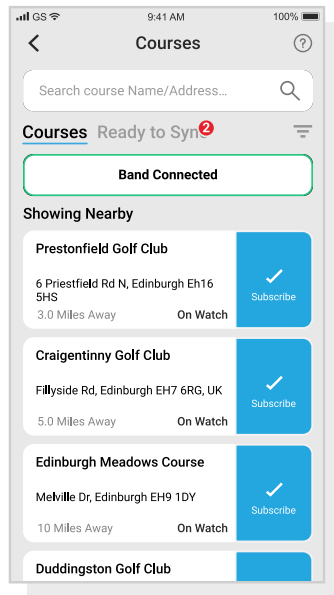

View course maps

Step 5: Searching for, subscribing and adding a course

 
You can search our course database by entering the name of the course or using your location to find nearby courses. Either use the search bar or use the filter at the top right of screen to filter courses by proximity to your current location.

To make sure you always have the most up to date course maps, subscribe to any course that you play a lot to get notifications when the course map has been updated. To subscribe, tap on the course and it will be highlighted blue to confirm this action. If any of the courses you selected are due an update then they will be automatically added to the sync list.

If your course is mapped but not yet on the handheld, the course will have an 'add' button beside it, tap this and the course will be automatically added to your sync list.

We may have your course in the database but it has not yet been mapped. In this situation the course will have a 'request' button beside it, tap this to request the course be mapped. This will notify the mapping team who will endeavour to get the course mapped in 48 hours.

If you can't find the name of the course, press the 'Request' button at the bottom of the screen. This will bring up a form that can be filled out and sent to our mapping team. Again, we will aim for this to be mapped in 48 hours.

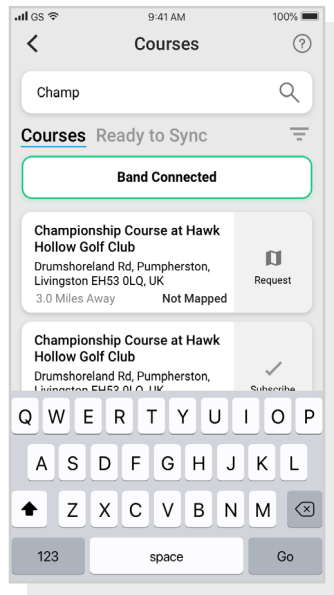


View course maps

Step 6: Syncing

If you have any course maps that need to be uploaded to the device, or any updates that need to be transferred to the handheld you will see a red notification at the top of the Courses screen. If you wish to perform a sync then tap on the 'Ready to Sync' button at the top of the screen.

 On the resulting screen, you will see the list of courses that require a sync. Press the 'Sync All' button near the top of the screen to start the process.

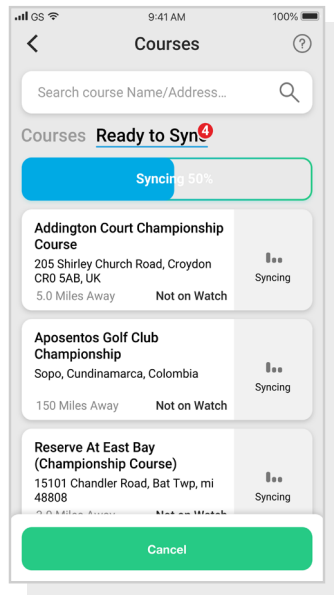


View course maps

The Shot Scope App and Dashboard

Download or update your mobile app


Please make sure you have the most up to date version of the iOS and Android app installed.

 To upload rounds you must use the mobile app. You can also view and edit your round on the Performance Dashboard (shown on right) which can be accessed via web browser on a computer or tablet.

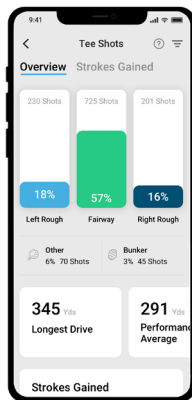

Shot Scope Mobile app

 A quick overview of your statistics. Set up your Shot Scope, update firmware, update courses and upload your rounds.

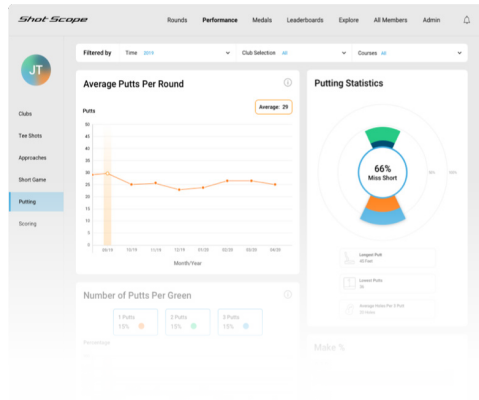

Shot Scope Dashboard

A more detailed analysis of your statistics. Available to view online at:

<https://dashboard.shotscope.com>

 
 
Before you play for the first time

Step 1: Charging your Shot Scope H4

Your Shot Scope can be charged from any USB port or USB compliant wall charger. Please use the charger provided with the product.

Hold the charger with the Shot Scope logo facing the sky, then apply some pressure to the lever and carefully place the 4 prongs into the back of the device. The handheld screen will change to show the charging screen.

Additional chargers can be purchased at www.shotscope.com/products/accessories/

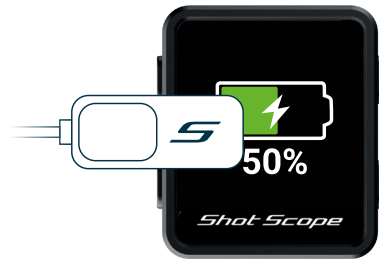

Clip charger to left of screen and connect USB to power.

Step 2: Installing tags

Your Shot Scope comes with 16 tags, each labelled with an initial to identify the club. It is best practice to match the appropriate tags with the corresponding club. For example, the D tag would screw into your driver.

Tags must be inserted securely into the grip of the club you wish to track. Do this by rotating the tag clockwise whilst applying a slight downward force.

There are 2 'spare' tags marked X1 and X2, these should be used for clubs such as a 7 wood or an extra driver.

Only the P tag can be used with a putter.

Existing Shot Scope User: The tags from your previous Shot Scope product will work with the handheld, however we recommend swapping the old tags for the new ones provided.



Step 3: Setting up My Bag

 
My Bag is a feature on the Shot Scope dashboard and apps which allows you to create a database of all of the clubs you use and track their performance.

To access My Bag on mobile it can be found in the 'more' section of the app on iOS and in the drop down menu on Android.

To compliment the Shot Scope app we also have an online web dashboard <https://dashboard.shotscope.com>. This webpage has more detailed performance statistics and is easier to assign your clubs to My Bag. You can log into this dashboard using the same email and password as your mobile app. The My Bag feature can be found in the 'Account' tab at the top right corner of the dashboard.

Once you have screwed your tags into their respective clubs, you should then enter the My Bag feature on either the mobile app or the online dashboard and create your set of clubs, then assign these clubs to the tag slots so that it matches your physical tag set up.

Please visit the support site for detailed instructions on how the My Bag feature works:
support.shotscope.com

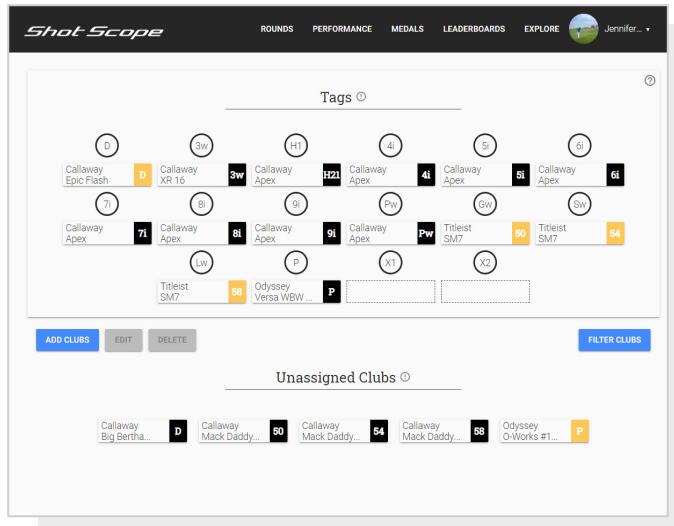

My Bag Dashboard

**ADD MY BAG ON MOBILE SCREENSHOT
ON DASHBOARD**

At the course

Step 1: Getting ready to play

To start a round, firstly switch on the device by pressing the top left button, then unlock the handheld by pressing the bottom left button. Once the handheld is unlocked, press the top right button next to the 'tick'. This will confirm the selection of 'Play'.

We suggest that you start a round just prior to arriving at the first tee. A GPS fix which should take around 30 seconds, the first time you play this may take a bit longer.



Step 2: How to use H4

The Shot Scope H4 shows front, middle and back distances, hazards and lay up distances.

H4 has shot tracking and performance statistics included. To track your game simply tap the Shot Scope tag on the end of your club against the device to record a shot. Tagging works best when tapped against the Shot Scope logo. Once your tag has been detected the club will show on the screen.

We recommend tagging before you take a shot as part of your pre shot routine.

 
The device will vibrate to confirm the club has been detected.



Step 3: Mode and course selection


The game modes are interchangeable and allow you to get the most out of your H4 by offering flexibility between events. After you have selected to start a new round you will be asked to confirm what mode you wish to play the round in. You can choose between: GPS only, Pro mode and GPS + Track

After you have selected a game mode your handheld will then search for a GPS fix which should take around 30 seconds, the first time you play this may take a bit longer. The handheld will then show a list of available courses, use the bottom left and right buttons to find the correct course and then press the top right button to confirm your selection.

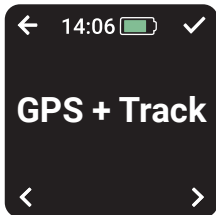


GPS + Track:

 Combines both GPS distances and shot tracking so you can analyse your game post-round.

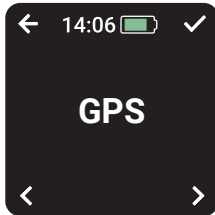

GPS only:

 Provides F/M/B, lay up and hazard distances on the screen of your H4 throughout your round. This mode does not gather any shot tracking data.

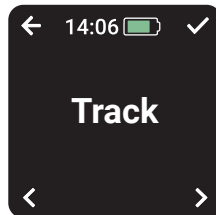

Track only:

Gathers shot tracking data for retrospective game analysis. This mode does not provide any on-course information and no GPS distances will be displayed on your handheld whilst you play.

Step 4: During Play

Main GPS Screen

The diagram below explains F/M/B distances and how to access the menu and hazard / lay up screens. You can skip holes by pressing the bottom left and right buttons. These features are explained in the user guide.



Tag ID

The tag ID gives the golfer visual feedback during the round and shows the last club tag the handheld has detected on the screen. This gives the golfer confidence that their shot has been detected.

The tag ID feature can be turned off in settings if you do not wish to use it.

Button Lock

The button lock feature locks the buttons while in play to avoid pressing accidentally.

The buttons will lock after 15 seconds of inactivity. To unlock, press the bottom left button.

To view hazards while in play, unlock the screen and the hazards icon will appear, top right.

You can disable the lock screen feature in the settings menu.



Buttons locked screen

Step 4: During Play (cont)

PinCollect

PinCollect is a simple feature that allows you to get the most out of your statistics by collecting the position of the pin. When you reach a green, your device will automatically change to the PinCollect screen. This screen shows the numbers 1-3, which represent the number of putts taken on the hole. On the following screen a 0 or 4 putt can be recorded. Once you have holed out, stand over the hole and press the button next to the number which correlates with the amount of putts taken. This will save the pin location for that hole.



What if I forget to PinCollect?

Although the device will remind you to do so on every green, forgetting is still easily done! If you do forget, you can add the pin position in editing and move your putts as required. There will be more on the editing feature later.

How to record a penalty on course?

Navigate to the penalties screen by pressing the top left menu button. The first option is 'Penalties', press the top right button to confirm the selection. You can then cycle through the different penalty options and select the one that is relevant to you. There is more information about using penalties on the support site:

support.shotscope.com

Scrolling between holes

When you finish a hole, the device will automatically change to the next hole. If you need to manually change the hole the device is on you can do this by pressing the bottom right button to go forward and the bottom left button to go back.



Step 4: During Play (cont)

How to access hazards and lay up distances

To view hazards for the hole, click the top right button beside the 'i' icon. This will take you to the hazards and lay up screen where you can access distances to bunkers, water hazards and lay up distances that are on that hole. The screen will show the first two distances but you can scroll through all hazards / lay ups on the hole by pressing the top right and bottom right buttons. To get back to the yardages screen after this procedure, press the top left button beside the back arrow.



Hazard icon (Top Right)



Hazard screen

Last Shot

This feature measures the distance of the last shot automatically in GPS+Track mode, and also measures the last shot manually in GPS mode.



How to access last shot in GPS+Track mode

Unlock the screen, and press the menu button (top left). As you walk towards your ball, the number shown on the screen will increase. This then resets automatically, once you hit your next shot.

Step 4: During Play (cont)



How to access last shot in GPS mode

When standing on the tee or beside your ball before hitting a shot, unlock the screen and press the menu button (top left) then press start (top right button). As you walk towards your ball, the number shown on the screen will increase. Should you wish, repeat this process every time you hit a shot.

Ending a round

After playing the 18th hole you will automatically be asked if you want to end the round. Press the top right button to confirm that you wish to end the round. If you don't want to end the round press the bottom right button until you see the 'Continue' option and then press the top right button to confirm this. You can manually end a round at any point by pressing the menu button top left and then scrolling through the options until you reach the 'End Round' option. If you press the top right confirm button the round will end and you will return back to the home screen.



End round

Play back 9

If you are playing a 9 hole course but playing another 9 holes. Keep pressing the bottom right button on the end round screen until you see the 'Play Back 9?' Then press the top right confirm button to continue your round.

Post Round

 
Step 1: Uploading your data

When going to upload your round, first make sure that you have your handheld turned on and next to your mobile phone (ensure you have Bluetooth enabled on your phone settings). The next step is to log into your app and tap the 'Connect' button at the top of the screen.

The screen will then change to show that a sync is waiting, tap on the sync button to start the round sync. You will see a progress bar and when this has completed the round will be uploaded to your account.

Step 2: Editing data

Editing is one of the most useful features on your Shot Scope system and should be a part of every users routine.

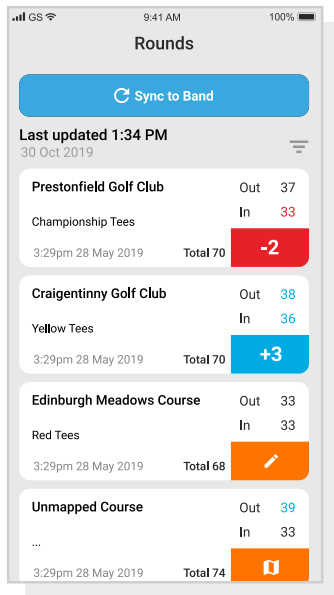

Upload data

Editing / Signing Off

All rounds that you upload need to be signed off before they are included in your stats. This process ensures that all of your data is completely accurate.



Rounds that have not been signed off are identified by an orange scorecard icon on both your online dashboard and mobile app.

To begin the 'Sign Off' process on the dashboard, click on the card of the round you wish to sign off and then select 'Edit/Sign off' found below the map. On mobile, tap on the round card and then tap the pencil or scorecard icon on the round overview page.

This opens a scorecard for your round.
On this scorecard there is a five-step process.

Step 1: Select your handicap from the dropdown.

The screenshot shows the 'Sign off' screen for a round at Prestonfield Golf Club on 12:30 18 Apr 2016. The screen displays a five-step process to sign off a round.

Sign off

Prestonfield Golf Club
12:30 18 Apr 2016

To Par: - 66 Score: 18 Holes Played: +1 Penalty Shots

1. Confirm handicap 14

2. Select tees
Select the Tees that you played from before signing off.
If your tees don't appear, tap the plus icon and create a new set.

Select Tees +

Par	Score	Viewed	Par	Score	Viewed	Par	Score	Viewed
1. - 4	✓	7. - 4	✓	13. - 4	✓			
2. - 2	✓	8. - 5	✓	14. - 5	✓			
3. - 4	✓	9. - 4	✓	15. - 4	✓			
4. - 2	✓	10. - 5	✓	16. - 5	✓			
5. - 4	✓	11. - 4	✓	17. - 4	1			
6. - 2	✓	12. - 5	✓	18. - 5				

3. Edit EDIT

4. Include this round
Include this round in your performance statistics? ☒

5. Round Visibility
Making your round public will allow your score to be seen by other users in the course hub.
Public ☒ Followers Only ☐ Private ☐

6. Sign off SIGN OFF

You may find editing easier on the web dashboard using a mouse

Step 2: Select which tees you played from, several options are included on the drop down list. If the tees you played from aren't present, click on the plus icon to create a new set. When creating a new set of tees make sure all the pars for each hole are correct before going forward.

Step 3: Once you reach step 3, the edit button will be enabled. Click on this button to begin making edits to your round. In order to 'sign off' your round you must view at least one hole in editing, however, we do recommend reviewing all holes to ensure data is correct.

Step 4: Once you have edited your round, you must decide whether to include the round in your performance statistics. This shall be set to include as default. To discount the round, simply move the slider on dashboard or untick the box on mobile.

Step 5: Press 'sign off' to complete the process.

To find out more about editing and signing off please visit:
support.shotscope.com



Mobile Editing

Compete against your friends in Leaderboards and unlock Medals

When signing off your round you have the option to include the round in Leaderboards and Medals.

You can compete and play against other Shot Scope users to gain medals and top our leaderboards.

Opt into leaderboards via the 'compete' tab on the app and online dashboard.



James Thompson
Gosforth Golf Club
Handicap 5



Average Distance

Leaderboard		Position	
Global		150th	
Handicap	+7-5	85th	
Country		99th	
MyGolfSpy		85th	

Get the most out of
your Shot Scope H4

Visit www.shotscope.com/getstarted
for FAQs, tutorial videos and customer support



Shot Scope Technologies Ltd

LIMITED WARRANTY & SAFETY INFORMATION

FOR CONSUMERS PROTECTED BY CONSUMER PROTECTION LAWS OR REGULATIONS IN THEIR COUNTRY OF PURCHASE. THE BENEFITS CONFERRED BY THIS LIMITED WARRANTY ARE IN ADDITION TO ALL RIGHTS CONVEYED BY SUCH CONSUMER PROTECTION LAWS AND REGULATIONS. Shot Scope Technologies Ltd products are warranted to be free from defects in materials, components and workmanship through normal use. The Warranty Period begins on the date of purchase from Shot Scope Technologies Ltd and lasts for a period of (12) months for a new product.

If a defect in material, component or workmanship is discovered within the Warranty Period you must notify Shot Scope Technologies Ltd in writing. In no event shall such notifications be received by Shot Scope Technologies Ltd later than 14 days after the expiration of the Warranty Period. Shot Scope Technologies Ltd will, at its sole option, repair or replace any materials or components that fail in normal use. Such repairs or replacement will be made at no charge to the customer for parts or labour, provided that the customer shall be responsible for any shipping and transportation cost. All returns must be shipped to Shot Scope Technologies Ltd service centre for assessment prior to repair or replacement.

The product is intended to be used only as a performance tracking device for sport and must not be used for any other purpose requiring precise measurement of direction, distance, location or topography. Shot Scope Technologies Ltd makes no warranty as to the accuracy or completeness of map data in this product.

Shot Scope Technologies Ltd retains the exclusive right to repair or replace (with a new or newly-overhauled replacement product) the device or software or offer a full refund of the purchase price at its sole discretion. SUCH REMEDY SHALL BE YOUR SOLE AND EXCLUSIVE REMEDY FOR ANY BREACH OF WARRANTY. Contact support@shotscope.com for a returns form and further instructions. A copy of the original sales receipt, is required as the proof of purchase for warranty services. The customer is responsible for all shipping and transportation costs, for shipping details contact Shot Scope Technologies Ltd.

EXCLUSIONS AND LIMITATIONS

This limited warranty extends only to products purchased from Shot Scope Technologies Ltd or an authorized reseller.

This warranty does not apply to: (i) cosmetic damage such as scratches and dents; (ii) consumable parts, such as batteries, unless product damage has occurred due to a defect in materials, component or workmanship; (iii) damage caused by accident, abuse, water, flood, fire, or other acts of nature or external

causes; (iv) damage caused by service performed by anyone who is not an authorized service provider of Shot Scope Technologies Ltd; (v) damage to a product that has been modified or altered without written permission of Shot Scope Technologies Ltd; or (vi) damage to a product that has been not been charged or powered in accordance with the charging and powering instructions provided by Shot Scope Technologies Ltd; (vii) the product is supplied or licensed for beta, evaluation, testing or demonstration purposes for which Shot Scope Technologies Ltd does not charge a purchase price.

To the maximum extent permitted by applicable law.

All software and services provided by Shot Scope Technologies Ltd, including factory loaded software is provided "AS IS" without warranty of any kind. Without limiting the foregoing, Shot Scope Technologies Ltd does not warrant that the operation of the product, software or services will be error free. Shot Scope Technologies Ltd does not warrant that any equipment, system or network that the product software or services are used in conjunction with will be error free.

TO THE EXTENT NOT PROHIBITED BY APPLICABLE LAW

ALL IMPLIED WARRANTIES AND CONDITIONS OF MERCHANTABILITY, SATISFACTORY QUALITY OR FITNESS FOR A PARTICULAR PURPOSE ARE LIMITED TO THE DURATION OF THE WARRANTY PERIOD. ALL OTHER EXPRESS OR IMPLIED CONDITIONS, REPRESENTATIONS AND WARRANTIES, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF NON-INFRINGEMENT ARE DISCLAIMED.

To the extent not prohibited by applicable law, in no event will Shot Scope Technologies Ltd be liable for: (i) lost or erased data in connection with repair or replacement of a device; (ii) loss of revenue or profit; (iii) loss of the ability to use third party products or services; (iv) or for special, indirect, consequential, incidental or punitive damages, regardless of the theory of liability (including negligence). In the event where Shot Scope Technologies Ltd has been advised of the possibility of damages. To the extent not prohibited by applicable law, in no event will Shot Scope Technologies Ltd liability exceed the amount paid by you the consumer for the product.

Unless modified in writing by Shot Scope Technologies Ltd this limited warranty is understood to be the complete and exclusive agreement between you and Shot Scope Technologies Ltd. Superseding all prior agreements, oral or written, and all other communications between you and Shot Scope Technologies Ltd. No Shot Scope Technologies Ltd employee, agent or reseller is authorized to make any verbal or written modification, extension or addition to this limited warranty.

ONLINE AUCTION PURCHASES

Products purchased through online auctions are not eligible for warranty coverage. Online auction confirmations are not accepted for warranty verification. To obtain warranty services, an original or copy of the sales receipt from the original retailer is required.

TECHNICAL SUPPORT

This limited warranty is neither a service nor a support contract. Answers to technical support questions can be found at:

support.shotscope.com

SAFETY INFORMATION & HEALTH WARNINGS

For your personal safety and to avoid damage to device follow safety information guidelines detailed below. Failure to avoid the following potentially hazardous situations could result in serious injury:

- Always consult your Physician/Doctor before beginning or modifying any exercise program. If you have a pacemaker or other implanted electronics device, consult your Physician/Doctor before using any electronic devices from Shot Scope Technologies Ltd.
- Do not clean or wear the device when you are charging it. Always unplug the device first before cleaning it.
- Do not expose the device or any other electronics product used to charge the device to liquid, moisture, humidity, or rain whilst charging the device. Exposure to water or moisture during charging could result in damage to the electronics circuits and may result in failure or explosion.
- Only use the device as detailed in the user manual.

BATTERY WARNINGS

If these guidelines are not followed, the internal lithium-ion battery may experience a shortened life span or may present a risk of damage to the device, fire, chemical burn, electrolyte leak, and/or injury.

- Do not charge or use the unit in a car or similar place where the inside temperature may be over 45 degrees Celsius (113°F). To prevent damage, remove the device from the vehicle or store it out of direct sunlight, such as in the glove box.
- Do not disassemble, modify, re-manufacture, puncture or damage the device.
- Do not short circuit the battery or device by bringing the terminals in contact with metal or another object. This could cause personal injury, explosion or fire.
- Do not immerse or expose the device to water, other liquids, fire, explosion, or any other hazard.
- Do not shock the battery by dropping or throwing it.
- Do not operate the device outside of the temperature ranges specified in the temperature specifications in this manual.
- If the device or battery shows any type of damage, such as bulging, swelling or disfigurement. Discontinue use immediately and contact Shot Scope Technologies Ltd.
- Keep any exposed battery out of reach of infants or small children.

CARE GUIDELINES

- Avoid extreme shock and harsh treatment, because it can degrade the life of the device.
- Only use a damp cloth or paper towel with water to clean the device. Do not spray with any chemicals to clean the device.
- Do not expose the device to extremely high or low temperatures.
- Do not bring the device into contact with any sharp objects. This could cause damage or scratches.
- Do not attempt to repair, modify or disassemble your Shot Scope device; it does not contain any user-serviceable components and doing so will void the warranty.
- Use the supplied usb cable to charge the Shot Scope device with usb compliant ports.
- If the device becomes submerged in a liquid, turn the device off, wipe excess liquid from the surface of the device and place the device in a dry area for 24 hours. In most cases the device should power up and function properly once completely dried. If the watch does not power up after following these steps contact customer support if your warranty period is still active.
- If the plastic the device comes into direct and prolonged contact with chemicals or sunscreen its appearance may be altered.

GPS NOTICE

The device may experience degraded performance if you use it in proximity to any device that uses a terrestrial broadband network operating close to the frequencies used by any Global Navigation Satellite System (GNSS), such as the Global Positioning Service (GPS). Use of such devices may impair reception of GNSS signals.

RADIO FREQUENCY RADIATION EXPOSURE

This device is a mobile transmitter and receiver that uses an internal antenna to send and receive low levels of radio frequency (RF) energy for data communications. The device emits RF energy below the published limits when operating in its maximum output power mode and when used with Shot Scope authorized accessories. To comply with RF exposure compliance requirements, the device should be used as described in the user guide. The device should not be used in other configurations. This device must not be co-located or operated in conjunction with any other transmitter or antenna.

The device should only be used for the intended application as stated by the manufacturer.

POWER SPECIFICATIONS

Charging: 5V USB

BATTERY

The device has an internal Lithium Polymer rechargeable battery. The battery should only be replaced by authorized Shot Scope Technologies Ltd approved personnel. A customer should never attempt to replace the battery.

TEMPERATURE SPECIFICATIONS

Operating Temperature: 0°C to 50°C (32°F to 122°F)

Charging Temperature: 5°C to 40°C (41°F to 104°F)

Storage Temperature: -10°C to 45°C (14°F to 113°F)

PRODUCT DISPOSAL

Dispose of the Shot Scope device, battery and packaging in the accordance with local regulations. Do not dispose of the battery with regular household waste.

FEDERAL COMMUNICATIONS COMMISSION (FCC) STATEMENT

his equipment radiates radio frequency energy and if not used properly – that is, in strict accordance with the instructions in this manual – may cause interference to radio communications and television reception.

Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference that may cause undesired operation of the device.

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. FCC ID: 2AHWR-SS05

CE MARKING & EUROPEAN UNION COMPLIANCE



Products intended for sale within the European Union are marked with a (CE) mark which indicates compliance to applicable directives and European norms (EN) as follows.

UKCA



Products intended for sale within the United Kingdom are marked with a (UKCA) mark which indicates compliance to applicable directives.

DECLARATION OF CONFORMITY

Shot Scope declares that this device complies with the essential requirements and relevant provisions of Directive RED 2014/53/EU.

Go to www.shotscope.com/doc to view the Declaration of Conformity.

Shot Scope Technologies Ltd
Unit 27, Castlebrae Business Centre, 40 Pepper Place, Edinburgh, EH16 4BB,
United Kingdom

MODE, FREQUENCY AND POWER

Mode	Frequency	Power
Bluetooth Low Energy	2.4 GHz	10mW
RFID	13.56 MHz	<1mW

SOFTWARE LICENSE AGREEMENT

BY USING THE DEVICE, YOU AGREE TO BE BOUND BY THE TERMS OF THE FOLLOWING SOFTWARE LICENSE AGREEMENT. PLEASE READ THIS AGREEMENT CAREFULLY. Shot Scope Technologies Ltd grant you the user a limited license to use the software embedded in this device (the "Software") in binary executable form in the normal operation of the device & product. Title, ownership rights, and intellectual property rights in and to the Software remain with Shot Scope Technologies Ltd. You acknowledge that the software is the property of Shot Scope Technologies Ltd and is protected under international copyright treaties. You further acknowledge that the structure, organization, and code of the software, for which source code is not provided, are valuable trade secrets of Shot Scope Technologies Ltd. You agree not to decompile, disassemble, modify, reverse assemble, reverse engineer, or reduce to human readable form the software or any part thereof or create any derivative works based on the software.

Go to www.shotscope.com/legal/ for the latest terms and conditions, returns and privacy policies.

Shot Scope

To find out more information visit:

www.support@shotscope.com

Join our social pages to be kept up to date with the latest Shot Scope news:



Facebook: [shotscope](#)



Twitter: [@shotscope](#)



Instagram: [@shot_scope](#)

Version 1