


Victoria's Secret Clip-on Mini Speaker 1

• Manual

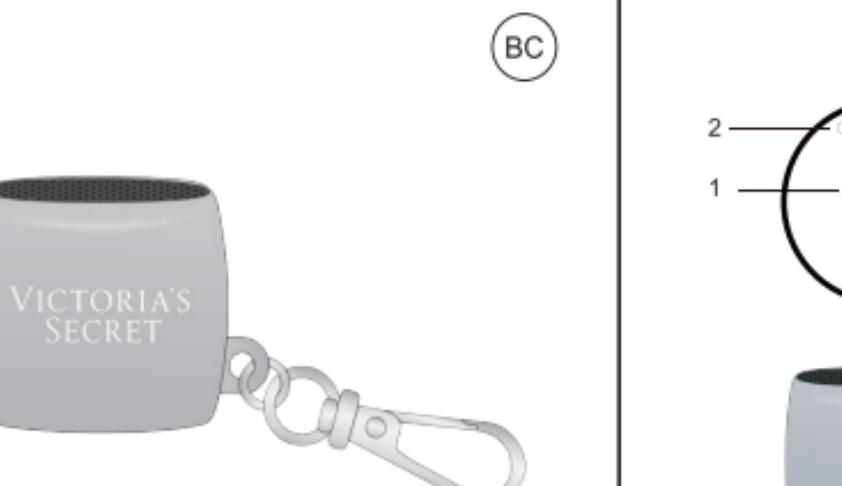


THIS IS NOT A TOY

USE UL CERTIFIED WALL ADAPTERS AND THE USB CORD INCLUDED WITH THIS PRODUCT.

INTRODUCTORY

Clip-on Mini Speaker 2 **Victoria's Secret Clip-on Mini Speaker 3** **Victoria's Secret Clip-on Mini Speaker 4**

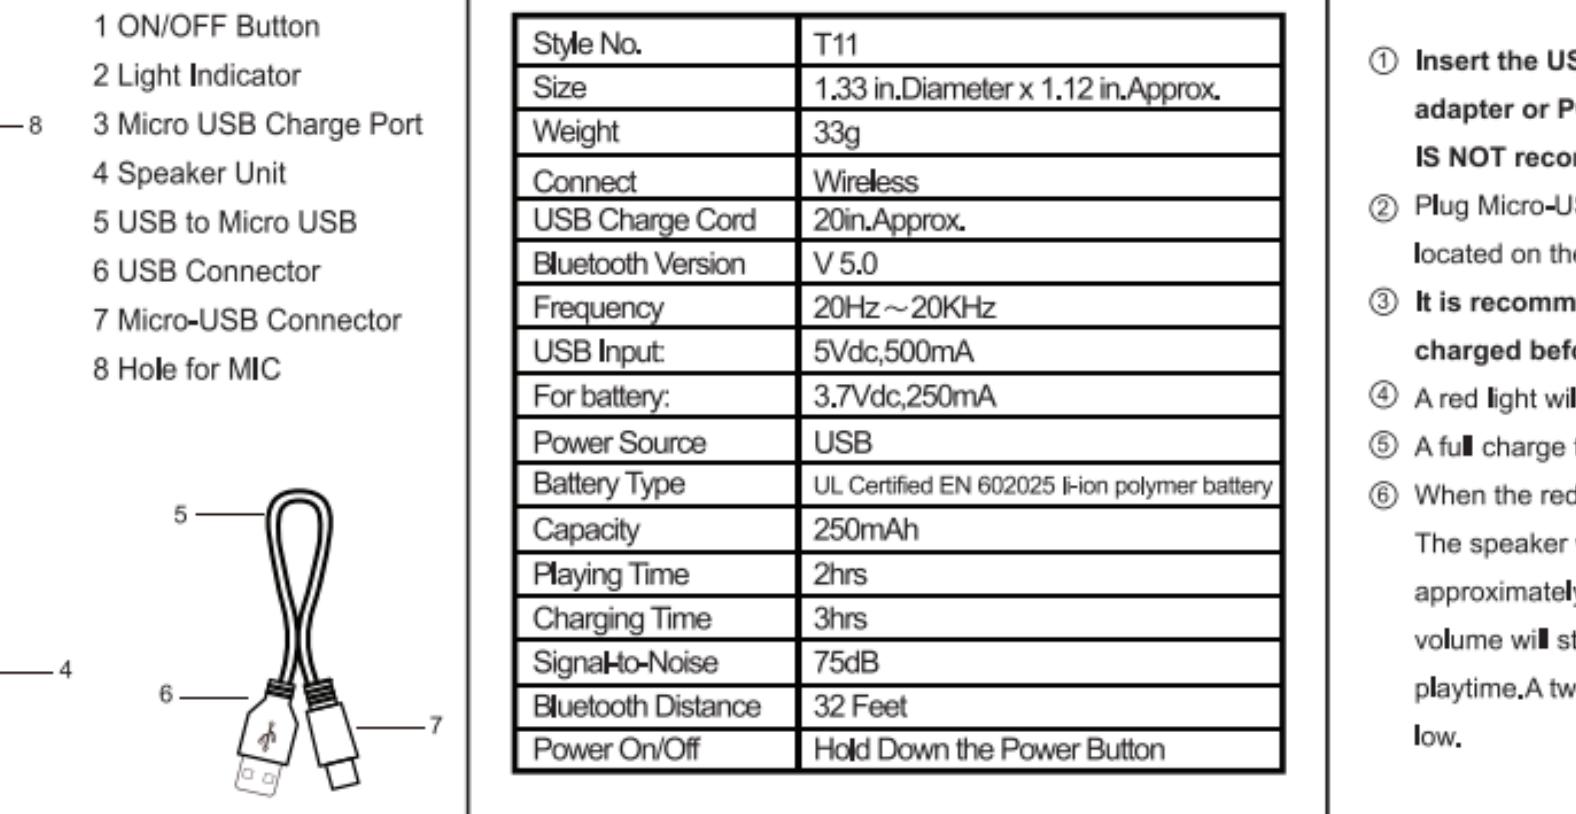

Victoria's Secret Clip-on Mini Speaker 4

port into a UL Certified USB Wall Adapter using a non UL certified wall adapter is not recommended.

able into the Micro-USB Charging Port at the bottom of the Speaker.

ed that the speaker is fully charged for its first use/pairing.

minate, indicating the device is charging. It takes up to 2 hours.

It turns off, the speaker is fully charged. It can operate at peak performance for up to 12 hours after a full charge. The speaker's battery may decline after 2 hours of continuous use. Sound will play when battery life is low.

Power On: Hold down the power button for 3 seconds. You will then see a blue light. The speaker is looking to pair with a device.

Pairing: Under your phone's Bluetooth settings, search for and connect to the device named "T11". When pairing is successful, the blue light will become solid and you will hear a tone.

IMPORTANT Iphone Users: When you are pairing, hold down the home button and the information button, go to device settings and turn on Bluetooth.

Playing Music: Choose a song and enjoy. The light indicator will change colors while playing music.

Volume: Use the controls on your phone to increase or decrease the volume.

Play and Pause: Press the play/pause button on your phone.

Power Off: Hold down the power button for 3 seconds. You will then see a blue light. The speaker is looking to pair with a device.

Mini Speaker 5 | **Victoria's Secret Clip-on Mini S**

Speaker 6 Victoria's Secret Clip-on Mini Speaker

Tre

Make sure the speaker is charged. If the speaker does not pair with your phone, power off the speaker and power it back on. If the issue persists, turn off your device and restart your phone. Check these further steps if you cannot resolve the issue:

- ① Make sure Bluetooth is enabled on your phone.
- ② Check that the speaker is not connected to another device.
- ③ Make sure you are within 32 feet of the speaker with no barriers (walls, other large electronics) between the device and your phone.

| | | | | | |
|--|---|---|---|---|---|
| <p>Victoria's Secret Clip-on Mini Speaker 8 Important Safety Instructions</p> <p>IF USED IMPROPERLY, RISK OF ELECTRIC SHOCK COULD RESULT IN SERIOUS INJURY OR DEATH.</p> <ol style="list-style-type: none"> 1. Read these instructions. 2. Keep these instructions. 3. Please pay careful attention to all warnings. 4. Follow all instructions. 5. Only use the cord supplied by the manufacturer. 6. Using another Cord is not recommended. 7. Unplug this device when unused for long periods of time. 8. Do not charge, or operate this device near water. | <p>Victoria's Secret Clip-on Mini Speaker 9 WARNINGS/PRECAUTIONS</p> <p>When using electronic products, basic precautions should always be followed:</p> <ul style="list-style-type: none"> • DANGER: To prevent fire or shock hazards, do not expose to water, rain, or moisture. • DANGER: A wet or contaminated micro-USB connector may cause excessive heat or melting and may lead to fire damage or personal injury. Always charge your speaker with a clean, dry micro-USB connector that is included with the product. • CAUTION: Charge the Bluetooth Speaker by using only the original USB cable included with the speaker. Using another USB cable may damage the device. • DO NOT use alcohol or any type of abrasives to clean the speaker. You may use a soft dry cloth. • DO NOT attempt to disassemble the speaker. This may lead to damaging the speaker permanently or cause serious injury. | <p>Victoria's Secret Clip-on Mini Speaker 10 WARNINGS/PRECAUTIONS - CONTINUED</p> <ul style="list-style-type: none"> • DO NOT expose the speaker to contact with sharp objects as this will cause scratching and damage. • DO NOT stick anything inside the speaker as this may damage internal components and cause serious injury. • DANGER! If the speaker is cracked or damaged, do not attempt to charge. This may cause electric shock or electrocution. • DISPOSE OF THE DEVICE PROPERLY at a recycling center. • CAUTION: Risk of fire and burns. Do NOT open, crush, heat above manufacturer's specified maximum temperature (or incinerate). Follow manufacturer's instructions. • DO NOT charge using an extension cord. | <p>Victoria's Secret Clip-on Mini Speaker 11 WARNINGS/PRECAUTIONS - CONTINUED</p> <ul style="list-style-type: none"> • WARNING: If you do not intend to use the device for a certain period of time, the power cable should be unplugged from the unit to prevent fire, damage, or corrosion. Store the speaker in a cool dry place. • DANGER! If the speaker is cracked or damaged, do not attempt to charge. This may cause electric shock or electrocution. • DO NOT expose or charge the device to temperatures greater than 98°F (37°C). Lithium-ion batteries contain flammable electrolytes that may vent, ignite, and produce sparks when subjected to high temperature. • DO NOT store the Bluetooth Speaker in any vehicle. • DO NOT listen to the speaker while operating a vehicle. This may impair your ability to drive. • Avoid severe physical shocks (ex. dropping). • Never allow children to play with the speaker. Small parts may be a choking hazard. | <p>MADE IN CHINA / FAITE EN CHINE / HECHO EN CHINA DISTRIBUTED BY VICTORIA'S SECRET PINK REYNOLDSBURG, OH, 43068, USA</p> <p>FCC ID: 2AHXQ3 This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:</p> <ul style="list-style-type: none"> - Reorient or relocate the receiving antenna. - Increase the separation between the equipment and receiver. - Connect the equipment into a outlet on a circuit different from that to which the receiver is connected. - Consult the dealer or an experienced radio/TV technician for help. <p>FACTORY ADDRESS: XING GLOBAL TRADE DOING TIAN PLAZA, SUITE 1301, 19 HAIAN ROAD, GUANGZHOU CHINA 510627</p> | <p>Victoria's Secret Clip-on Mini Speaker 13</p> |
|--|---|---|---|---|---|

