

SAFETY & WARNINGS

Ensure to read all instructions and warnings in this user guide prior to first use. Retain this user guide for future reference.

- This tablet is designed to deliver optimal performance in areas with moderate climates and altitudes below 2,000 meters.
- The supplied power adapter requires 5V/2A to charge the tablet. Please refrain from using any third-party adapters to charge the tablet.
- Avoid dropping the tablet.
- Please do not place heavy objects on the tablet or subject it to strong impacts.
- When charging the tablet, ensure that the ambient temperature does not exceed 25°C.
- During operation, ensure that the ambient temperature does not exceed 45°C.
- Do not expose the tablet to direct sunlight.
- Avoid using the tablet in areas with strong magnetic or static fields.
- Do not expose the tablet to water or other liquids. If any water or liquid splashes onto the tablet, immediately cease use, unplug the power adapter, and refrain from resuming operation until the tablet is completely dry.
- Do not attempt to dismantle or modify the tablet in any way.
- To avoid the risk of accidental data loss, regularly back up the data on the tablet.
- To prevent damage, do not clean the tablet with chemical detergents or other liquids.

OPERATION

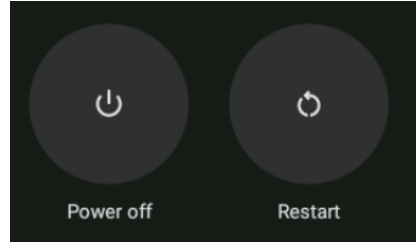 
Turning the Tablet On/Off

To turn the tablet on:

- Press and hold the power button until the display turns on. Wait until the home screen appears. The tablet is now ready for use.

To turn the tablet off:

- Press and hold the power button until the confirmation pop-up appears.
- Tap “Power off” to turn off the tablet.



Turning off the Display (standby)

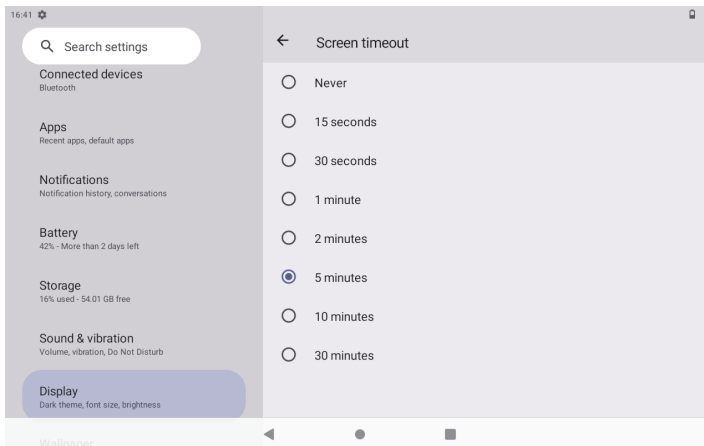 
When the tablet is on, you can turn the display off to conserve battery power.

- Press the power button to turn the display off.
- Pressing the power button again will turn the display back on.

Screen Timeout

To conserve battery power, the screen can be set to automatically turn off when the tablet is not in use.

- Select from between 15 seconds – 30 minutes.
- This option can be found in the “Display” settings menu.



Unlocking the Screen

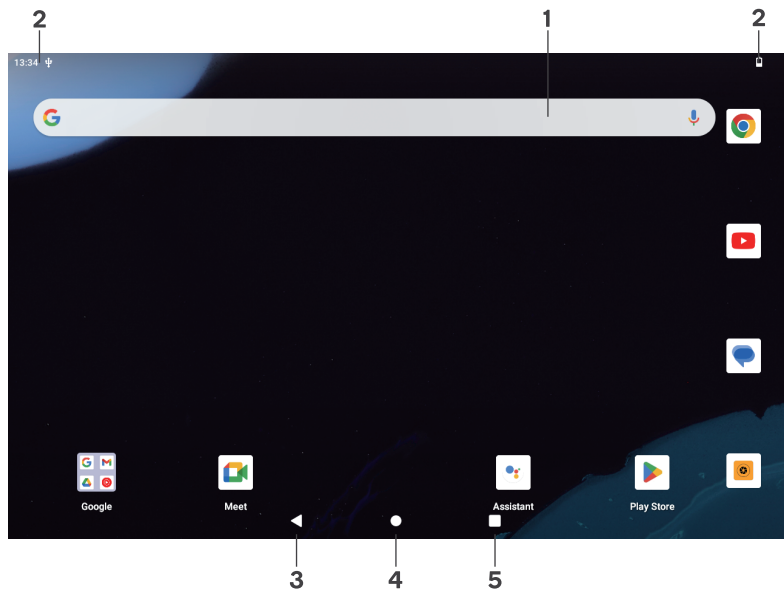 
When the screen turns off, you will have to unlock the screen when you turn it back on.

- To unlock the screen, slide your finger upwards on the home screen.
- If a password has been set, enter the password to finish unlocking the screen. The screen unlock password can be set from the “Security & Location” settings menu.



WARNING: It is highly recommended to write down your password/pin pattern. Misplacing or forgetting your password will lock you out of the tablet. Factory resetting the device to regain access will result in all data and programs being deleted.










Home Screen



1	Google™ search	Tap to search using the Google browser.
2	Notification bar	Notifications such as time, battery level and network strength are displayed here.
3	Back	Return to the previous screen.
4	Home	Return to the home screen.
5	Recent apps	Touch to display a list of the apps you have recently used.

Applications

         - To open an application, touch the application icon on the home screen or in the app launcher.
- The following apps are pre-installed on your tablet for your convenience.

 Chrome	Chrome internet browser	 Files	View and manage the files stored on your tablet.
 Calendar	Use the Google calendar to manage events and appointments.	 Photos	• View photos and videos stored on your tablet. • Edit your photos.
 Calculator	Perform mathematical operations	 YouTube	Watch online videos.
 Camera	Take photos and record videos using the tablet's cameras.	 Settings	Access the tablet settings menu.
 Clock	View the current time or set an alarm.	 FM Radio	Listen to FM radio.
 Gmail	Send and receive emails with your Gmail account.		