

CyranoTM

QUICK START GUIDE

IN THE BOX



Cyrano



oNotes Scent Disk



USB Cable

HOW TO USE CYRANO

1



2



1 Download

› Download the oNotes application from iTunes or Google Play to your device.

2 Setup

› Unpack your Cyrano and scent disk.

› Remove the lid and set it aside.

› Insert the scent disk as shown in the diagram on the left.

› Press the power button and notice that the light turns green. Also make sure the dark colored tops on the scent disk spin freely.

3 Play


› Start the oNotes app from your device. The app should find your Cyrano and automatically recognize the type of scent disk installed. If not, choose your scent disk from the list shown on the app.

› Next, pick where you plan to use Cyrano (Car, Office or Home) so we can optimize scent strength settings for this location. You can change them anytime under the settings menu in the upper right corner of the oNotes app.

› Tap on the first playlist. You should notice scent flowing from your device in about 10 seconds.

› You can also tap the Scents button to see and play any single scent in your cartridge.

CYRANO

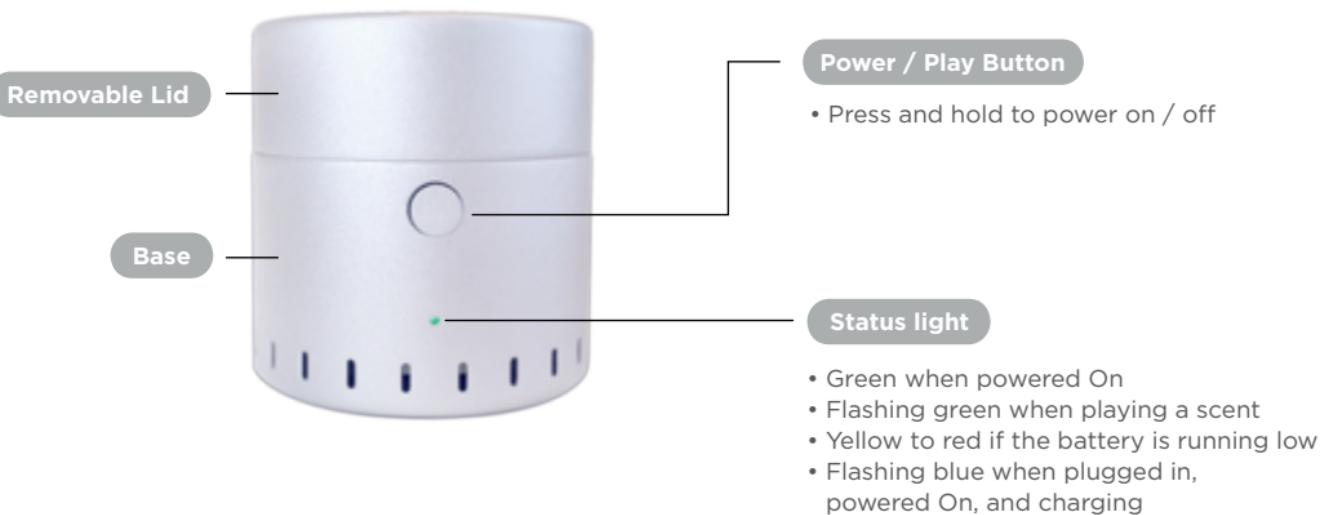

COMMON QUESTIONS

How long does the scent disk last?

The oNotes app will let you know when to replace your scent disk.

It should generally last about 6 weeks under normal use.

How long does the battery last?

About 4 hours if played continuously

How can I clean my Cyrano?

You can wipe down the lid and white top with a damp cloth or better, still one with isopropyl alcohol.

MORE QUESTIONS

If you have questions or concerns about how to use Cyrano, please visit www.onotes.com or send a message to support@onotes.com

USING CYRANO WITHOUT AN APP

If you play a playlist through the oNotes app, it gets saved into your Cyrano.

When you next power up your Cyrano this playlist will start automatically after about 5 seconds.

No app required, just hit the power button and enjoy. Your settings for Scent Strength are saved too.





MODEL: CYR171
FCC ID: 2AHYTCYR171

This device complies with Part 15 of FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by oNotes could void the user's authority to operate the equipment.

NOTE — This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Questions?

Please visit
www.onotes.com

or send a message to
support@onotes.com

REV 004
DATE 05.05.2016