LATEST AND GREATEST

Our team is constantly improving your product experience. This model may have new features or controls which are not detailed in this guide.

For the latest version of the manual, scan the QR code below.























We have lots of different ways to show we care.

Product updates | How-to tips | FAQs & more er to unlock your customer benefits including a free gift. Gift for US only. No APO/FPO/DPO addresses.



We're obsessed with creating the best possible experience around owning our products. If you have any questions, concerns, or feedback, we're here for you. Contact a real

human on our U.S.-based customer support team: Website: ilab.com/contact

Email: support@jlab.com Phone U.S.: +1 (405) 445-7219

(Check hours ilab.com/hours) Phone U.K./EU: +44 (20) 8142 9361

Visit <u>jlab.com/warranty</u> to initiate a return or exchange.


(Check hours jlab.com/hours)

 FCC ID: 2AHYV-FLOWKB 2AHYV-FLOWM 2AHYV-MKDGLC IC: 21316-FLOWKB 21316-FLOWM 21316-MKDGLC









WELCOME TO THE LAB

 
The Lab is where you'll find real people, developing really great products, in a real place called San Diego.

PERSONAL TECH DONE BETTER





Surprisingly Awesome Value



(A)



- If your device is not connecting to Bluetooth, forget the Flow Keys or Flow Mouse in your device settings. Turn device off and on. Press and hold for bluetooth connection until blinking blue light indicates pairing mode. Reenter your device settings to re-pair.
- If the USB dongle is not registering keyboard:

 - Remove dongle
 Press Fn + 1 to enter 2.4G connection

 - 3. Press + hold CONNECT button until green light blinks quickly

 - 4. Plug dongle back in

- If the USB dongle is not registering mouse:
 1. Remove dongle

- 3. Press and hold Connect button until green light blinks quickly
- 4. Plug dongle back in







QUICK START GUIDE



