

USER MANUAL

Power ON:

Open the charging case lid, take the earphones out from the charging case. The earphones will then be switched on automatically. (if the earphones are switched off, press and hold the power button for approximately 3 seconds to switch it on.)

Pairing the earphones with mobile device:

Step 1:

After the earphones are taken out of the charging case, both the earphones will be switched on and paired automatically. When the earphones are paired successfully, you will hear “connected” alert tone.

Step 2

Pairing the earphones with mobile phone for the first time

After taking out both the earphones from the charging case, turn on the Bluetooth setting on your mobile device and search for the Bluetooth pairing name “VOCS TRUEZ” to connect. A message alert “Bluetooth device is connected successfully” is heard when the pairing process is done.

Tip: Once the earphones are paired with your mobile device for the first time, it will be paired automatically next time. Simply turn on the Bluetooth setting on your mobile device and take the earphones out of the charging case. The earphones will be switched on and connected automatically with the mobile device. If you would like to change to the other mobile device, please re-connect the earphones with the new mobile device. Please ensure that the former mobile device has been disconnected from the device completely or you may reset the device.

Power OFF

Tap and hold the multi-function touch control for 3 seconds until red light flashes to switch off the earphones. The earphones will emit a “Bluetooth is off” message alert. Alternately, simply put the earphones in the charging case and the earphones will get into charging mode.

Functions:

1. Answering a call: When incoming call arrives, tap the left or right earphone touch control once to answer the call

2. Ending a call: Tap the touch control on the left or right earphone for 2 seconds to end the call
3. Rejecting a call: When a call comes in, tap and hold the left or right earphone touch control for 2 seconds
4. Redialing a phone number: Double tap on the right earphone touch control to redial the last dialed number
5. Activate Siri: Double tap on the left earphone touch control to activate Siri
6. Previous track: Tap and hold the right earphone touch control for 2 seconds while music is being played
7. Next track: Tap and hold the left earphone touch control for 2 seconds while music is being played

Charging and Battery Life:

1. Before using the earphones for the first time, charge the earphones by placing them into the charging case connecting to a USB cable. Charge for approximately 2 hours for optimum battery capacity. Red light flashes when the earphones are being charged and turns blue once they are fully charged.
2. The charging case consists of four green LED lights to display the power capacity, each green light indicates 25% battery life, the green LED light flashes according to the battery level. (For example, if the charging case is completely out of battery, the first green LED light will flash, after being charged, the first green LED illuminates, followed by the second green LED light). All four green lights illuminate when fully charged.
3. When the battery level reaches 30%, the red indicator begins to blink for every 5 seconds, and the battery low alert tone will be emitted every 60 seconds.
4. The charging case has a built-in battery. When the charging case is fully charged, earphones can be placed in it to charge directly without connecting to a USB cable. The LED light of the power display which is on the charging case will be switched off automatically 1 minute after the earphones are fully charged.
5. Please ensure that the original cable comes with the product is being used. Using an inappropriate charging cable may damage the earphones. The DC voltage must be 5V and the current must be 1A (5V/1A).

Please do not charge this product with power that is higher than 5V/1A or with a fast-charging device. Our company will not be responsible or liable for any product issue, any loss or damage as well as safety of our users caused by improper use.

6. The earphones employ built-in non-removable battery. Do not attempt to remove the battery from the earphones to avoid product damages.

Wearing your earphones

Please wear these earphones correctly, refer to the picture below.

Note: The following figure is only for reference.



Safety Notes:

In order to have a proper and safer use of the earphones, please read this user manual carefully before using the device and keep the user manual for further reference.

Pay attention to the following matters when using the earphones:

1. Please control the volume and usage time.
2. Do not use the earphones in a potentially hazardous environment to ensure safety.
3. Try to avoid using earphones to listen to music, make or answer calls while driving to avoid being distracted.
4. Keep the earphones out of reach of children to avoid accidents from improper use.
5. Try to avoid increasing the volume constantly which could block out the surrounding sound. Increasing too much of volume would cause tinnitus, please adjust to the appropriate volume.
6. If you feel obvious discomfort, irritation or other adverse reactions when using the earphones, please stop using them immediately.
7. Avoid storing or using the earphones in an environment where the temperature is below -15 ° C (5 F) or above 55 ° C (131 F), otherwise the life span of the earphones or the battery life may be affected.

FAQ:

1. Why are the earphones not able to be paired with my mobile device?

A: Please check if the pairing mode of the earphones are on or it could be paired with the former mobile device. Do check if the mobile device's Bluetooth search function is turned on; Do check the list of connected device under Bluetooth setting on the mobile device and delete other earphone connection records, next, follow the instructions to reconnect the earphones with the desired mobile device.

2. Why couldn't I activate the earphones?

A: Please check the battery level of the earphones, make sure the earphones are charged.

3. How to reset the device?

A: Take out the earphones from the charging case, tap and hold the multi-function touch control for 5 seconds to switch off the device (lights off). Hold both the earphone multi-function touch control for **20 seconds**.

4. Can I use the earphones while I am driving?

A: You can use the earphones for communication while driving. However, it is not recommended to wear both earphones while driving.

5. Will the earphones be disconnected when the distance exceeds 10 meters from the mobile device?

A: Since Bluetooth is a wireless technology, it is less sensitive when it comes to the objects/obstacles between earphones and the connected device. Check if there is any metal or other object that would affect the connection within the connection range.

SPECIFICATIONS

Frequency	2402-2480MHz
Bluetooth Version	Bluetooth V 5.0
Battery in earbud	Polymer Lithium: 3.7V 50 mAh
Battery in charging station	Polymer Lithium: 3.7V 600 mAh
Extreme Temperature	45 degrees max

FCC Statement:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- (1) Reorient or relocate the receiving antenna.
- (2) Increase the separation between the equipment and receiver.
- (3) Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- (4) Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION: RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.