

Vinyl record player




SAFETY INSTRUCTIONS

1. Read these instructions - All the safety and operating instructions should be read before this product is operated.
2. Keep these instructions - The safety and operating instructions should be retained for future reference.
3. Heed all warnings - All warnings on the appliance and in the operating instructions should be adhered to.
4. Follow all instructions - All operating and use instructions should be followed.
5. Do not use this apparatus near water - The appliance should not be used near water or moisture - for example, in a wet basement, near a swimming pool, or near other wet areas.
6. Clean only with a dry cloth
7. Do not block any ventilation openings. Keep at least 5 cm around the apparatus for sufficient ventilation. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Only use attachments/accessories specified by the manufacturer
10. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart or rack it used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
11. Unplug the apparatus during lightning storms or when unused for long periods of time.

Warning: To lower the risk of fire or electrical shock, do not expose the apparatus to rain or moisture. No naked flame sources such as candles shall be placed on top of the apparatus.

Caution: Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate this device. Usage of controls or adjustments or performance of procedures other than those specified here in may result in hazardous exposure.

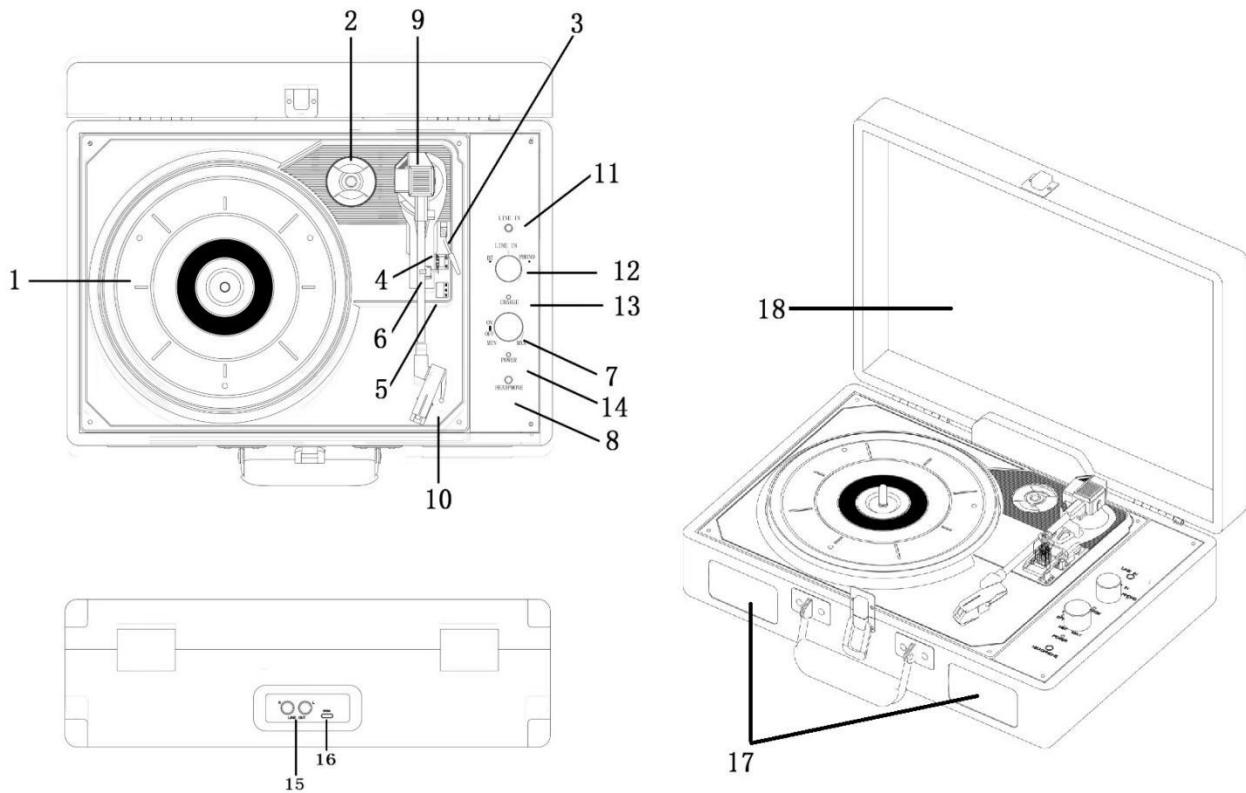

1. Turntable
2. 45 RPM adapter
3. Tonearm control
4. Auto stop control
5. Speed control
6. Tonearm lock clamp
7. Power and Volume
8. Headphone jack
9. Tonearm
10. Tone head
11. 3.5mm audio in
12. Wireless/Line in/PHONO
13. Power light
14. Working light
15. RCA audio out
16. Type C charge jack
17. Speaker
18. Case cover

RECORD PLAYER OPERATION

- 1.Rechargeable battery was built inside of speaker. We suggest the speaker is 100% charged before the first use.
- 2.Place the vinyl record on the turntable(1).
3. Set the correct speed (rpm) for playing your vinyl record (33/45/78 RPM). For 45 RPM drives, use the RPM adapter (2) .
4. Turn the knob (12) to PHONO,Turn on the power switch (7) of the turntable.
- 5.Open Tonearm Lock clamp(6) of the Tonearm,Lift Tonearm control(3),place the tonearm over the desired playback point on your vinyl record.drop Tonearm control(3) The tone head(10) will slowly drop,turntable will start playing the music.
6. Adjust the volume(7) of the speakers to the desired level.
7. When it reaches the end, the tonearm will stop automatically. You must put the tonearm back onto the clamping piece manually.
- 8.If you want to stop playing in the middle,please Lift Tonearm control(3),put the tonearm back onto the clamping piece manually.close Tonearm Lock(6),drop Tonearm control(3),then Turn off the power switch (7) .

Wireless CONNECTION

1. Turn on the record player, the Wireless will turn on automatically.
2. Make sure your Wireless enabled device (tablet, smartphone, computer) has the Blue-tooth switch turned on.
3. Go to your Wireless settings and check for the Wireless pairing name "S16' POP. Click to connect the device.
4. You should be able to connect to the record player now and play music.

HEADPHONE JACK

Connect your headphones to this output to listen to music. Headphones are not included with the turntable.

Note: When using headphones, sound will no longer come out of the speakers.

RCA AUDIO OUTPUT

It allows you to play the music from your turntable through external speaker. To make this connection you need an RCA cable that is not included with the turntable.

PLAYING 45 RPM VINYL RECORDS

Place the 45 RPM adapter on the center shaft. Carefully place a 45 RPM record on the turntable. Follow the turntable's operating instructions to start playback

HOW TO REPLACE THE NEEDLE HEAD

1. Open the tonearm clamp.
2. Remove the cartridge cover to expose the needle.
3. Carefully separate the cartridge from the cartridge holder.
4. Pull the audio lines carefully from the cartridge, taking care to pull the terminal connector and not the cable.
5. Carefully insert the audio lines.
6. Make sure that the audio lines do not touch each other.
7. Carefully slide and fix the cartridge into its holder.
8. To fit a new cartridge, repeat process 3 and 4 in reverse order.

Note: Take special care while changing the head to avoid damage to the boom or the audio cable. The turntable head should be replaced every 3 to 4 months of continuous use. Ceramic heads are easily found in specialist stores and websites.

CLEANING

1. We recommend to clean your records with an anti-static cloth in order to enjoy optimum playback quality and to help make them last.
2. For the same reason, your stylus should be replaced periodically (approximately every 250hours of total playback time).
3. Clean the dust on the stylus from time to time by using a very soft brush dipped in alcohol(brushing from back to the front of the cartridge)

FCC Caution.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

***RF warning for Mobile device:**

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.