



**SOLAU**首浪

**Smart watch**

**User manual**



- | Thank you for buying. To make this product in the best condition, please read this manual, and keep standby after reading. Specifications is just a functional diagram, maybe it is little different with physical , the product version you got shall prevail. The typing errors in this manual and discrepancies will be timely updated with the latest products. If we have updates, this manual will be subject to change without notice. Our company reserves the right of final interpretation.
- | It is strictly prohibited to disassemble the product.
- | It is strictly forbidden to put the battery in high temperature or dispose of battery in a fire, lest it may explode.

- | It is strictly forbidden to use something sharp to hit the screen.
- | It is strictly prohibited to use corrosive chemicals, detergents to touch this product.
- | It is strictly prohibited to expose this product for a long time under the sun, or too much smoke and dust.

## Contents

2. Disassemble charging diagram .....	4
1. The function introduction .....	5
2. Operation .....	6
2.1 Buttons .....	6
2.2 The main menu display and operation.....	6
3. Settings .....	7
3.1 Smart watch settings.....	7
3.2 Bluetooth settings .....	8
4. Push service application .....	8


## A. Product description

### § 1. Product appearance



### 2. Disassemble charging diagram



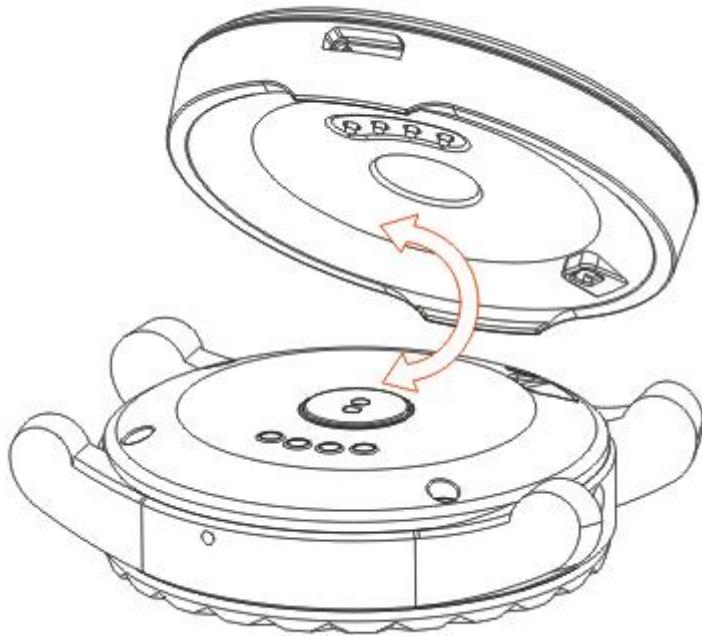

## B. Function operation

### 1. The function introduction

**Bluetooth:** blue tooth dial, sync contacts, call records, blue tooth MP3, Bluetooth remote control camera.

**Notice:** SMS, wechat, facebook, what APP, etc.

**More:** HD display, Nano glass, Steel metallic body, Changeable bands, camera, IP67Waterproof, Power saving mode, Anti-lost, Sedentary reminder, Alarm Clock, Calendar, Thermometer, ECG, smart home control, Sports pedometer, Records, Video, Stopwatch, etc.

## 2. Operation

### 2.1 Buttons

Long by the home button: turn on or off; short by: back by clicking and paddling screen to enter the main menu and Settings.

Press the home button to restart, If the screen freezed.



### 2.2 The main menu display and operation

#### 1. Display time, date, and week;

## 2. Three ICONS at the bottom



Paddling screen to enter the next menus.

## 3. Settings

### 3.1 Smart watch settings

1. BT Settings
2. Clock settings: you can set time and date
3. Sound settings

4. Volume settings

5. Display

6. Motion

7. Factory Reset

### 3.2 Bluetooth settings

1. First turn on blue tooth and make your device can be searched

2. The default name: S2 (can be modified)

3. Turn on your smart phone Bluetooth to Search this smart watch

4. Click to connect, then they will match, when you see the phone notice about matching, choose "yes" please.

### 4. Push service application

1. Download and install "Mediatek Smart Device" APK on smart phones to sync successfully.

1). Android phones can scan Two-dimensional code on the menu, to install directly, or you can search "Mediatek Smart Device" to downloaded and install. Watch – blue tooth connection - search to connect smart phone, after the

connection, enter the smart phone settings - auxiliary functions – “ Mediatek Smart Device” - open.



2). Iphone needs: Watch – blue tooth connection - search to connect smart phone, after the connection, enter the smart phone settings – Bluetooth- search service- find S2-connect, connect successfully.

2. Click on the install package, install the APP, then icon appears after the completion of the phone desktop;

3. Ensure the blue tooth connection of the smart phone and watch.

4. Click on the APK icon into the blue tooth notification Settings interface;

5. Click on the "auxiliary function Settings" to active "notice" blue tooth (blue tooth notice: enabled)

6. Choose the application that needs to be noticed.

## **C. Others**

1. It appears these problems: due to manufacturing, materials, design and other causes of product quality problems, when the product is in normal use within one year (since the day of purchase) we will offer free warranty.
2. About the fault caused by the user's personal reasons, we don't offer free warranty, as follows:
  - 1). Disassemble or refit the product.
  - 2). In the process of using immorality drop caused.
  - 3). All artificial damage or by third party negligence, misuse (such as: make water into the host, the external force shatter, scratch damage of peripheral components, etc.), is beyond the scope of the warranty.
  4. When ask for free warranty, please must provide a warranty card with the seal of purchase place and purchase date.
  4. When ask for free warranty, please take the product to the company or the company dealerships.
  5. All the features of the product in kind shall prevail.

**FCC Caution:**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.