# **User Manual**

Tablet PC

Model:XD-709

FCC ID:2AI5GXD-709

#### Attention:

This handbook contains important security measures and the correct use of the product information, in order to avoid accidents. Pls make sure to reading the manual carefully before use the device.

- Please don't use the Tablet PC when you are driving or walking down the street. Less than 5 years children use tablet should with parent or other adult.
- Please choose the appropriate volume, Use headphones should not be too big volume, If feel tinnitus, Lower the volume or stop using it
- Please don't be in high temperature, moisture or very dust place to use tablet, this will lead tablet broken, the work temperature will be  $(-10 \sim 40^{\circ}\text{C})$
- Avoid to fall or Violent collision of the device, don't make the TFT display screen were violent tremor, This could cause TFT display screen abnormal or damage.
- Don't disassemble the product, don't use alcohol, thinner or benzene to scrubbing products
- Don't use the device one of the places of prohibit to use electronic equipment in regional (such as the airport)
- The 26 letters of back case can not be put into mouth, avoid children to swallow
- The company reserves the right to improve product, products specification and design have any changes, The information is subject to changes without prior notice.

(This tablet without waterproof function)

- 【Remark】 All pictures in this manual is just for your reference. products specificati on and design have any change, The information is subject to changes without prior no tice.
- main function
- Operation systems: Android 4.4.4
- Processor: RK3126 cortex A9 CPU processor speed: 1.0GHz
  Memory: 4G FLASH
- RAM: 512MB DDR3
- WI-FI Function: Main chip ESP8089, 802.11b/g/n
- TF card: 128MB-32GB
- Display screen:7" Capacitive multi-touch
- Resolution: 1024\*600 TN (4:3)
- Dual camera: Front:1.3 Mega Pixels, Rear 5.0 Mega
- Battery and capacity: rechargeable Built-in type polymer battery, 2500mAh
- USB: 2.0
- G-sensor 3D
- Support Speaker

Video Format: MKV、AVI、MP4、MOV、VOB、DAT、FLV、3GP、VP8、RV、WMV、AVS、H.263HP

Music Format: MP3、WMA、OGG、APE、FLAC、AAC、WAV

Picture Format: JPG、JPEG、BMP、GIF

- Recording function: Format supported: WAV Format
- E-book Function: Format Supported: TXT、LRC、PDF、Html、Htm、EPUB(Max capacity:20M)
- Languages: Chinese English, Japanese French German Spanish Russian, etc.



## 1. Appearance and button:



## (1) Power:

Start up: Long Press the power button about 5 seconds to start up. The system will enter the Home Screen.

Shut down: In the main menu interface, Press the power button about 5 seconds to shut down, The system can hint "power off" option, Click"ok". you can safely shut down. Lock screen: Short press Power button to lock screen or unlock screen.

Remark 1. When power is empty, system will shut down automatically.

2. Illegal turn off the device,restart will scan and restore the disk,it may take longer time to enter into system

(1) (2) V+, V -

the buttons on top Volume +, Volume-achieve changes in the volume.

(3) Photo

In the interface after unlocking, press the camera button, fast, into the camera interface, then it is the camera function.

(4) Back

In current use interface, click the BACK button, rapid return to the main interface.

(5) Reset

Press the reset button, the machine must restart the system

(6) IC record jack, when recording the voice will recorded

(7) USB jack

Micro 5PIN USB jack: you can use it to connect the computer for data transmission, charging and external connection USB flash drive

(8) DC-IN

Use 5V 2A charger to recharge the machine. (No.8 Can delete, new kidzy70 no this function)

(9) Micro SD card

Micro SD-CARD solt: external T-FLASH card

- (10) Earphone jack,
  - 3.5 mm standard earphone jack
- (11) Camera

Front 1.3 Mega , Rear 5.0 Mega

(12) Touch panel

7"Capacitive touch panel: In The Operation, to click, dragging on the touch panel

#### 2 First use

2.1 Battery management and charge

Before first use, please charge the battery fully

Connect the USB, then you can charge, At the first three times charging please keep about 8-10 hours, after that you just need 4-5hours to charge.


[Remark]: This tablet using Built-in type polymer battery, Charge must be to choose standard adaptor (Input:  $50 \sim 240 \text{V AC } 50/60 \text{Hz Max}$ : 180 mA. Output:  $DC5.0 \sim 5.5 \text{v} 2a$ ), during the charging, the battery icon will scroll. When charging finished, battery icon will become green and stop rolling. In order to prolong the service life of the device, it is suggested to use up battery power before charging.

【Remark】: 1. If you don't to use this Tablet for long time ,please charge the battery. Charge it for some time till the battery has enough power to enter into main menu.

- 2.2. After low battery shut down, the device cannot start up and it will remind low battery, charge it for some time till the battery has enough power to enter into main menu.
- 2.3 If use the device when charging, power consumption of device and screen will result in longer charging time. Charge the device in standby or shut down status that will save time to charge full.

#### 2.4 Connection with PC

You can use a USB cable to connect device with PC, device will pop up the USB connection window, click Turn on USB storage to connect PC If it can not be connected, go to

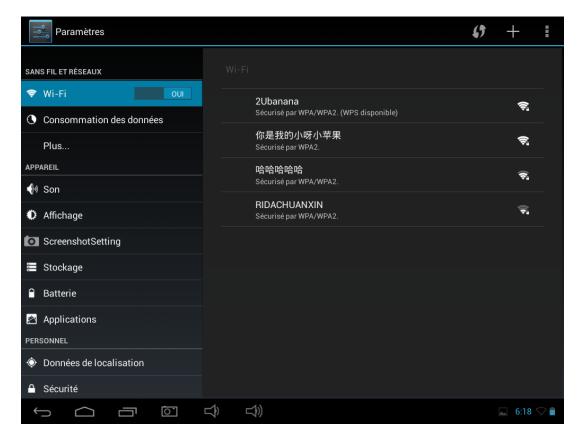


**Create Mofing Account**: insert effective mailbox and password. Please do remember your account and password. If you forget your password, please insert your mailbox in below address to set up new password.

http://market.mofing.com/users/forgot

or if have any question, please send mail to

mofingkids@million-e.com.cn

This user guide is a standard model. It should be adapted according to your hardware and Android version.

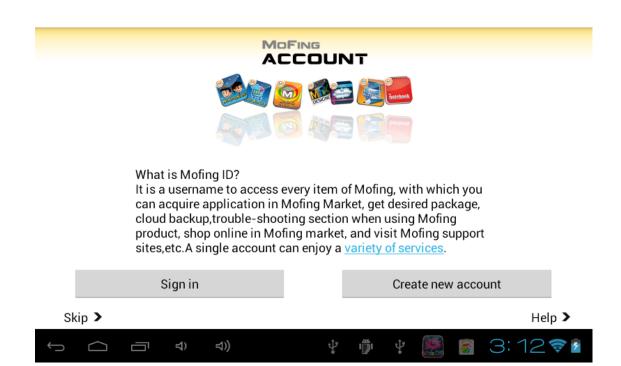

CAUTION: You should now have a few things written down in a safe place, this could be stored in the contact list of your smartphone

- MOFING ACCOUNT EMAIL
- MOFING PASSWORD
- PARENT CONTROL PASSWORD

### 3 Home page




The Home Page gives you access to 6 mains categories and to 8 other functions:

- 1- Overview of the 6 main functions and 8 other categories:
- a. Primary School: learn with fun (courses sheet, educative games...)
- b. Study Abroad: play to fun overseas education contents
- c. Kindergarten: dedicated for 2-5 years kids
- d. TV Mofing: hours and hours of kids videos
- e. Navigate: Watch widest cartoon. And Parents can add suitable website link for kids in
- "Parent setting online content", and then kids can browse these filtered website here.
- f. E-challenge: testing on line, more than 300apps.
- 1. Present: Mofing release gifts for members, parents buy mofing gifts for kids
- 2. Online courses: consumer will see course near future.
- 3. Consulation: students can ask questions online for teachers near future.
- 4. Log in: create account and review Member's Privileges
- 5. Parental control: Parents can control the use of the tablet
- 6. Music: listen and enjoy your own music
- 7. Photo: find all your pictures
- 8. Video: watch all your own videos


### 2- Market, add / delete applications

In the 2 mains categories—Primary school, Kindergarten, you have to download applications from the corresponding market. To reach the market, press on the market icon to download and install market base on connect wifi.

if you have an account already. Then, your favourite application in below will be downloaded automatically.

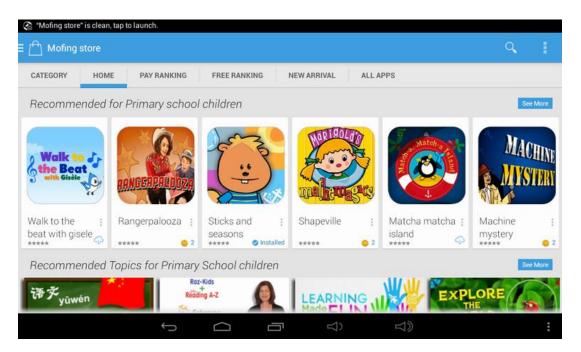

 If you want to delete an application, press on the trash which is present in each category:



A with yellow background will appear at the top of each application, select those you want to delete.

The markets of each category are updated automatically. When an update is ready, you just have to confirm this by pressing on the button "update" of the message which will display automatically.


## 2- Web apps, add to favorites/ delete favorites


a -1 Primary school category->online contents, you will see below a lots web contents in different category(by class, by course, by grade) like science, math, language art etc.



a-2 E-challenge(testing for primary school programme online)



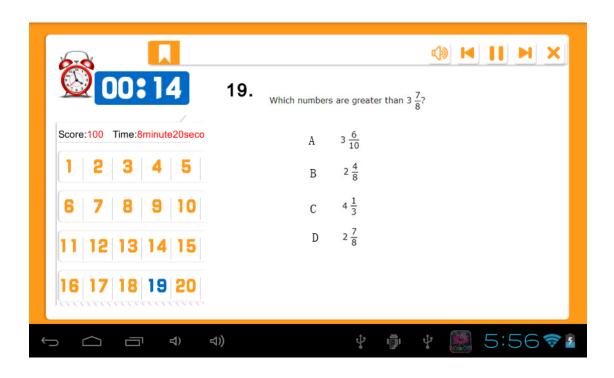

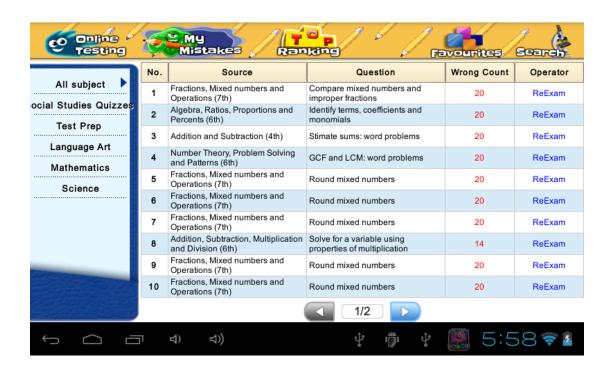

a-3 kindergarten category->online apps, you will see different category by subject, by class



b. If you want to add to favorites, press on the appear at the top of each application, select those you want to add. A will

c. If you want to delete an application, press on the Delete to delete. A little with yellow background will appear at the top of each application, select those you want to delete.

### 3-The 8 other basics functions

#### a-Video

To open the video gallery, press the corresponding cloud button on the top of the home page.


## 1-How to view all the videos in my gallery?

When you are in the video gallery, simply swipe the screen with your finger from right to left to go forward in the list, or from left to right to go backwards in the list. You can easily navigate through all the different pages of videos that way.



## 2-How to watch a video?

Press on the video you want to watch, it will launch the video Player. Then you can use the controls of the player.

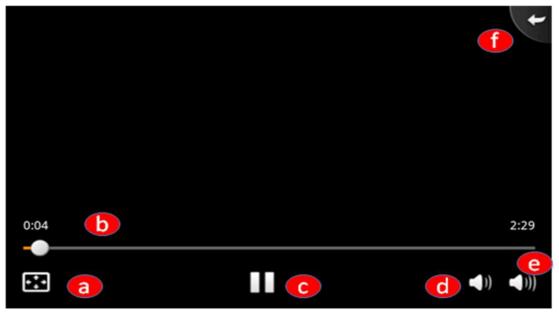


- a- Press on this button to watch your video in full screen or not
- b- Press on the small round if you want to go forwards in the movie.
- c- Play / Pause: When a video is playing, press to pause it. Press again to resume.
- d- Volume button: Press it to get a lower sound.
- e- Volume button: Press it to get a louder sound.
- f- Press this button to go backwards.

# How to upload or delete a video in your software kids? Refer to page 16 5) How to transfer documents via USB?

#### b-Photos


To open the photo section, press the corresponding icon on the top of the home page.

To see your pictures, just move your finger on the screen from right to left to go forward in the list of pictures, or from left to right to go backwards in the list of pictures.

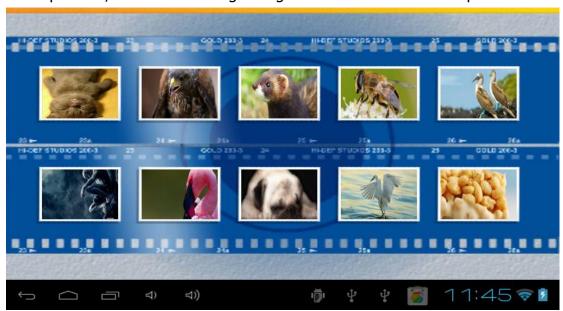

# How to upload a picture in your software kids? Refer to page 18 5) How to transfer documents via USB?

To delete a picture, press on one to be on full screen. Then press another time, and a trash will appear.

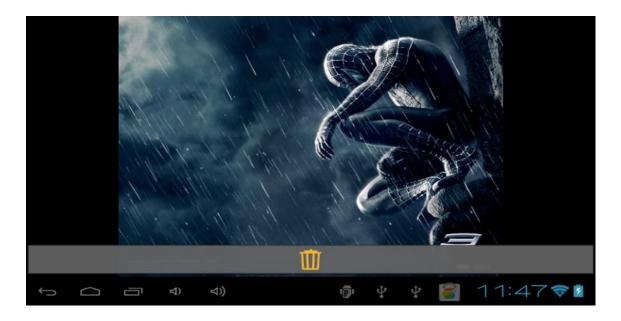

## c-music



To open the music library, press "play button" to play and pause, the background change automatically.

How to upload / delete music in the software kids? Refer to page 18 5) How to transfer documents via USB?

## **d- Parental control**

After you entered you password, you can access to the parental control home page. Just select the option you want to check or modify.

#### 1-Password




In this section, you can choose to get a password to reach the parental control category. In set password, **select "Password control "first**, then write your new password and confirm it. If you want to change your password, just write your old password before your new one.

#### 1- APP manager



in the section, select category(Game, Education,Book)which you want, and then select app and press save, finish above, that application will appear you selected category.

#### 2- Online Navigation

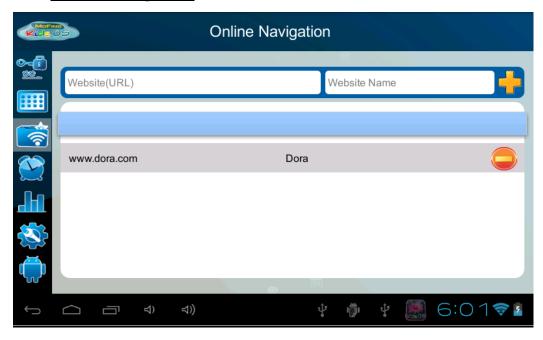

Parent can add suitable website link for kids in "Parent setting – online content", and then kids can browse these filtered website in "Navigate".


## 3- Time management



With this option you can just chose how long you want Mofing Kids to be use per day. First select the maximum of hours you want the interface to be active. You can then chose an

interval of hours during which the kid is able to use Mofing. Finally, press on the last arrow to select the later the program can be used.

## **4-Statistics**

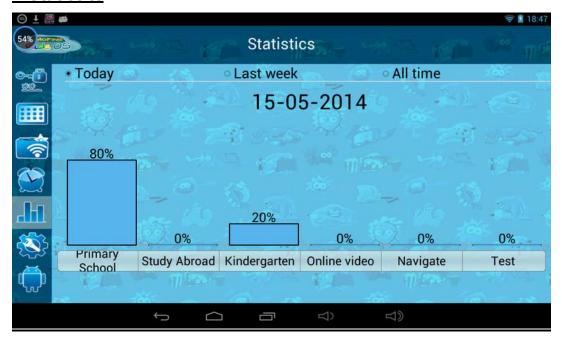


Thanks to this function, you will be able to check with details what the kid does with the device. Just select if you want a report from the last week, today or all time.

## 5- How to transfer documents via USB?

In order to do that, first connect your tablet to your computer with the cable provided in the packaging.

Then access the Settings, press on the "USB Connection" icon and press on "connect USB storage".

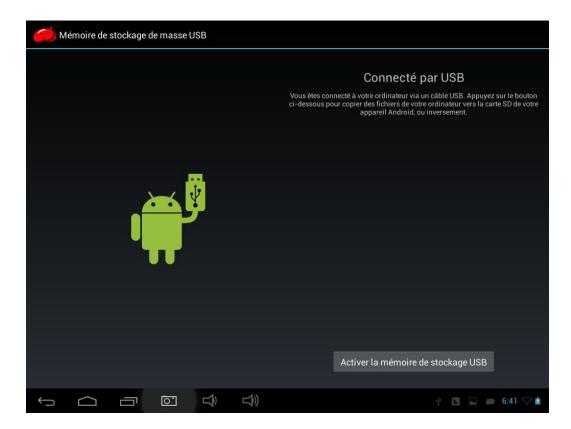

Now your tablet should appear on your computer's list of connected devices. Every different kind of documents can be placed in specific folders.

## a) upload music, videos and photos

- Copy music in the folder "music\_kids",
- Copy videos in the folder "video\_kids"
- Copy photos in the folder "photo\_kids".

#### b) Delete documents.

If you want to delete some documents, proceed the same way and cut the documents you don't want to see any more in the various folders.

For the formats that can be accepted for every kind of documents, it depends on your Android device so please check it in the manual of your hardware

#### **6- More information**

Enjoy Mofing Kids experience!

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- —Reorient or relocate the receiving antenna.
- —Increase the separation between the equipment and receiver.
- —Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- —Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.