 
 
 
 



 


 
 


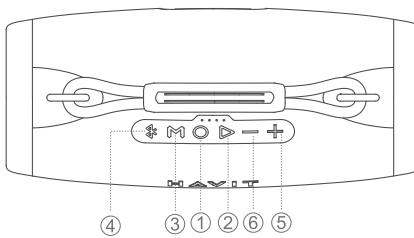 
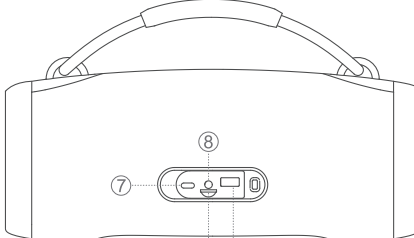 
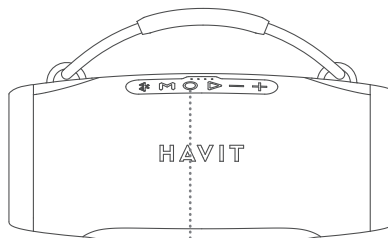 
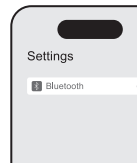 

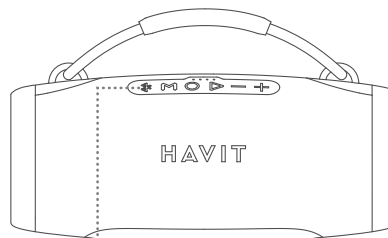 
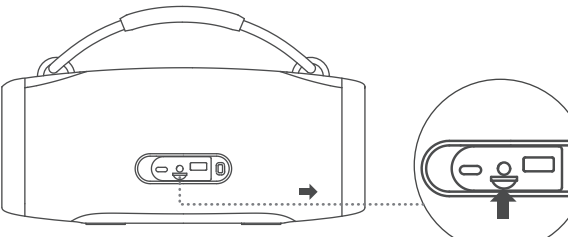 
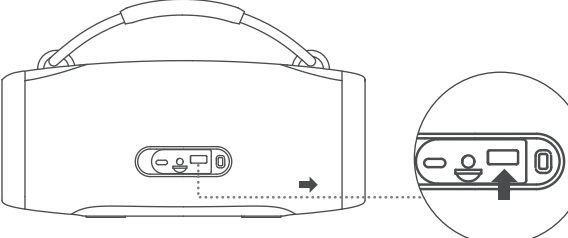 
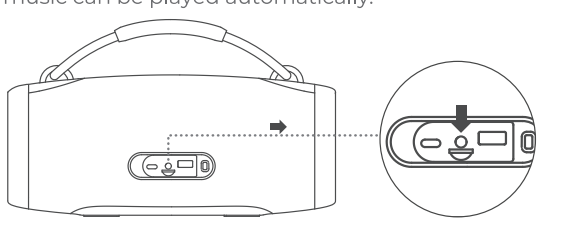 
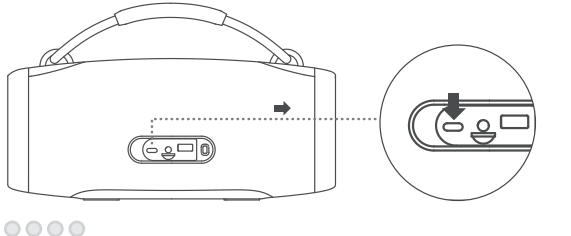 



 
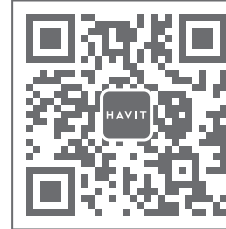 


120 mm

Answer/ End the call		Press once
Reject the call		Press and hold for 2S
Redial the previous number		Press twice
Reset TWS Pairing		Press and hold for 8S
Volume down		Press once
Previous song		Press and hold for 2S
Volume up		Press once
Next song		Press and hold for 2S

<h1>HAVIT</h1>  <p>SK960BT BLUETOOTH SPEAKER</p> <h2>USER MANUAL</h2>	<h3>Package Content</h3>  <p>Speaker *1</p>  <p>Type C Charging Cable *1</p>  <p>3.5mm Audio Cable *1</p>  <p>User Manual *1</p>  <p>Warranty Card *1</p>	<h3>Product structure:</h3> <ol style="list-style-type: none"> Power button Play/Pause button Mode button Bluetooth button Volume up/ Next song Volume down/ Previous song Charging port AUX port TF card port USB port  	<h3>Power On/Connection</h3>  <p>On: Press and hold for 3S White light on Off: Press and hold for 3S</p>  <p>Turn on Bluetooth on your device</p>  <p>Select HAVIT SK960BT and connect it.</p>	 <p>Bluetooth button Disconnection: Press once Bluetooth button Press once again can reconnect it</p> <p>Note The speaker will be automatically connected to the last paired device as soon as you turn it on.</p>	<h3>TWS Dual Devices Connection</h3> <ul style="list-style-type: none"> • Turn on two speakers, and entering Bluetooth mode but not connect to your device. • Press and hold for 2S Bluetooth button and there are 2 voice prompts.After 2nd prompt, both speakers are paired each other. • Turn on Bluetooth of your device and select "HAVIT SK960BT" to connect. <p>Now your device is connected to two speakers. * Press and hold for 2S Bluetooth button can disconnect two speakers connection.</p> <h3>Function</h3> <table border="1"> <thead> <tr> <th>Power on/off</th> <th>[Power Icon]</th> <th>Press and hold for 2S</th> </tr> </thead> <tbody> <tr> <td>Light switching</td> <td>[Light Icon]</td> <td>Press once</td> </tr> <tr> <td>Mode switch</td> <td>[Mode Icon]</td> <td>Press once</td> </tr> <tr> <td>Clear Bluetooth pairing</td> <td>[Clear Icon]</td> <td>Press and hold for 8S</td> </tr> <tr> <td>TWS pairing/disconnect</td> <td>[TWS Icon]</td> <td>Press and hold for 2S</td> </tr> <tr> <td>Disconnect/Connect Bluetooth</td> <td>[Disconnect Icon]</td> <td>Press once</td> </tr> <tr> <td>Play/Pause</td> <td>[Play/Pause Icon]</td> <td>Press once</td> </tr> </tbody> </table>	Power on/off	[Power Icon]	Press and hold for 2S	Light switching	[Light Icon]	Press once	Mode switch	[Mode Icon]	Press once	Clear Bluetooth pairing	[Clear Icon]	Press and hold for 8S	TWS pairing/disconnect	[TWS Icon]	Press and hold for 2S	Disconnect/Connect Bluetooth	[Disconnect Icon]	Press once	Play/Pause	[Play/Pause Icon]	Press once			
Power on/off	[Power Icon]	Press and hold for 2S																											
Light switching	[Light Icon]	Press once																											
Mode switch	[Mode Icon]	Press once																											
Clear Bluetooth pairing	[Clear Icon]	Press and hold for 8S																											
TWS pairing/disconnect	[TWS Icon]	Press and hold for 2S																											
Disconnect/Connect Bluetooth	[Disconnect Icon]	Press once																											
Play/Pause	[Play/Pause Icon]	Press once																											
<table border="1"> <thead> <tr> <th>Answer/ End the call</th> <th>[Call End Icon]</th> <th>Press once</th> </tr> </thead> <tbody> <tr> <td>Reject the call</td> <td>[Reject Icon]</td> <td>Press and hold for 2S</td> </tr> <tr> <td>Redial the previous number</td> <td>[Redial Icon]</td> <td>Press twice</td> </tr> <tr> <td>Reset TWS Pairing</td> <td>[Reset Icon]</td> <td>Press and hold for 8S</td> </tr> <tr> <td>Volume down</td> <td>[Vol Down Icon]</td> <td>Press once</td> </tr> <tr> <td>Previous song</td> <td>[Prev Song Icon]</td> <td>Press and hold for 2S</td> </tr> <tr> <td>Volume up</td> <td>[Vol Up Icon]</td> <td>Press once</td> </tr> <tr> <td>Next song</td> <td>[Next Song Icon]</td> <td>Press and hold for 2S</td> </tr> </tbody> </table> <h3>Mode Switch</h3> <p>Inserting TF cards,USB Flash Drive or connecting audio cable to the speaker then you can press power button to switch different mode by turn.</p>	Answer/ End the call	[Call End Icon]	Press once	Reject the call	[Reject Icon]	Press and hold for 2S	Redial the previous number	[Redial Icon]	Press twice	Reset TWS Pairing	[Reset Icon]	Press and hold for 8S	Volume down	[Vol Down Icon]	Press once	Previous song	[Prev Song Icon]	Press and hold for 2S	Volume up	[Vol Up Icon]	Press once	Next song	[Next Song Icon]	Press and hold for 2S	<h3>TF/SD card mode</h3> <p>Insert a card to the speaker and it can play music automatically.</p>  <h3>USB mode</h3> <p>Insert a USB flash drive to the speaker and it can play music automatically.</p> 	<h3>Aux in mode</h3> <p>Connect the speaker to a music player/mobile via 3.5mm audio cable (provide as accessory) and the music can be played automatically.</p>  <p>* Speaker previous/next song is not available in Aux in mode.</p> <h3>Charging</h3>  <p>●●●● The Battery indicator light shows power level25%, 50%, 75%, 100% Power less than 25%: red light on</p> <p>Note When charging, the electric lamps are listing in a cycle. When fully charged, all electric lamps stay light on.</p>	<h3>Safety Tips</h3> <ol style="list-style-type: none"> Please follow the instruction to operate the product. Please store or use the product in a normal temperature environment. Please keep the product from heat source, such as radiators, hot air regulators, stoves, or other heat generating instruments as it is not anti-high temperature. Do not jam the ports of the product, such as charger port, LED port and TF card port. In order to protect your hearing and extend the product lifetime, it is not recommended to adjust the volume to the maximum level for a long time. <h3>Batteries:</h3> <p>A warning that batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the light.</p> <ol style="list-style-type: none"> Replacement of a battery with an incorrect type that can defeat a safeguard. Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion. Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas. A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas. 	<h3>FCC ID: 2AIG-SK960BT</h3> <h4>FCC Requirement</h4> <p>Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.</p> <p>Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:</p>	<ul style="list-style-type: none"> - Reorient or relocate the receiving antenna. - Increase the separation between the equipment and receiver. - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. - Consult the dealer or an experienced radio/TV technician for help. <p>The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.</p>      <p>www.havitsmart.com</p>
Answer/ End the call	[Call End Icon]	Press once																											
Reject the call	[Reject Icon]	Press and hold for 2S																											
Redial the previous number	[Redial Icon]	Press twice																											
Reset TWS Pairing	[Reset Icon]	Press and hold for 8S																											
Volume down	[Vol Down Icon]	Press once																											
Previous song	[Prev Song Icon]	Press and hold for 2S																											
Volume up	[Vol Up Icon]	Press once																											
Next song	[Next Song Icon]	Press and hold for 2S																											

尺寸(Size): 100 X 120 mm