

# Action Camera Instruction Guide

MODEL NO.: PAC1908-DG



## Warning

- 1.It is high-precision product, do not fall or crash.
- 2.Do not expose the unit to strong magnetic objects, such as magnet and electrical motor. Avoid strong waves. Strong magnetic fields may cause the product breakdown or images and sounds damage.
- 3.Never leave the products exposed to high temperatures and direct sunlight.
- 4.Please choose branded Micro SD card .Neutral cards are not guaranteed to work normally.
- 5.Do not place Micro SD card near strong magnetic objects to avoid data loss.
- 6.In case of overheating, smoke, or unpleasant smell in the process of charging unplug your device to prevent fire hazard.
- 7.While it is charging,keep the product out of children's reach. Power line may cause children accidental electric shock.
- 8.Keep the device in cool, dry and dust-proof places.

**Warning:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ☐ Reorient or relocate the receiving antenna.
- ☐ Increase the separation between the equipment and receiver.
- ☐ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ☐ Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions : (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Shielded cables must be used with this unit to ensure compliance with the Class B FCC limits.

### Preface

This product is a high-definition digital motion video recording device tailored to market demand. It has a variety of industry-leading features including digital video recording, Photo shooting, audio recording, video display and detachable battery. which makes it has a variety data recording photo-shooting. outdoor sports, home security. deep-water probing, etc., allowing you to film at anytime, anywhere. and it has a variety of patents.

 
Multipurpose

 


### Product Features

- >A water-resistant casing that allows you to film fascinating water sports, water-resistant up to 30 meters under water
- >High definition screen that displays and replays fascinating videos recorded
- >Detachable battery that is easy to replace and prolongs your camera's service life
- >Video recording while charging
- >Video recording with battery
- >12-megapixel HD wide-angle lens
- >Web camera
- >Support storage cards up to 32 GB maximum
- >Multiple video recording formats: 720P/ VGA
- >Recorded in AVI format
- >Multiple photo shooting modes: Single shot, Snapper
- >Video encryption enabled
- >Mini appearance diversified colors available.

# Picture of product

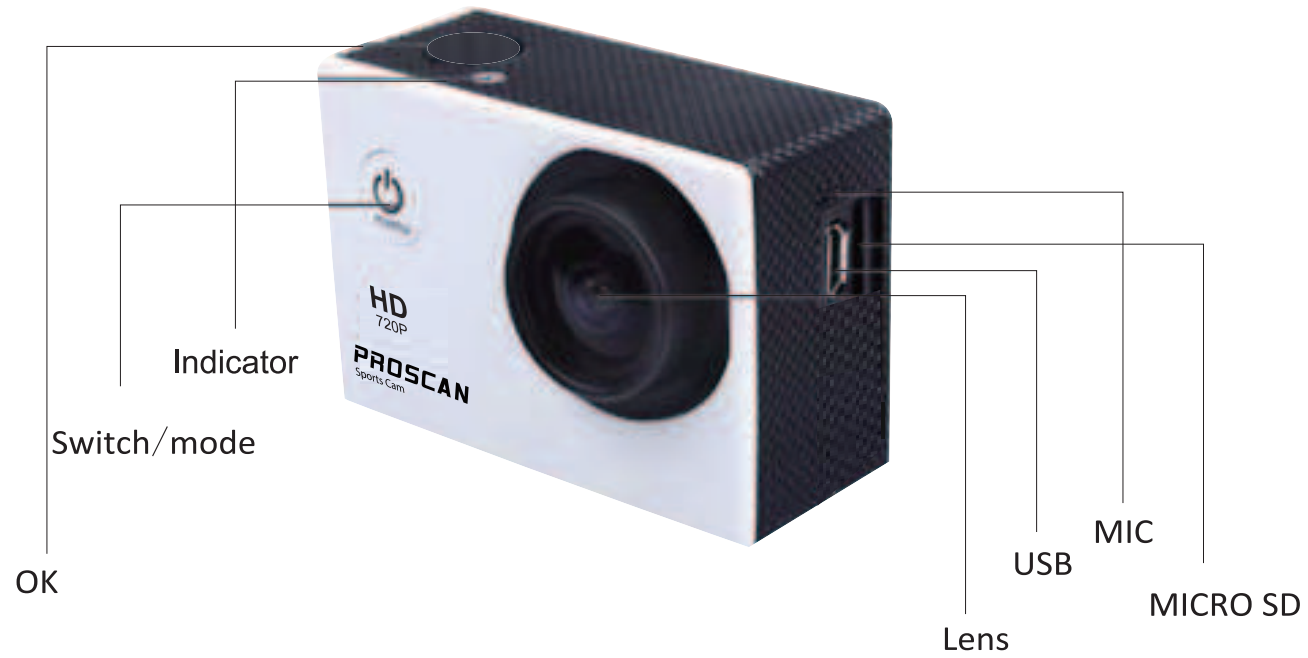


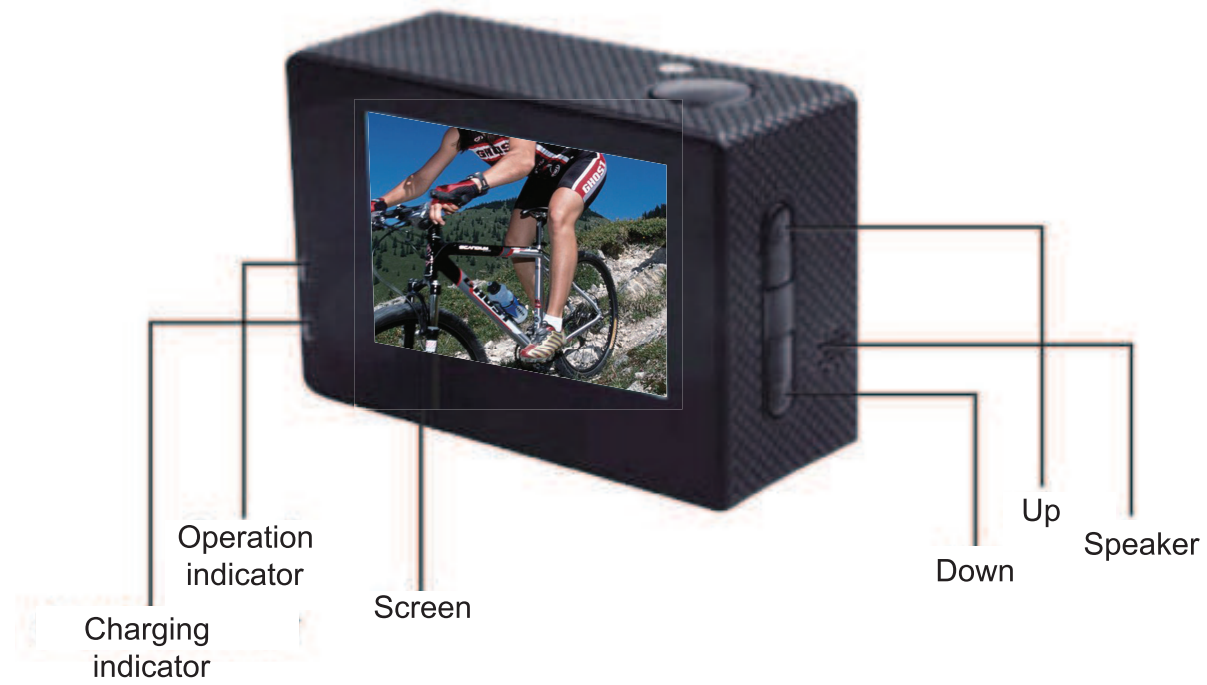



Battery cover

## Picture of waterproof case

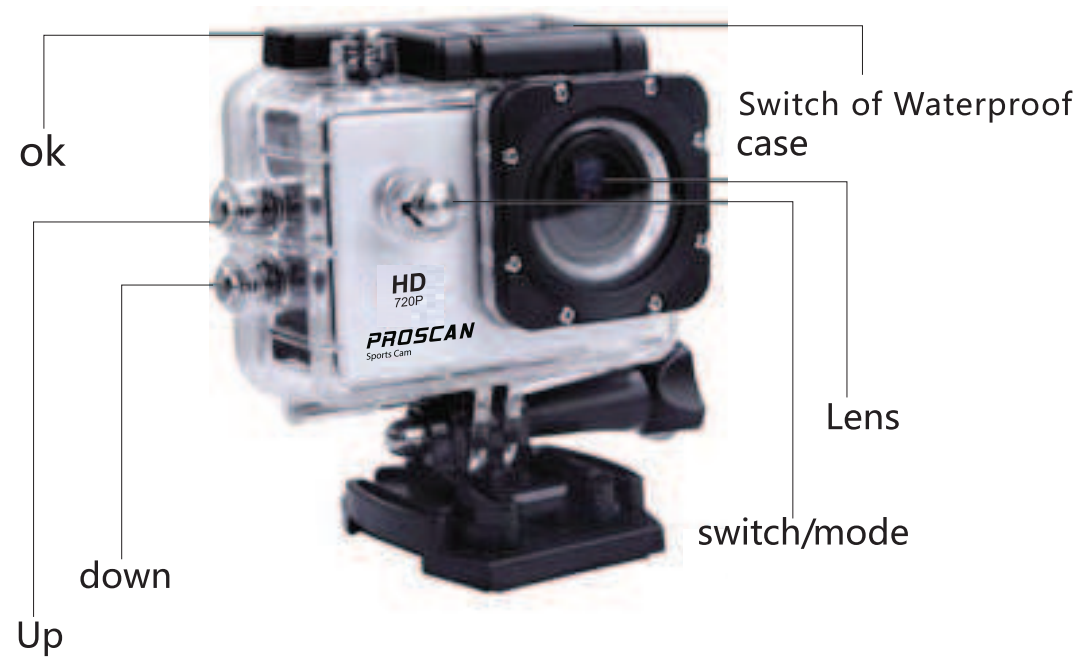 

# Accessories



Waterproof  
Housing



Handle Bar/Pole  
Mount



Mount 1



Mount 4



Mount 3



Mount 2



Bandages



Battery



Adhesives

 


USB Cable



Manual



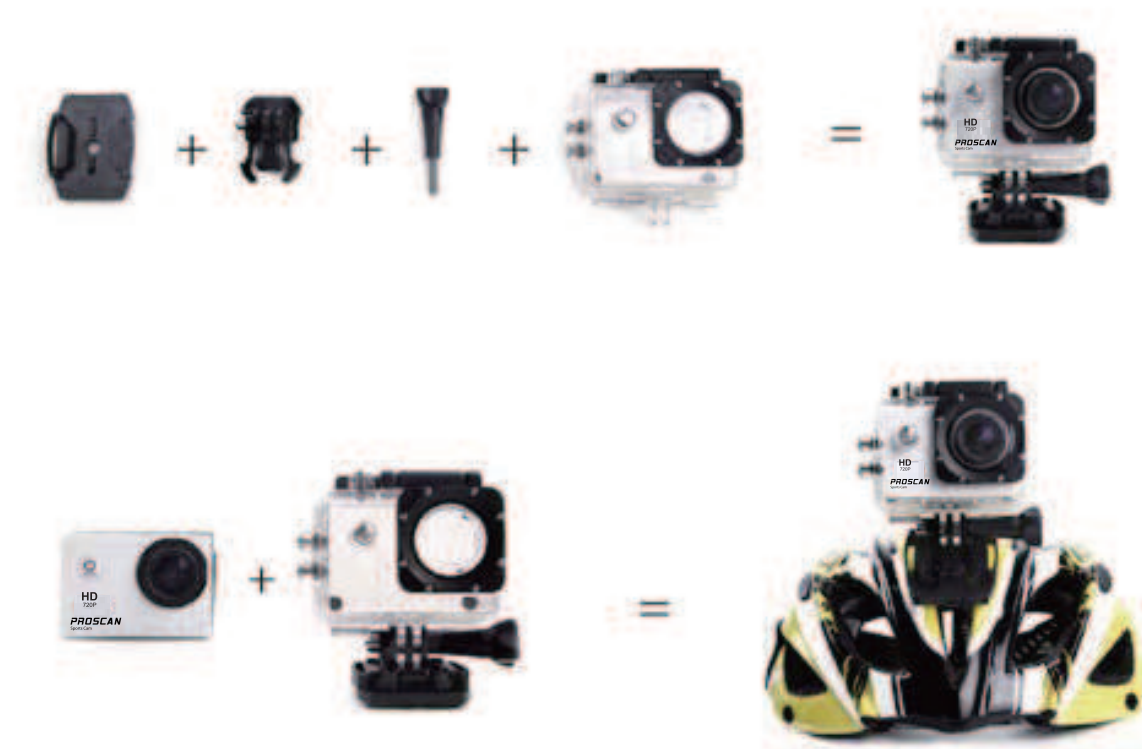

### 1.Inserting Micro SD Card

Note: please choose branded Micro SD card and format it on computer before use, Neutral cards are not guaranteed to work Normally.

### 2.Installing and removing batteries

- A. press on battery cap to open it
- B. Correctly install battery into camera as indicator by +/- symbol and direction of arrows marked on battery until it's in place
- C. Battery Gauge Please refer diagram
- D. Remove Battery Open cap to take Battery out

### 3.Charging




- A. Charging can be done by either connecting PAC1908-DG to computer or power adapter
- B. Charge PAC1908-DG on vehicle by connecting in to car charger
- C. PAC1908-DG can record video while charging (switch into Vehicle-mounted Mode in "Menu")
- D. Charging of PAC1908-DG can be done even when it is powered off

### 4. switching camera on and off

- A. Press and hold power switch for 3 to 5 seconds to turn it on/off
- B. Switch it on and off by turning display screen on and off

### 5 Mode Switching




Switch between Video recording/photo shooting/playback/menu by pressing "Power on-off" button

 recording mode, while  photo shooting mode, Symbols are displayed on top of screen  refers to the function

of video playback, and the last one is system settings

### 6 How to record videos and configure recording setting

#### 1. Video Recording

switch to recording mode and there'll be an  icon in the upper left corner of the screen, press OK to start recording and the  icon in the upper left corner will start to flash, Press "OK" again if you want to stop and the  icon will disappear

#### 2, Photos shooting & Settings


Switch the camera on and press "Mode" to select "Photo shooting Mode", there 'll be an  icon in the upper left corner of display screen and the camera is in

photo shooting mode. Press “Ok” to take photos.

3. File storage & Playing, use a USB cable to export the videos onto a computer to play. or you can take the Micro SD card out and access the image data with card reader

Liquid Crystal Display (LCD)	2.0LTPS
Lens	90°A+HD wide-angle lens
Language Options	English/German/French/Spanish/Italian /Chinese Traditional/Chinese Simplified/ Russian
Video Format	AVI
Storage	Micro SD
Frequency of Optical Source	60Hz
USB Interface	USB2.0
Power Source Interface	5VIA
Battery Capacity	400MAH
Recording Time	720P / About 90minutes
Charging Time	About 3hours
Operating System (OS)	Windows XP/Vistaor Above/Win7/ Mac OS
Dimension	59.27*41.13*29.28

Note: Specifications could be subject to modification due to updating or updating. Please regard the actual product as the standard form.

