


Ekster Finder Card User Manual

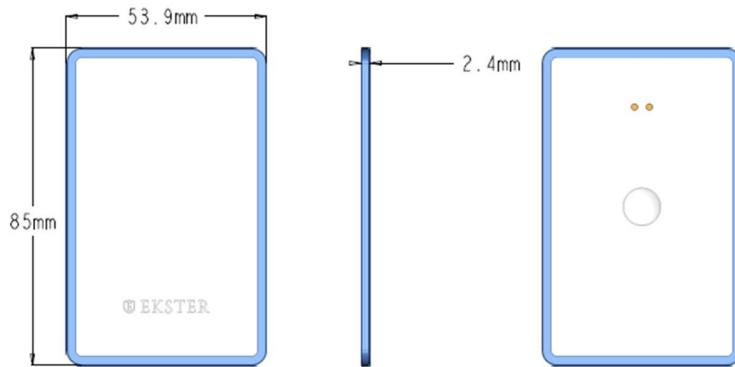

Charge the card

- Connect the cable to the card for charging, Charge the Card for, at least, 2 hours.

Enable pairing mode

- Press the button once. The LED is flashing, indicating that the Card is ready for pairing.
(Remark: The tag will turn OFF if not pair within 10 mins)
- From IOS device, launch Find My.
- Under “Items”, select Add Item.
- Select “Other Supported Item”. Your device will now search for “Ekster Finder Card”
- As soon as you see “Ekster Finder Card” display on your device, follow the on-screen prompts to complete the pairing process. A tone is heard from the Card.

Factory reset

- Press the button 3 times and on the fourth time press and hold the button.
- A tone is heard.
- The Card is in pairing mode until it is paired.
(Remark: The tag will turn OFF if not pair within 10 mins)

Learn more

- Press the button one time.
- Tap “Continue On Website” for more information including any Lost Mode message from the owner and serial number of the card.

Instructions for disabling

- Press the button 2 times and on the third time press and hold the button.
- The LED shall turn off after a while.
This will stop sharing the location of this card.

FCC statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

CE Statement

We declare that this device is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU.

Our product does not contain the AC/DC adapter. You need to purchase an DC 5V/1A adaptor which compliance with the directive 2014/30/EU.

The adapter shall be installed near the equipment and shall be easily accessible.

CAUTION: RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.