
Introduction

Thank you for purchasing South Park™: The Fractured but Whole™ RC Coon Mobile by Ubisoft Inc.

As the world plummets into despair. The Coon fights to keep order intact. Your RC Coon mobile is a device controlled unit that can say twelve sentences while you move from place to place. It can turn, spin, move forward or backwards. Fight crime, be the symbol of your town and be the hero every town needs. With your RC Coon Mobile, South Park™ is safe, until next time!

Take a few minutes to look through this user manual.

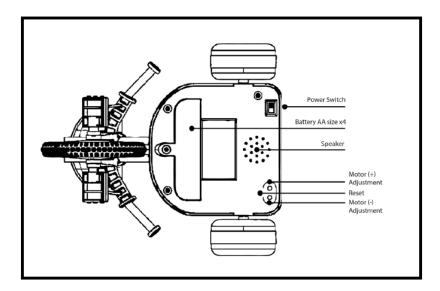

Please note the following when operating South Park™: The Fractured but Whole™ RC Coon Mobile:

- Do not immerse RC Coon Mobile or any parts in water or any other form of liquid.
- Do not drop, throw or kick RC Coon Mobile as this may damage mechanical functions.
- Do not allow the tricycle to roam freely or leave unattended near edges from which RC Coon Mobile could fall.


Battery Information

Installing or changing batteries in South Park™: The Fractured but Whole™ RC Coon Mobile:

- 1. To change the batteries, carefully hold RC Coon Mobile upside down. Do not place RC Coon Mobile where it could easily fall. RC Coon Mobile requires 4 x "AA" size batteries (not included).
- 2. Use a screwdriver (not included) to remove the screw on the battery compartment cover located on the bottom of the RC Coon Mobile.
- 3. Insert the batteries according to the diagram. Ensure that the positive and negative polarities match the illustrations inside the battery compartment.
- 4. Replace the battery compartment cover and tighten screw using the screwdriver. Do not overtighten.

Important Battery Information:

- Use only fresh batteries of the required size and recommended type.
- Do not mix old and new batteries, different types of batteries or rechargeable batteries of different capacities.
- Please respect the correct polarity, (+) and (-).
- Replace all batteries of the same type/brand at the same time.
- The supply terminals are not to be short-circuited.
- Remove exhausted batteries from the RC Coon Mobile.
- Remove batteries if the RC Coon Mobile is not going to be played with for some time.

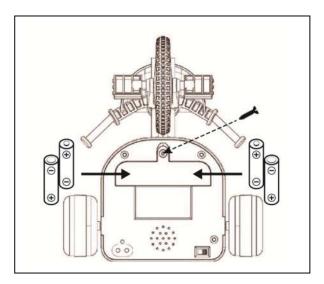

Low Battery Indicators:

When the batteries grow weak, RC Coon Mobile will start to move slowly. When this occurs, power OFF and replace all batteries.

South Park™: The Fractured but Whole™ RC Coon Mobile Front



South Park™: The Fractured but Whole™ RC Coon Mobile Side





Getting Started

- 1) With the batteries inserted, locate the power switch on its bottom and activate RC Coon Mobile by toggling it to ON.
- 2) Carefully place RC Coon Mobile upright on its wheels on a flat and smooth surface, away from edges and obstacles.

Activities


- 1) Use the App to drive the RC Coon Mobile forward, backward, left or right.
- 2) Select a sentence from the quote list and press the red button to activate the RC Coon Mobile to speak.

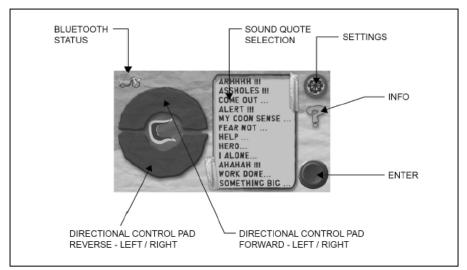

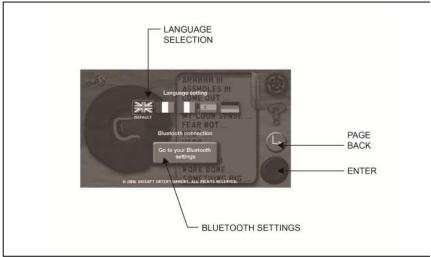

APP Functionality

South Park™: The Fractured but Whole™ RC Coon Mobile is equipped with BLE connectivity and can interact wirelessly with an iPhone 5 and above or select Android BLE enabled devices. Apple devices must be running IOS7 or above. Android devices must be running Android 5 BLE or above.

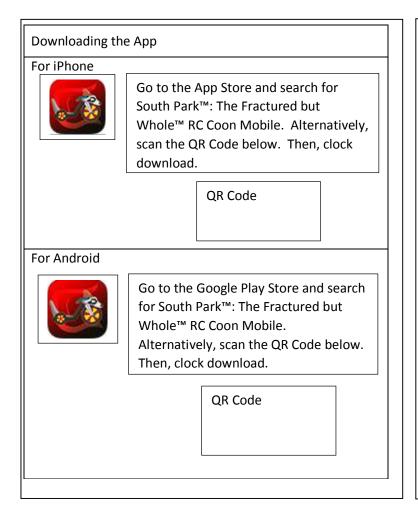

Connecting to RC Coon Mobile with your device

- 1. Turn RC Coon Mobile On as instructed in Getting Started
- Open the South Park™: The Fractured but Whole™ RC Coon Mobile App on your device
- The App will bring up your RC Coon Mobile's ID in a list of available devices.
- 4. Follow the on-screen instructions to augment RC Coon Mobile's motion and sound.





Care & Maintenance

- 1) Keep the unit clean by wiping it with a slightly damp cloth.
- 2) Keep the unit out of direct sunlight and away from any direct heat source.
- 3) Remove the batteries when the unit is not in use for an extended period of time.
- 4) Do not drop the unit on hard surfaces, and do not expose the unit to moisture or water.

Troubleshooting

If for some reason the activity stops working or malfunctions, please follow these steps:

- 1. Check that the Bluetooth function on your smart device is turned on. If you are still having difficulties, try restarting both RC Coon Mobile and your device.
- 2. Turn the unit OFF, using the power switch located on the bottom.
- 3. Interrupt the power supply by removing the batteries.
- 4. Let the unit stand for a few minutes, then replace the batteries.
- 5. Turn the unit ON. The unit should now be ready to play again.
- 6. If the product still does not work, replace with a new set of batteries.

Imported by: Ubisoft Inc. 625 Third Street, San Francisco, California, 94107 Imported by: Ubisoft 28 Rue Armand Carrel, 93108, Montreuil-sous-Bois Cedex France.

© 2016 South Park Digital Studios LLC. All Rights Reserved. South Park and all elements thereof © 2016 Comedy Partners. All Rights Reserved. Comedy Central, South Park and all related titles, logos, and characters are trademarks of Comedy Partners. Game software © 2016 Ubisoft Entertainment. All Rights Reserved. Ubisoft and the Ubisoft logo are trademarks of Ubisoft Entertainment in the U.S. and/or other countries.

NOTE:

THIS EQUIPMENT HAS BEEN TESTED AND FOUND TO COMPLY WITH THE LIMITS FOR A CLASS B DIGITAL DEVICE, PURSUANT TO PART 15 OF THE FCC RULES. THESE LIMITS ARE DESIGNED TO PROVIDE REASONABLE PROTECTION AGAINST HARMFUL INTERFERENCE IN A RESIDENTIAL INSTALLATION.

THIS EQUIPMENT GENERATES, USES AND CAN RADIATE RADIO FREQUENCY ENERGY AND, IF NOT INSTALLED AND USED IN ACCORDANCE WITH THE INSTRUCTIONS, MAY CAUSE HARMFUL INTERFERENCE TO RADIO COMMUNICATIONS. HOWEVER, THERE IS NO GUARANTEE THAT INTERFERENCE WILL NOT OCCUR IN A PARTICULAR INSTALLATION. IF THIS EQUIPMENT DOES CAUSE HARMFUL INTERFERENCE TO RADIO OR TELEVISION RECEPTION, WHICH CAN BE DETERMINED BY TURNING THE EQUIPMENT OFF AND ON, THE USER IS ENCOURAGED TO TRY TO CORRECT THE INTERFERENCE BY ONE OR MORE OF THE FOLLOWING MEASURES:

- REORIENT OR RELOCATE THE RECEIVING ANTENNA.
- INCREASE THE SEPARATION BETWEEN THE EQUIPMENT AND RECEIVER.
- CONNECT THE EQUIPMENT INTO AN OUTLET ON A CIRCUIT DIFFERENT FROM THAT TO WHICH THE RECEIVER IS CONNECTED.
- CONSULT THE DEALER OR AN EXPERIENCED RADIO/TV TECHNICIAN FOR HELP.

CAUTION:

THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.

THIS DEVICE COMPLIES WITH INDUSTRY CANADA'S LICENCE-EXEMPT RSSS. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE INTERFERENCE; AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION OF THE DEVICE.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.