

# BADA PEN GUIDE

<b>PAGE</b> 1-2	Quick Setup
<b>PAGE</b> 3-5	Manual
PAGE 6	Warranty
PAGE 7	Troubleshooting
PAGE 🖯	Safety Certifications

Please contact us if you have any questions.


Tel 82-2-514-3621 Fax 82-2-514-3622 help@calmid.com



## Quick Setup-Game Mode

### STEP 1 Choose a learning game to play.


MAC/PC visit <u>www.badanamu.com/applications</u> to download. MOBILE/TABLET search Badanamu on your device's app store.

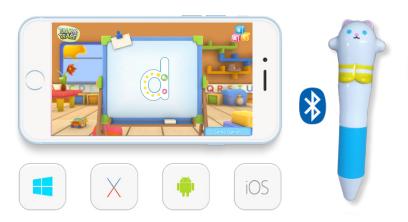



- Open any Badanamu learning application.
- The app will ask to enable your device's Bluetooth.

### STEP 2 Turn on the Bada Pen and select game mode.

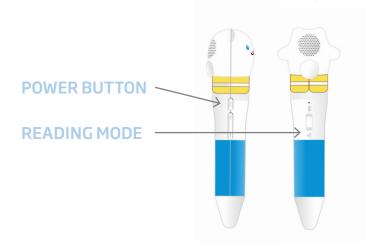

- Press the power button.
- Flip the switch to the lower position.


### STEP 3 Tap or trace game boards to play along with the learning apps.



- You're ready to learn and play!
- Simply touch or trace a game board to play along with Bada and all his friends.

## Quick Setup-Reading Mode

STEP 1 Turn on the Bada Pen and select reading mode.

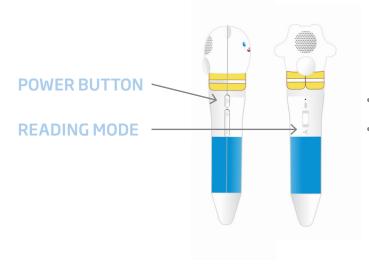

- Press the power button.
- Flip the switch to the lower position.

### STEP 2 Tap to read along with storybooks, game boards, and more!



• Tap storybooks to hear narration and other fun sound effects.



 Tap game boards to hear keywords, letter sounds, and more!

## **Manual**

#### Precautions

- Do not use this product in or around water.
- Clean only with a damp rag. Do not use detergents.
- Remove all packaging before giving to children and supervise where necessary.
- Please read all packaging and instructions before use.
- The items inside may vary slightly from photography.
- Please comply with current laws for recycling and sorting waste.
- IMPORTANT: Please retain packaging and purchase details for future information.

### **Product and Accessories**

The Bada Pen package includes:





DA PEN USB CHARGE CABLE

### Product Specifications

#### **Item Number:**

BLP-P01-PK05

#### Manufacturer:

Smart Education Technology Ltd.

#### **Country of Origin:**

China

#### **KC Safety Registration Number:**


CB061R515-5001

#### **Electronic Frequency:**

MSIP-CMI-Cal-BLP-P01-PK05


Product Specifications				
	Media	pre-installed on Bada Pen		
Pen	Buttons	power, 2 volume, mode select		
	Speaker	built-in speaker		
	Lights	2 LED lights		
Accessory	Cable	one micro USB to USB charging cable		
Вох	Packaging	cardboard box and tray		

## Product Features

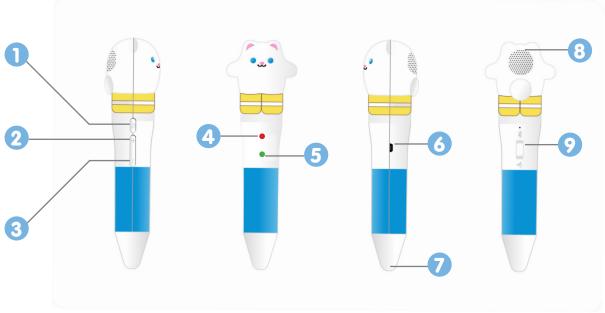

Number	Name	Description	
1	Power Button	Used to turn the pen on or off. Press the button once to turn on. Long press (3 seconds) to turn off.	
2	Volume Increase	Used to increase speaker volume.  Press the button once to increase the volume. Long press (3 seconds) to maximize volume.	
3	Volume Decrease	Used to decrease speaker volume. Press the button once to decrease the volume. Long press (3 seconds) to minimize volume.	
4	Status Light 1	Status light which can display yellow or red. See table below for light meanings.	
5	Status Light 2	Status light which can display blue or green. See table below for light meanings.	
6	Micro USB Port	<b>Used for charging the battery.</b> Connect to a USB charging port using the included Micro USB cable.	
7	Nib	Used to read data from board. Tap, touch, or trace game boards and storybooks to interact.	
8	Speaker	Used to output audio. Press the volume increase (2) and decrease (3) buttons to adjust sound level.	
9	Mode Select	Used to switch between game mode and reader mode.  Move to top position to play with apps and game boards. Move to bottom position to tap and read storybooks.	

## Status Lights

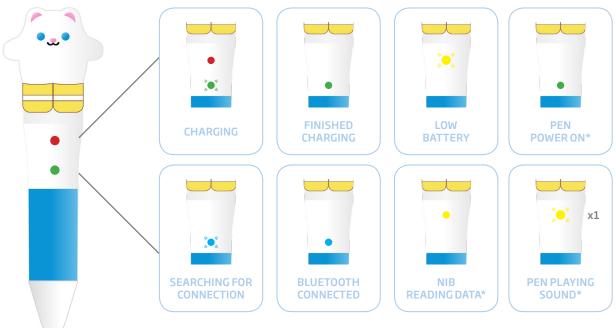

\*Bada Pen will display blue or green on the bottom light depending on the play mode: blue while in game mode, green while in reader mode.

### Charging the Bada Pen

- 1. Connect the USB charging cable to the Micro USB port (6) on the Bada Pen. Make sure the connection is secure.
- 2. Connect the other end of the USB cable to the USB port on your computer to begin charging the Bada Pen. Your computer must be powered on.
- 3. You will see a blinking green light (5) and a solid red light (4) while the Bada Pen is charging.
- 4. You will see a solid red light (4) and a solid green (5) light when the Bada Pen has finished charging.
- 5. When the Bada Pen is fully charged you may remove the cable and begin using.

#### **Notes**

- You can use any standard Micro USB to USB cable to charge your Bada Pen.
- It takes 1–2 hours to completely charge your Bada Pen.
- The Bada Pen will still charge if it is powered off.

## Warranty

Please fill in the purchase date, place of purchase, and any other relevant information for your reference. Please retain your original bill of sale as it may be needed to process product repairs and/or replacement.

Product Name	Bada Pen	
Purchase Date		
Manufacture Date	2016-04-15	
Model Name	BLP-P01-PK05	
Place of Purchase		
Other		

- The Bada Pen comes with a limited 1-year warranty.
- Please note that any parts that need to be replaced outside of the 1-year limited warranty can be done at cost to the customer within two years from the manufacture date.

#### Manufacturer:

Smart Education Technology Ltd.

#### **Country of Origin:**

China

The following is covered by the limited 1-year warranty:

Type of Damage	Warranty Details			
Type of Damage	within 1-year warranty	after 1-year warranty		
malfunction within 10 days of purchase	product exchange			
malfunction after 10 days of purchase	repair covered under warranty	not applicable		
other repairable damage*	repair covered under warranty	customer pays for the repair		
irreparable damage	product exchange covered under warranty	customer pays for replacement		
*If the product malfunctions in the same manner 3 times, product exchange is covered under warranty.				

- For any service requests, please call +82-02-514-3621 or email help@calmid.com.
- If you use the product outside of its intended purpose the warranty is void.
- If you use the product as a testing product, the warranty is shortened to 6 months from original purchase date.
- If you receive a replacement product, the warranty time frame is still within the original purchase date.

## Troubleshooting

## ! The Bada Pen won't turn on.

• The Bada Pen is very low on battery. Please follow the instructions for charging your Bada Pen on page 4 of this guide.

## • The Bada Pen is not reading the content.

- Make sure the Bada Pen is powered on and switched to the correct game mode (see page 2).
- Make sure the content your are trying to read is clean and dust free.
- Check and make sure that nothing is inside the tip of the pen.
- If you are in game mode, check that the Bada Pen is correctly paired with your device. (More information below.)

## ! I don't see any lights when I charge the Bada Pen.

• If the battery is very low, you will not see the charging lights. In this case, charging the Bada Pen may take up to 3 hours.

## The Bada Pen will not pair with my device.

- Be sure that your mobile device or computer's bluetooth is enabled.
- Check to see if your device is already paired with any other Bluetooth devices. If so, please disconnect and try to pair the Bada Pen again.
- Consult your device's manual for more information on how to pair with Bluetooth devices.

#### **FCC Statement**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -- Reorient or relocate the receiving antenna.
- -- Increase the separation between the equipment and receiver.
- -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.