

### BATTERY NOTICE:

1. Insert 4 pieces of 1.5 volt "AA" batteries in the battery compartment of the vehicle, and insert 2 pieces of 1.5 volt "AA" batteries in the battery compartment of the controller. Batteries are to be inserted with correct polarity as shown in the diagrams. (Battery not included for both the vehicle and the controller)
2. Playing time: 60 minutes per charge.
3. Playing speed: 12 km/H.
4. Remove the batteries from the controller when it will not to be used for a long time to prevent leakage of harmful substances.

### OPERATION NOTICE:

1. Adjust the trimming when the vehicle is found to incline left or right while running, to keep it running straight.
2. Point the transmitter antenna up towards the vehicle. If the vehicle gets too far away, it won't work properly.
3. Radio interference will make the vehicle out of order. Interference can be caused by other R/C vehicles running on the same frequency, electrical wires, large buildings, or CB radio. We recommend that you avoid those objects.
4. Don't drive the vehicle in sand, water or snow.
5. Don't put the vehicle near heat or under the sunlight. Always turn switches OFF and remove all batteries for storage.
6. Only be sure that battery compartment is fixed can children play.
7. The car is imitated by the real product, so please keep young children away from reaching out to it. It should be played under the adult's upervision.
8. As it is the high speed car, please do not hit people and animal, in case of any hurt or danger.
9. Keep the package for its important information.

### CAUTIONS:

1. Only rechargeable batteries can be recharged.
2. Batteries are only to be charge under adult's supervision.
3. Different types of batteries or new and used batteries are not to be mixed.
4. Batteries should be inserted with the correct polarity.
5. Used batteries should be take out from products.
6. The supply terminals are not to be short-circuited.
7. Examine the transformer or battery charger and any damage to their cord, plug, enclosure and other spare parts regularly. Please stop using, and replace other suitable charger when anything broken down.
8. To ensure safety and proper operation, battery replacement must always be done by adults.

### PLAYING OPERATION:

1. Make sure the electricity of both the vehicle and the controller is sufficient.
2. Turn the power switch on the controller to ON, then the power light of the controller will flash, which indicates that the signal is connecting. Turn the power switch on the vehicle to ON, then the power light on the controller black out, which indicates that signal connection is done and the vehicle is ready to play.
3. When the electricity is insufficient, all functions of vehicle would slow down. Please replace batteries or charge in time.



#### Controller of 6-FUNCTION with sound

Press "Engine Start" button to start the vehicle, push the "forward/backward" lever to pull the car running forward and backward, push the "left/right" lever to make the car turned left and right. Press the "Sound Switching" button to switch 4 kinds of sound and mute mode. Press "Horn Sound" button for the horn sound under the sound mode, and it is invalid under the mute mode.



#### Controller of 4-FUNCTION

Make the vehicle moved forward and backward by pulling the "forward/backward" lever on the controller and make the vehicle turned left and right by pulling the "left/right" lever.



4 x Batteries "AA" 1.5V



#### FCC

Caution: The user is cautioned that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

#### **FCC Radiation Exposure Statement:**

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.