 



802.11ax-HE40 - Ant 1

Channel 227 (7085MHz)

The Reference Level

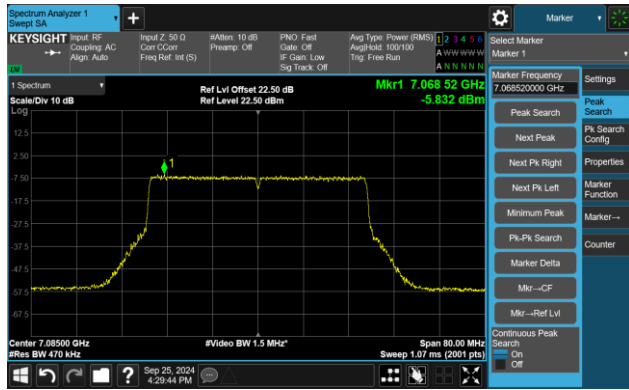

 The Mask Data

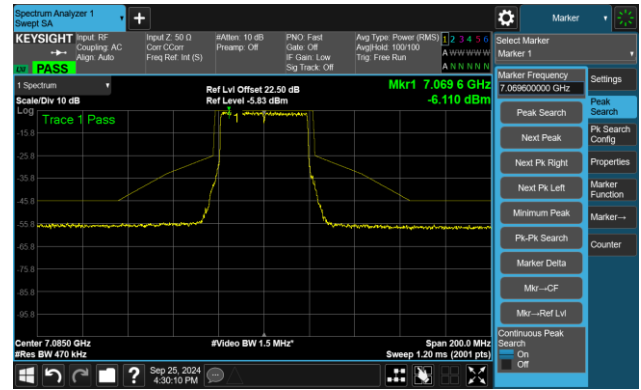


802.11ax-HE80 - Ant 1

Channel 7 (5985MHz)

The Reference Level




 The Mask Data

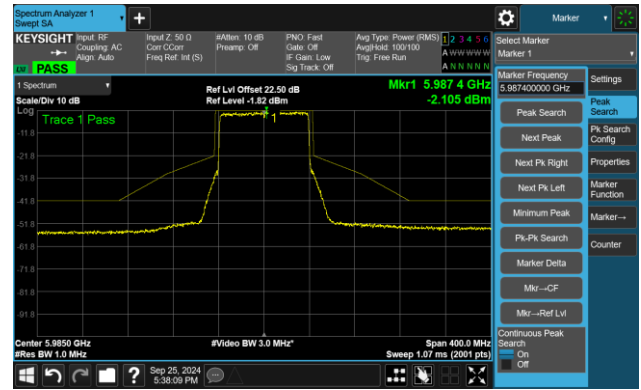


Channel 55 (6225MHz)

 The Reference Level

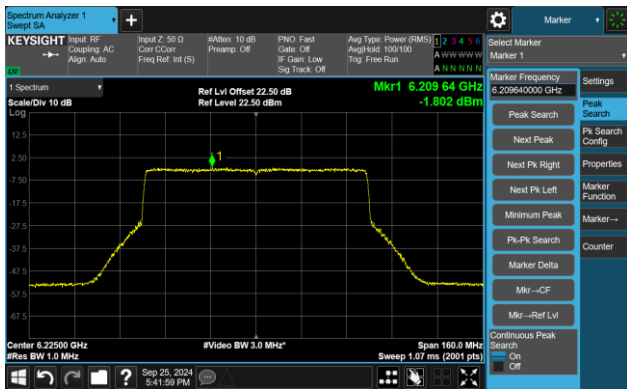


The Mask Data

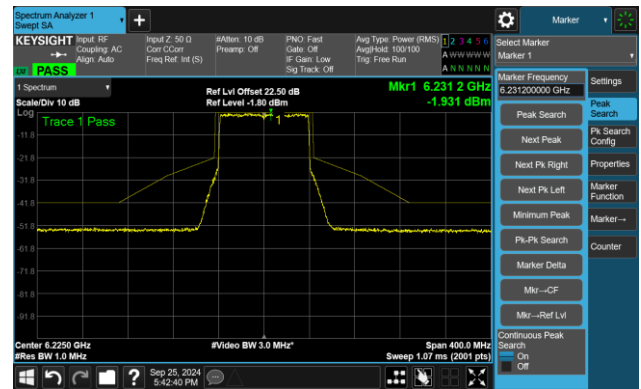 


Channel 87 (6385MHz)

 The Reference Level

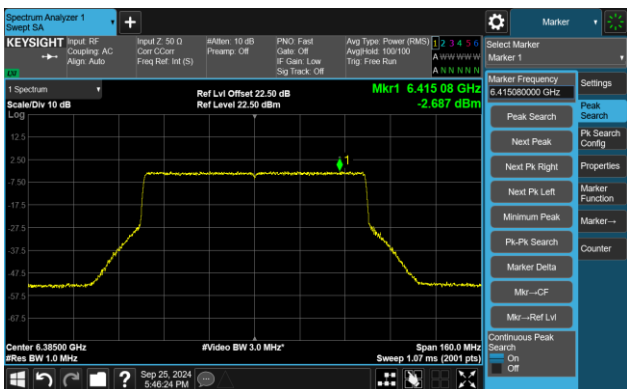


The Mask Data

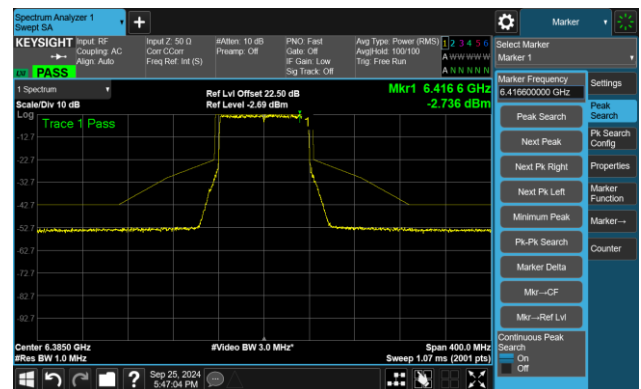 


802.11ax-HE80 - Ant 1

Channel 103 (6465MHz)

 The Reference Level

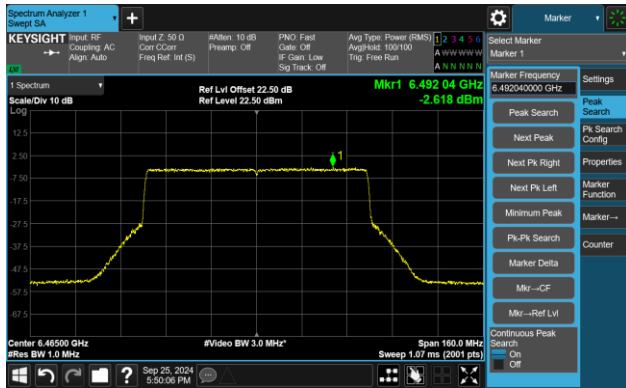


The Mask Data

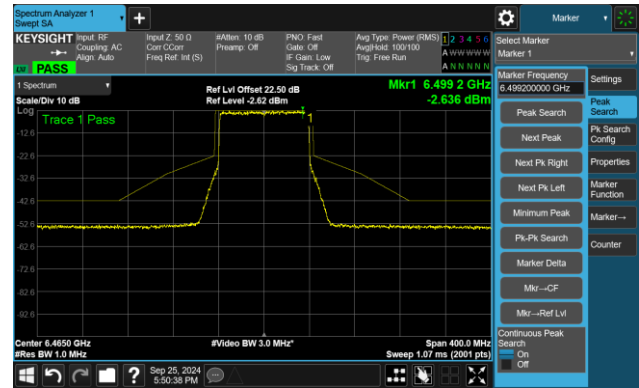 


Channel 119 (6545MHz)

 The Reference Level

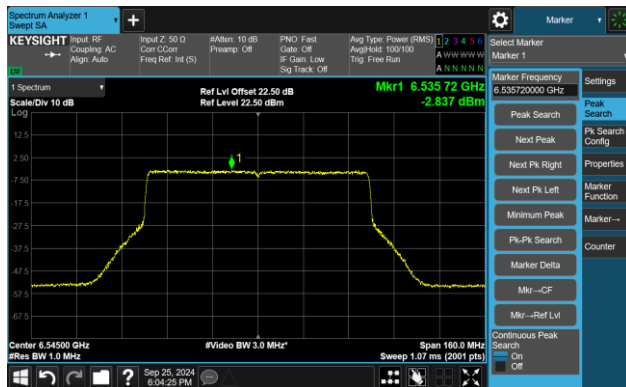


The Reference Level

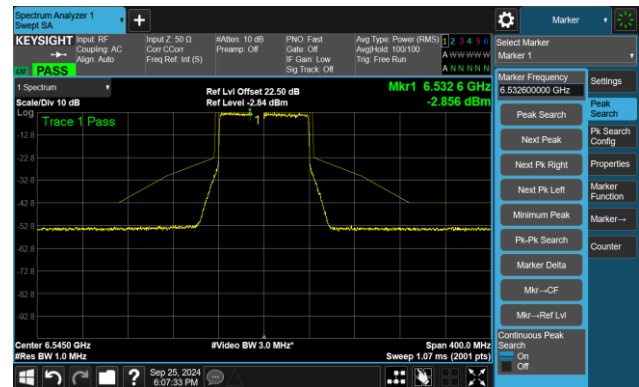 


Channel 135 (6625MHz)

 The Reference Level

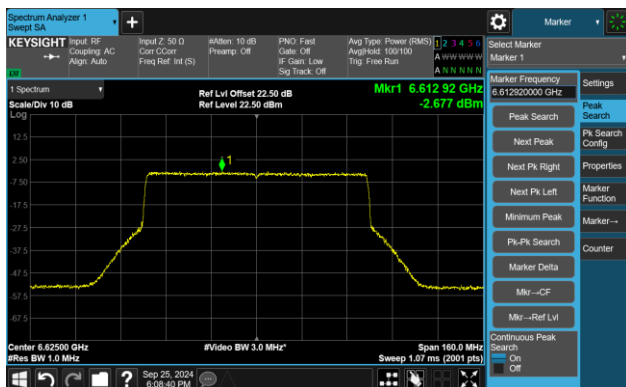


The Mask Data

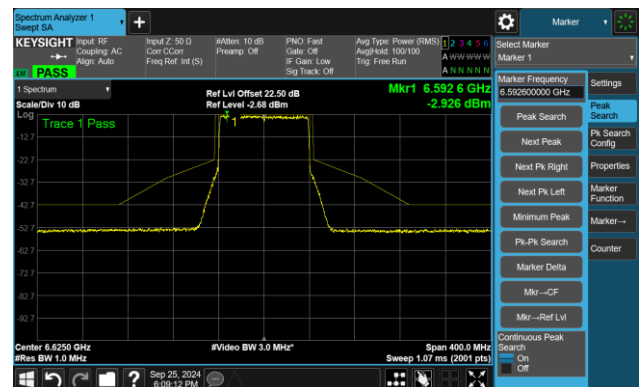 


802.11ax-HE80 - Ant 1

Channel 151 (6705MHz)

 The Reference Level

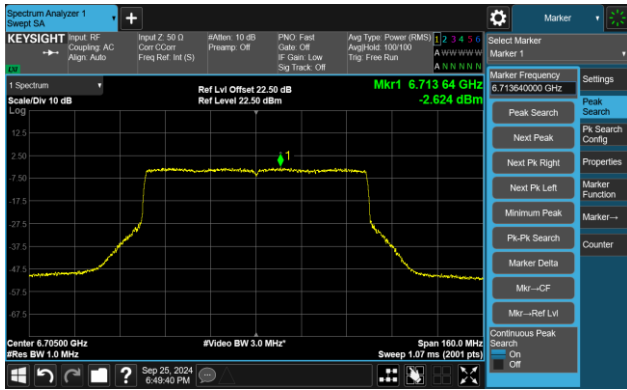


The Mask Data

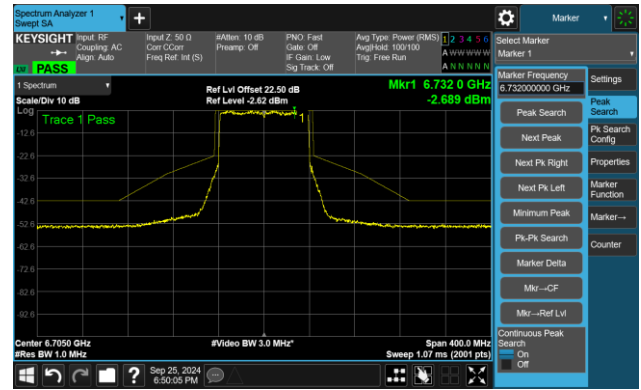 


Channel 167 (6785MHz)

 The Reference Level

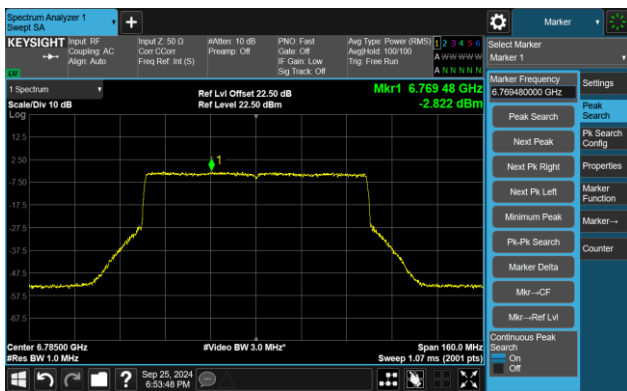


The Mask Data

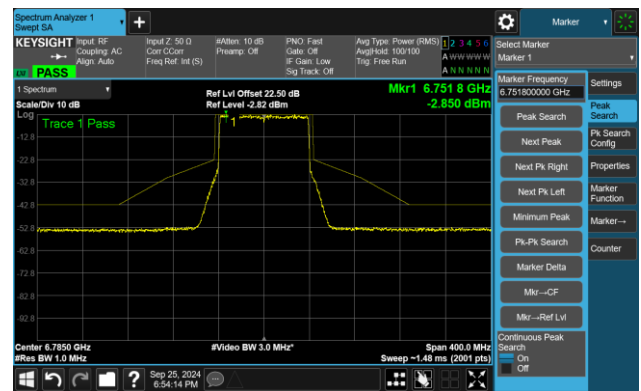 


Channel 183 (6865MHz)

 The Reference Level

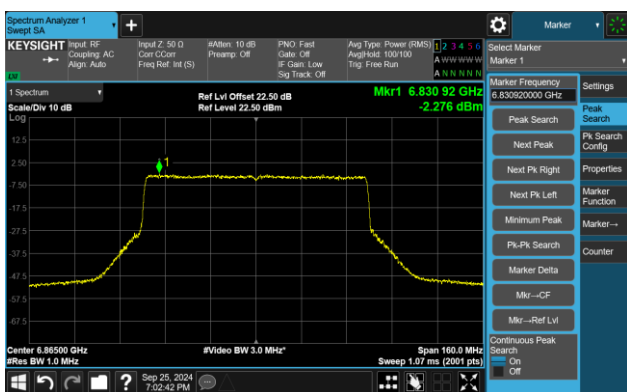


The Mask Data

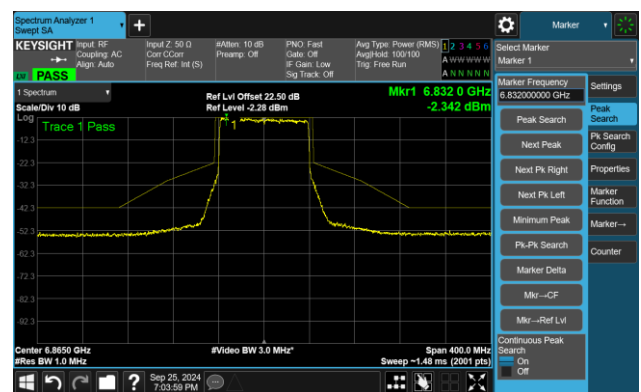 


802.11ax-HE80 - Ant 1

Channel 199 (6945MHz)

 The Reference Level

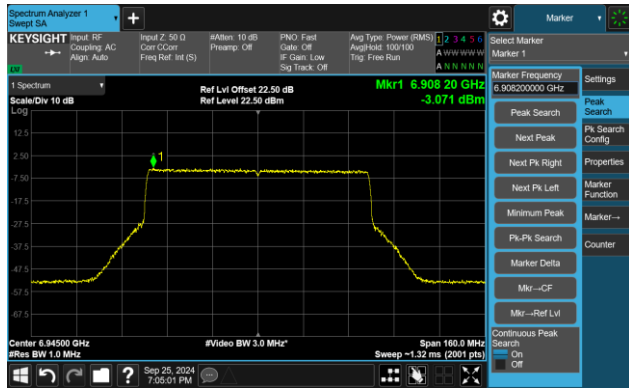


The Mask Data

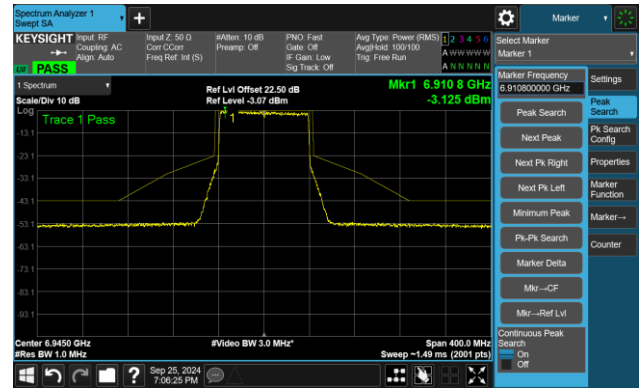 


Channel 215 (7025MHz)

 The Reference Level

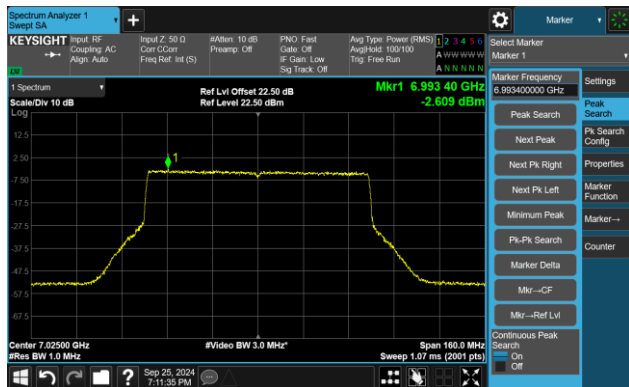


The Mask Data

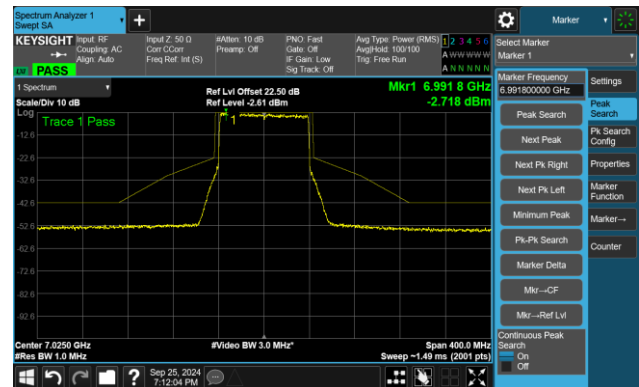 


802.11ax-HE160 - Ant 1

Channel 15 (6025MHz)

 The Reference Level

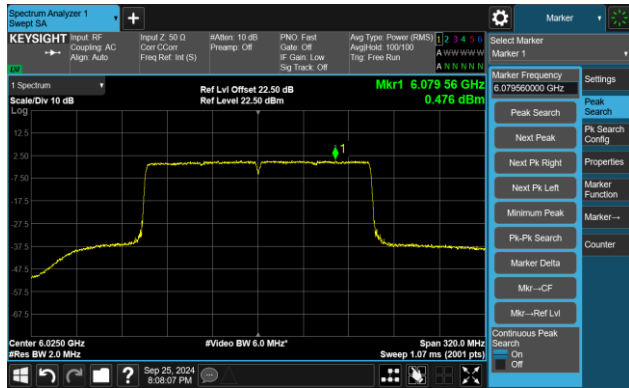


The Mask Data

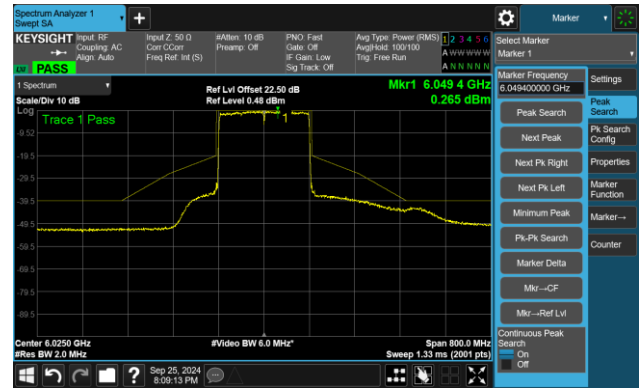 


Channel 47 (6185MHz)

 The Reference Level

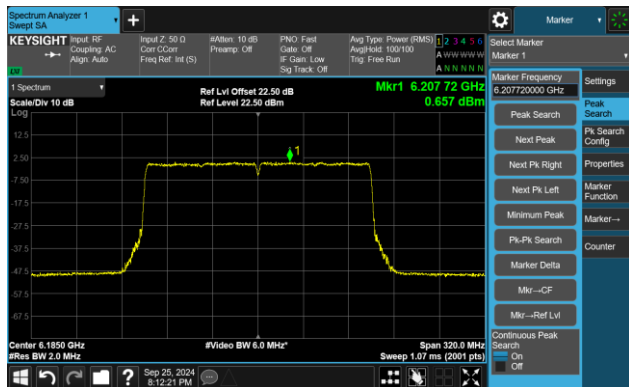


The Mask Data

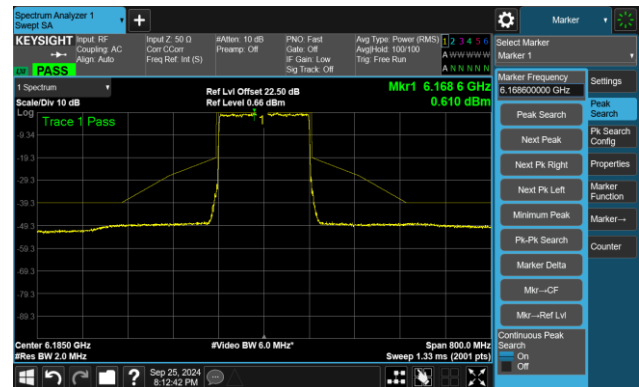 


Channel 79 (6345MHz)

 The Reference Level

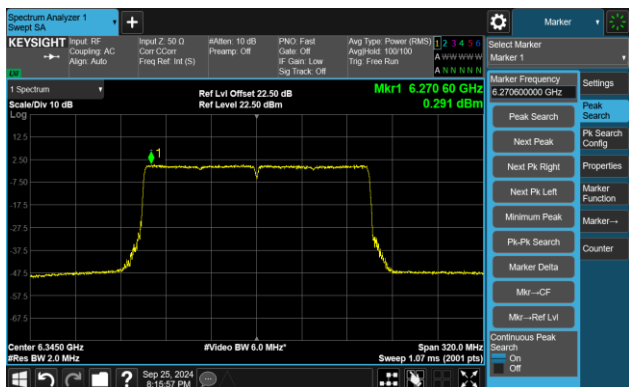


The Mask Data

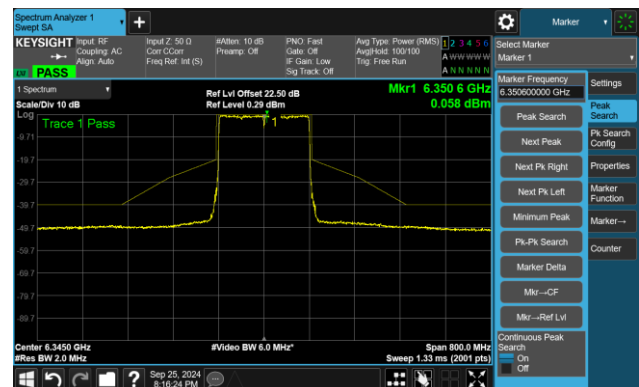 


802.11ax-HE160 - Ant 1

Channel 111 (6505MHz)

 The Reference Level

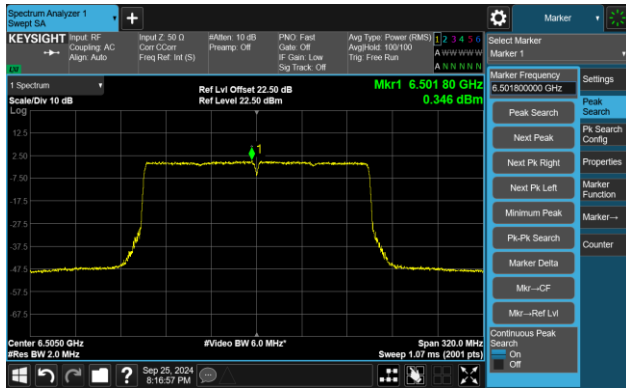


The Mask Data

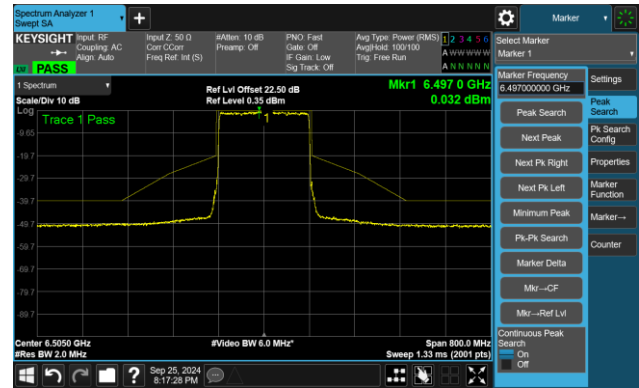 

Channel 143 (6665MHz)

 The Reference Level

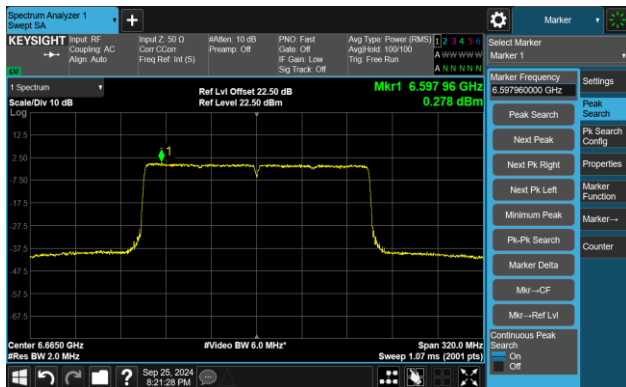


The Mask Data




Channel 175 (6825MHz)

 The Reference Level

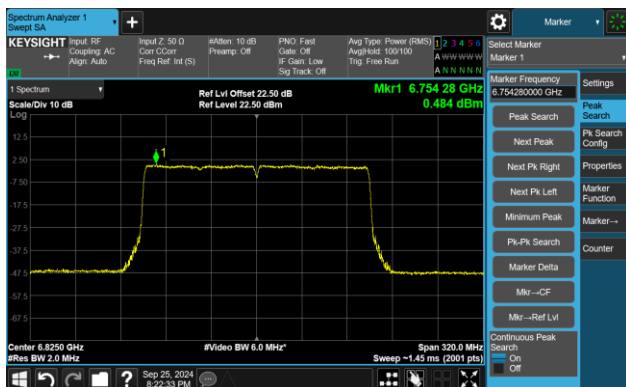


The Mask Data

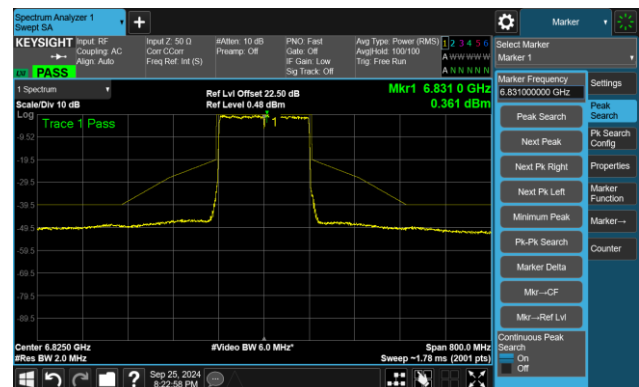 


802.11ax-HE160 - Ant 1

Channel 207 (6985MHz)

 The Reference Level

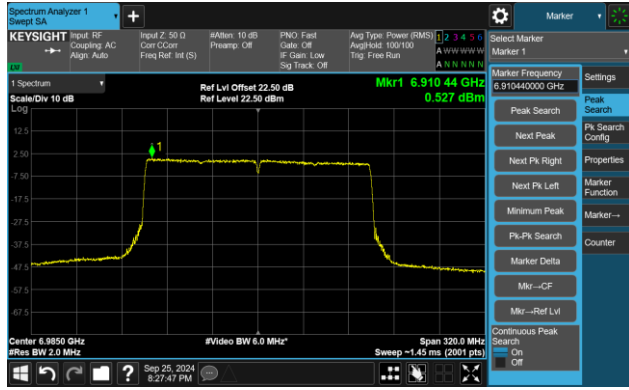

The Mask Data

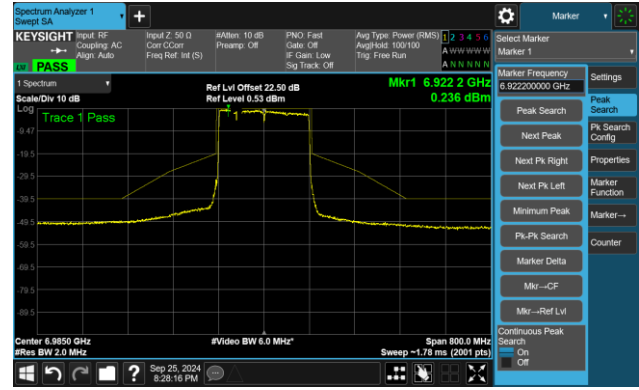 


802.11be-EHT20 - Ant 1

Channel 1 (5955MHz)

The Reference Level




 The Mask Data

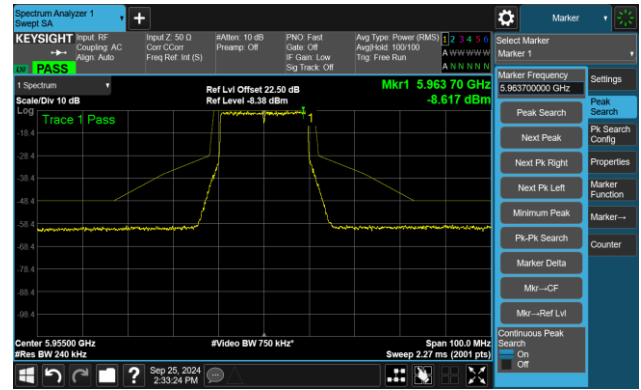


Channel 49 (6195MHz)

 The Reference Level

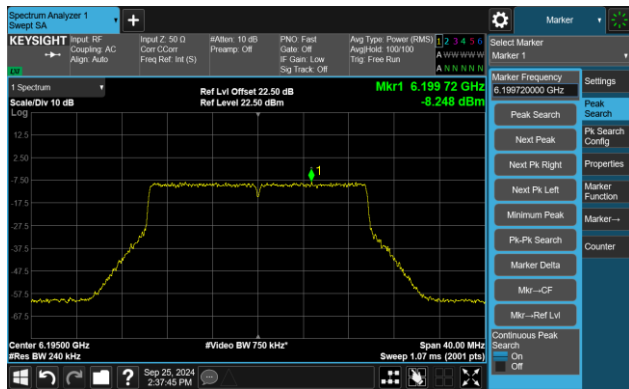


The Mask Data

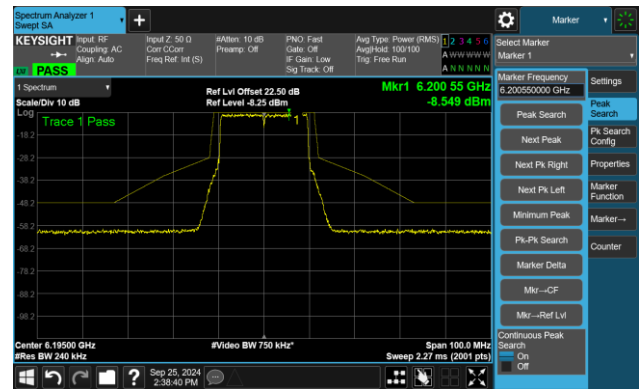 


Channel 93 (6415MHz)

 The Reference Level

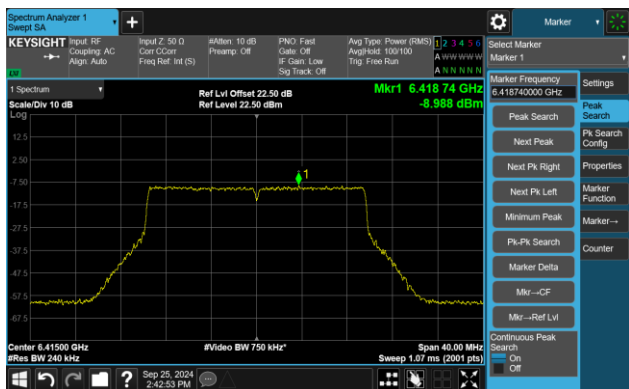

The Mask Data

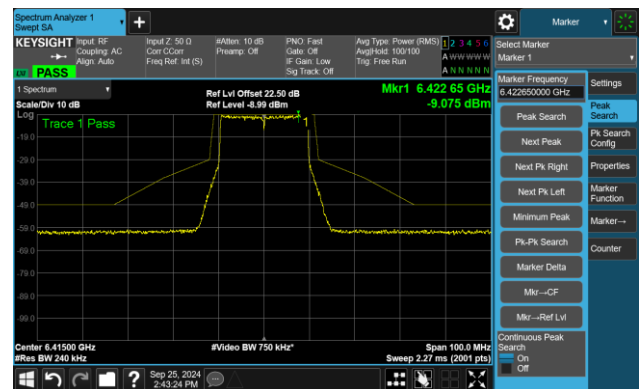 


802.11be-EHT20 - Ant 1

Channel 97 (6435MHz)

The Reference Level



 The Mask Data

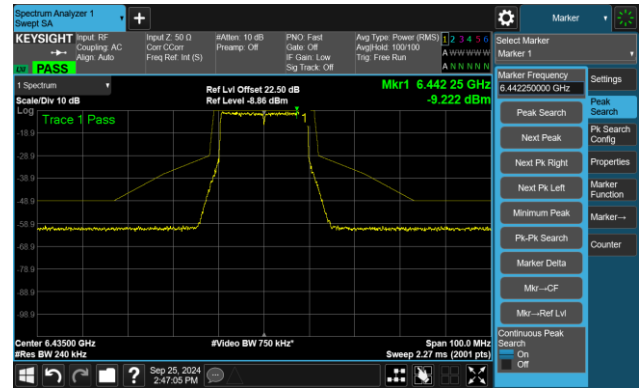


Channel 105 (6475MHz)

The Reference Level




 The Mask Data

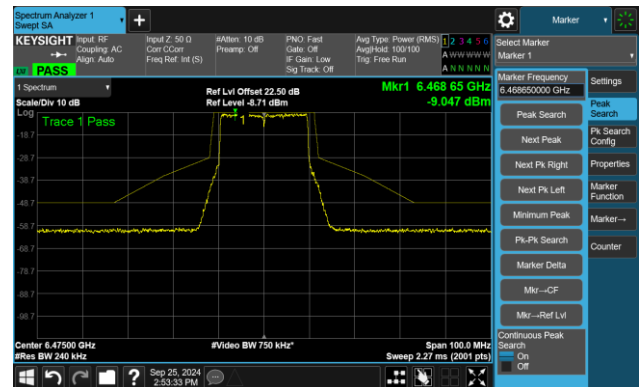


Channel 113 (6515MHz)

 The Reference Level

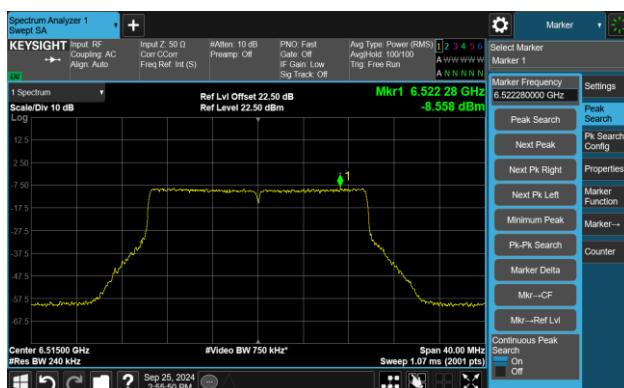


The Mask Data

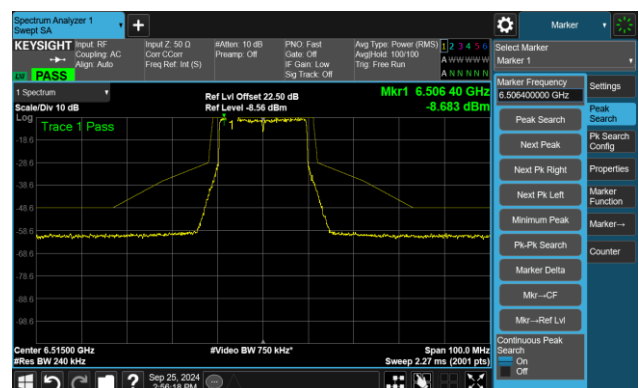 


802.11be-EHT20 - Ant 1

Channel 117 (6535MHz)

 The Reference Level

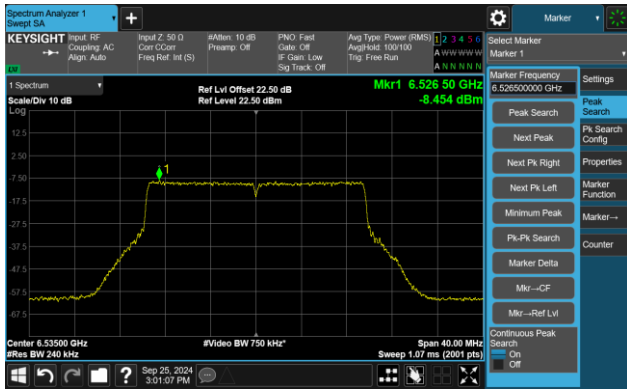


The Mask Data

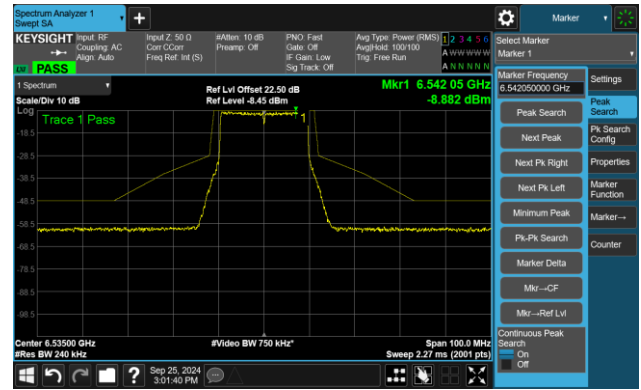 


Channel 149 (6695MHz)

 The Reference Level

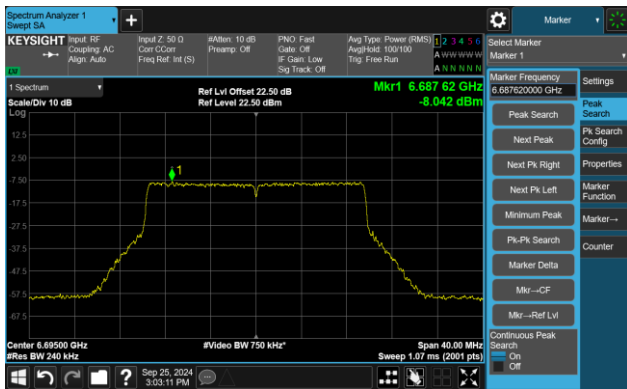


The Mask Data

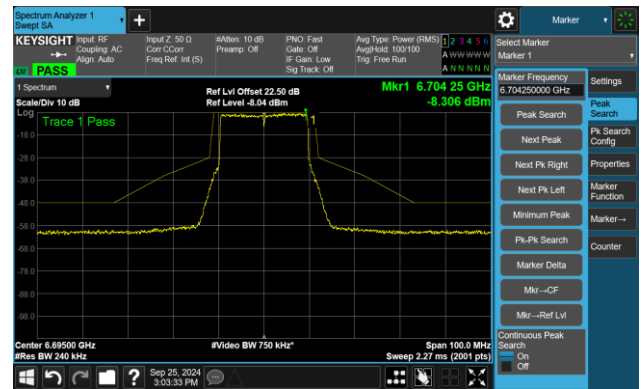 


Channel 181 (6855MHz)

 The Reference Level

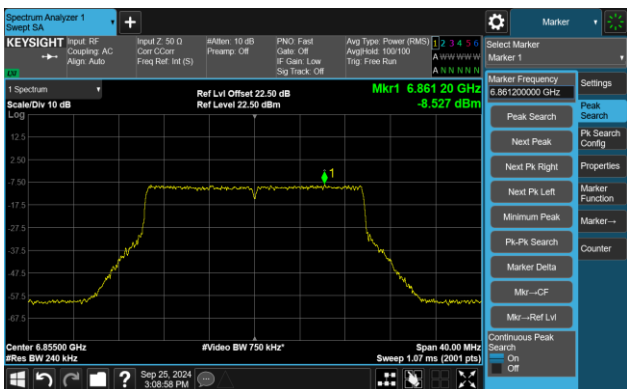


The Mask Data

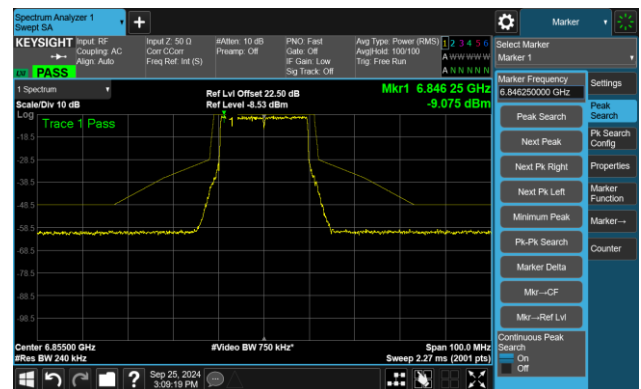 


802.11be-EHT20 - Ant 1

Channel 185 (6875MHz)

 The Reference Level

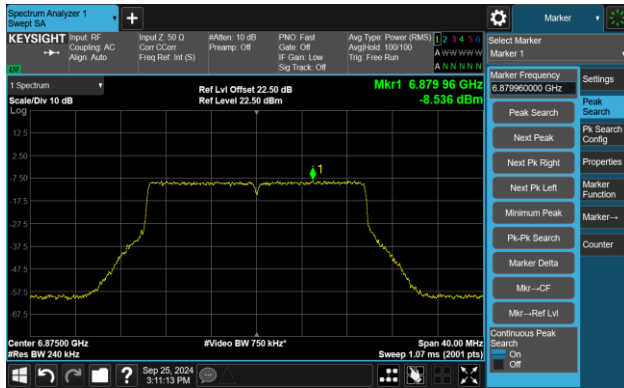

The Mask Data

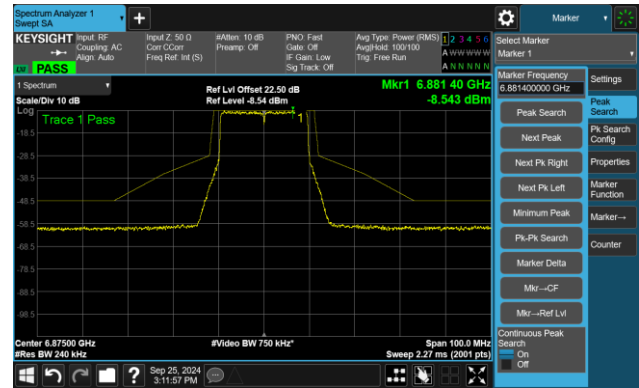 


Channel 189 (6895MHz)

The Reference Level




 The Mask Data

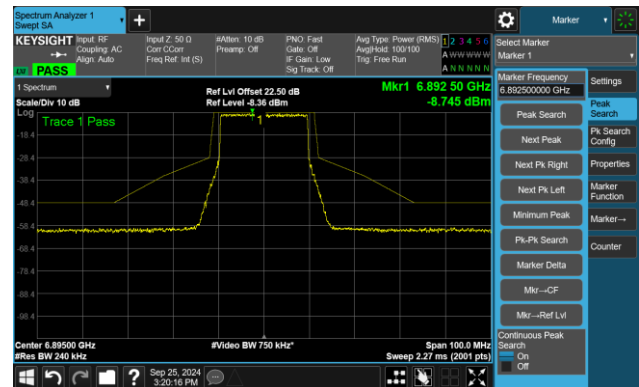


Channel 209 (6995MHz)

 The Reference Level

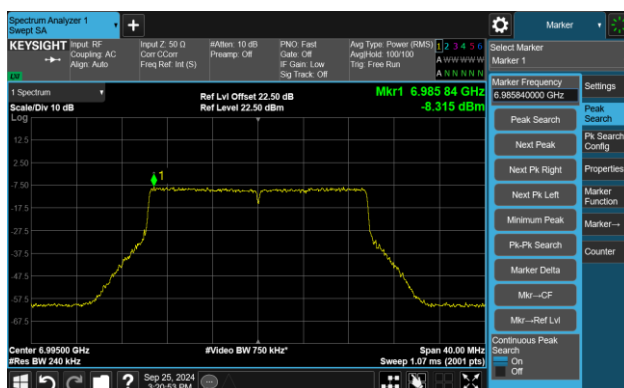


The Mask Data

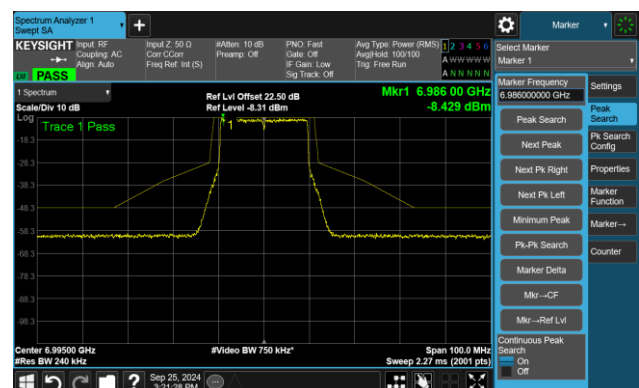 


802.11be-EHT20 - Ant 1

Channel 229 (7095MHz)

 The Reference Level

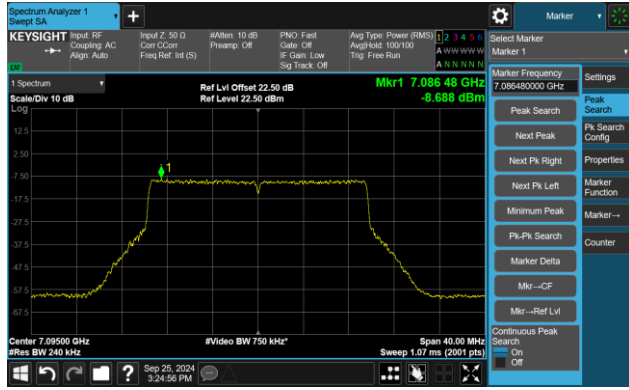


The Mask Data

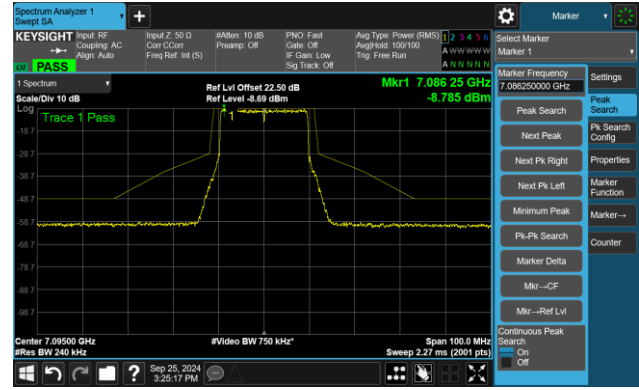 


802.11be-EHT40 - Ant 1

Channel 3 (5965MHz)

 The Reference Level

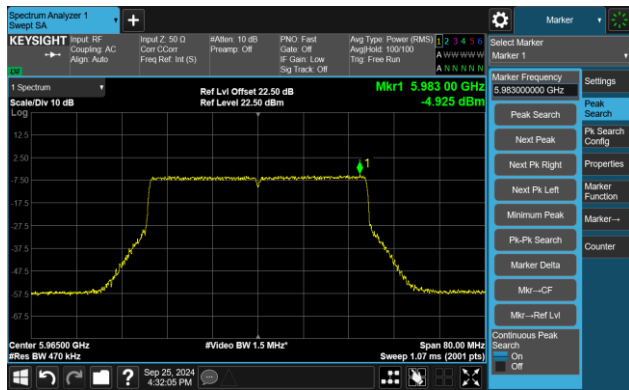


The Mask Data

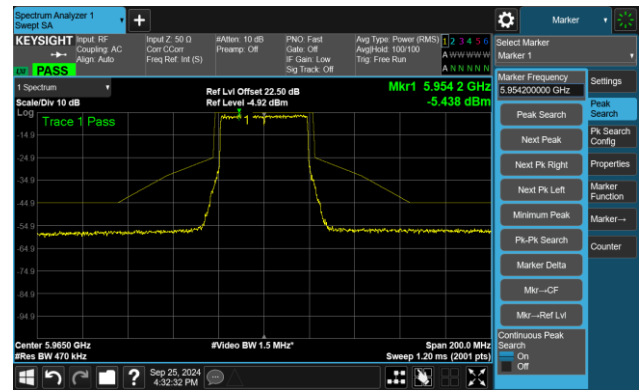 


Channel 51 (6205MHz)

 The Reference Level

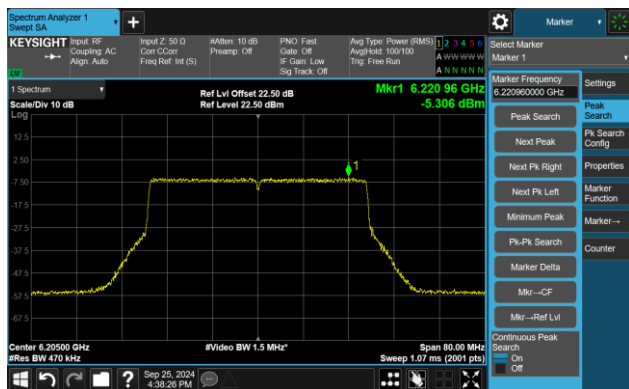


The Mask Data

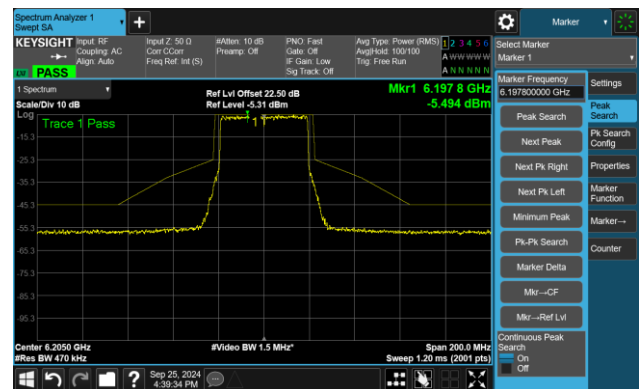 


Channel 91 (6405MHz)

 The Reference Level

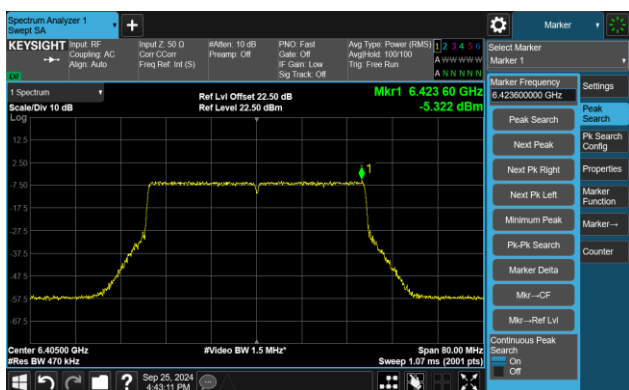


The Mask Data

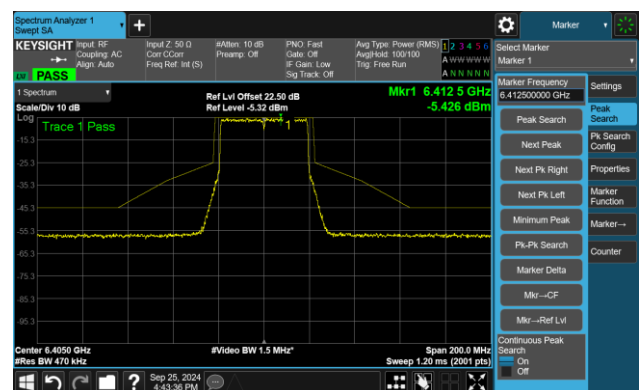 


802.11be-EHT40 - Ant 1

Channel 99 (6445MHz)

 The Reference Level

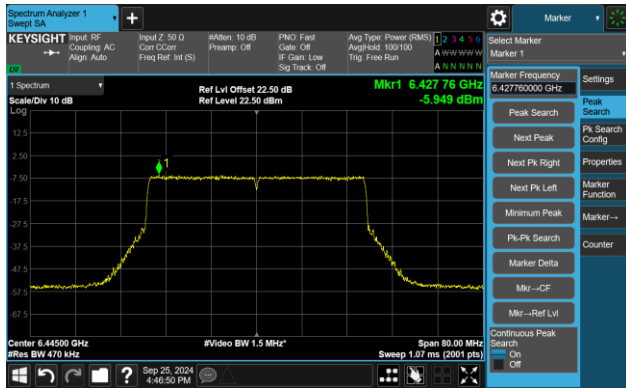

The Mask Data

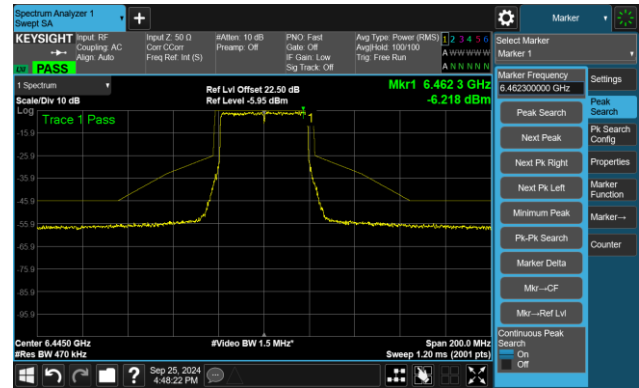 


Channel 107 (6485MHz)

The Reference Level




 The Mask Data

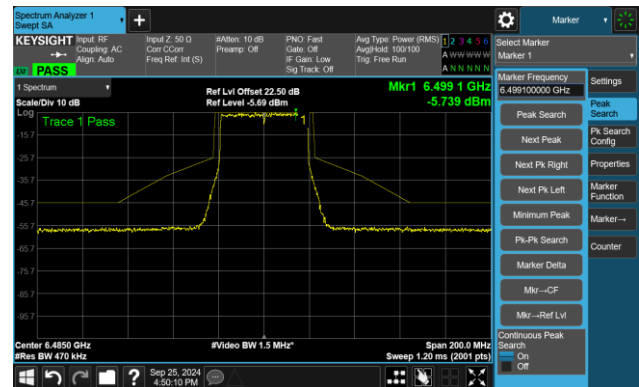

Channel 115 (6525MHz)

 The Reference Level

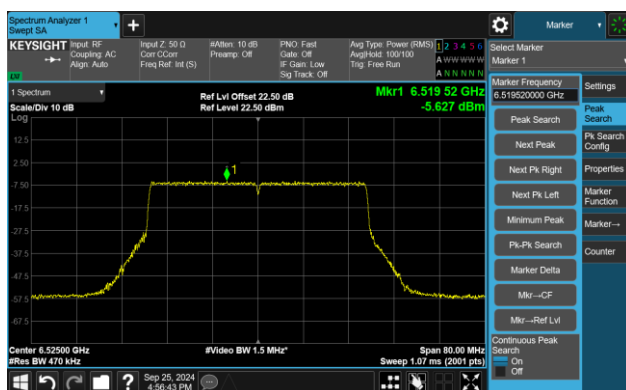

The Mask Data

