

Single Serve Coffeemaker

Operating and Safety Instructions



- FOR INDOOR HOUSEHOLD
USE ONLY -

IMPORTANT SAFEGUARDS

Definitions

Whenever used, the following identify safety and property damage messages and designate a level of hazard seriousness.



- This is the safety alert symbol. It alerts you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

DANGER – Indicates a hazardous situation, which, if not avoided, will result in death or serious injury. Usage of this signal word is limited to the most extreme situations.

WARNING – Indicates a hazardous situation, which, if not avoided, could result in death or serious injury.

CAUTION – Indicates a hazardous situation, which, if not avoided, may result in minor/moderate injury.

NOTICE – Addresses practices not related to personal injury, such as product and/or property damage.



The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

WARNING

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT REMOVE COVER. NO USER-SERVICEABLE PARTS INSIDE. REPAIR SHOULD BE DONE BY QUALIFIED SERVICE PERSONNEL ONLY.



The exclamation point with an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

When using electrical appliances, always follow basic safety precautions, including the following:



READ ALL INSTRUCTIONS BEFORE USE.

⚠ WARNING-- When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handle or knobs.
- To protect against electric shock, do not place cord, plug or appliance in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning.
- Allow to cool before putting on or taking off parts and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner.
- Return the appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of an accessory not evaluated for use with this appliance may cause injuries.
- Do not use outdoors.
- Do not let cord hang over the edge of table or counter, or touch with hot surfaces.
- Do not place on or near a hot gas or electric burner or in a heated oven.
- Do not use this appliance for other than intended use.
- Keep the lid on the mug when in use.
- Scalding may occur if the lid is removed during the brewing cycles.
- To disconnect, turn any control to the off position, then remove plug from wall outlet.

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE

NOTICE-- To reduce the risk of product and/or property damage:

- Always operate the product on a flat, level, stable, heat and moisture-resistant surface.

WARNING: This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.




SPECIAL INSTRUCTIONS:

A short power supply cord is provided to reduce the risk of becoming entangled in or tripping over a longer cord. Extension cords are available and may be used if care is exercised in their use. If one is used:

- The marked electrical rating of the extension cord must be at least as great as that of the appliance;
- If the appliance is of the grounding type, the extension cord must be a grounding-type 3-wire cord;
- The longer cord should be arranged so that it will not drape over a countertop or tabletop where it can be pulled on by children or tripped over.

Parts

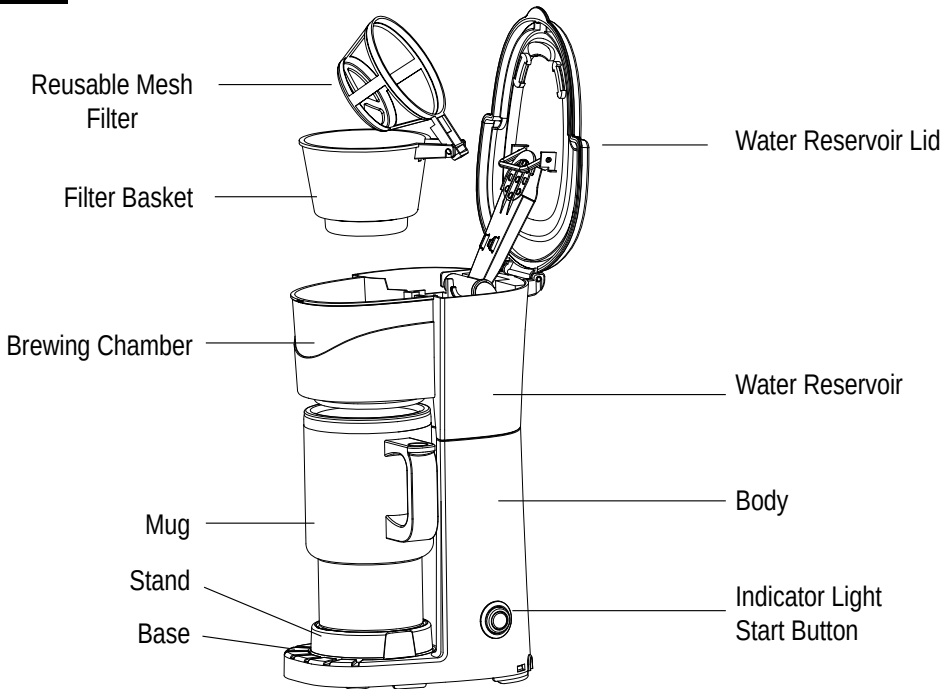

Coffee Filter:

This Coffeemaker comes with a Reusable Mesh Filter. A paper filter cannot be used in place of the Reusable Mesh Filter.

Before First Use


1. Clean the Mug, Mug Lid, Reusable Mesh Filter, and Filter Basket in warm, soapy water; thoroughly rinse.
2. Brew two Mugs of water according to the "Brewing Coffee" section, but do not add coffee grounds.

Brewing Coffee

1. Lift the Water Reservoir Lid and fill the Water Reservoir with 15 oz (443 ml) of water (about one full Mug).
2. Put three tablespoons of finely ground coffee or four tablespoons of regular ground coffee into the Reusable Mesh Filter for a full Mug of coffee.

NOTE: *Regular coffee grounds require more coffee per cup to achieve the strength of finer coffee grounds.*

3. Gently shake the Mesh Filter to distribute the coffee evenly.
4. Place the Mesh Filter into the Filter Basket and place the Filter Basket into the Brewing Chamber (see figure).
5. Close the Water Reservoir Lid.
6. Remove the Lid from the Mug and place the Mug onto the Base.
7. Plug the Power Cord into a standard 120-volt AC electrical outlet.
8. Press the Start Button; the Indicator Light will illuminate, verifying that the Coffeemaker is operating.
CAUTION: Do not open the Reservoir Lid during the brew cycle, as scalding may occur.
9. Allow all the coffee to drip from the Brewing Chamber into the Mug before removing the Mug.
NOTE: *Since coffee grounds absorb some water during brewing, the amount of brewed coffee will be slightly less than the amount of water poured into the Reservoir.*
10. When the brewing cycle is complete, the Indicator Light will shut off and the unit will no longer heat.
11. If brewing another Mug of coffee at this time, proceed to the "Brewing a Second Mug of Coffee" section. When all brewing is complete, unplug the Power Cord from the electrical outlet.

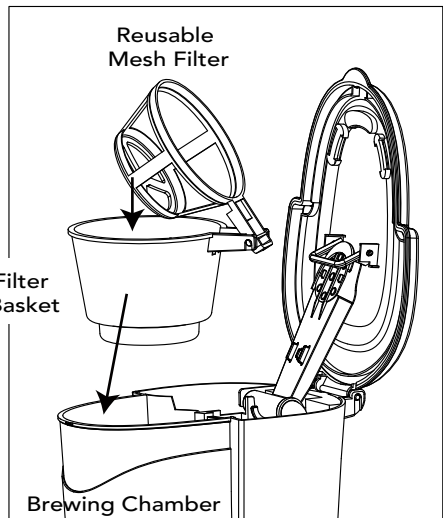

NOTE: *Once the Start Button is pressed, the Coffeemaker will start the brewing cycle and remain on until the brewing cycle is complete. To*

interrupt or stop the brewing cycle, you must disconnect the plug from the electrical outlet.

Brewing a Second Mug of Coffee:

To brew another Mug of coffee, allow the Coffeemaker to completely cool (about three minutes) after the Indicator Light has shut off. Rinse the Mug and the Reusable Mesh Filter with water. Repeat the brewing procedure.

WARNING: If the Coffeemaker does not cool completely before reuse, water placed in the Water Reservoir may overheat. This can cause steam to escape, resulting in a risk of burns and/or personal injury.

NOTICE: Attempting to start another brewing cycle before the Coffeemaker cools may result in an incomplete cycle; the unit employs a thermal reset switch to prevent overheating and may shut down.

Hints for Great-Tasting Coffee:

- Always use fresh, cold water.
- For stronger or milder coffee, increase or decrease the amount of coffee grounds to suit your taste.
- Finer coffee grinds, such as Drip and Automatic Drip Coffeemaker (ADC) coffee grounds, promote a full extraction of flavor and a rich, full-bodied coffee.
- Store unused coffee grounds in a cool, dry place. After opening a package of coffee grounds, tightly reseal it and store it in the refrigerator to maintain freshness.
- For optimum coffee taste, buy whole coffee beans and finely grind them just before brewing.
- Do not reuse coffee grounds; this greatly reduces the coffee's flavor.
- Reheating coffee is not recommended as coffee is at its peak flavor immediately after brewing.
- A clean Coffeemaker is essential for making great-tasting coffee. Clean regularly as specified in the "Care and Maintenance" section.
- Prevent an oily buildup: A small amount of oil on the surface of brewed coffee is due to the release of oil from roasted coffee beans. Heavily-roasted coffee beans release more oil than others. Regularly cleaning your Coffeemaker will prevent an oily buildup.

Care and Maintenance

WARNING: Always unplug the Power Cord from the electrical outlet and allow the product to cool completely before cleaning or storing.

Cleaning:

- The Mug, Mug Lid, and Filter Basket may be placed on the upper rack of a dishwasher for cleaning or hand washed in warm, soapy water. The Reusable Mesh Filter must be washed by hand.

NOTE: *When washed in a dishwasher, the parts may appear to fade. Restore by polishing them with a soft, dry cloth.*

- Wipe the exterior surface of the Coffeemaker with a soft, damp cloth. Do not use metal scouring pads or abrasive cleaners.

Removing Mineral Deposits:

To keep your Coffeemaker operating efficiently, remove mineral deposits left by water. At least once a month, use a water and vinegar household cleaning solution as described below to prevent the buildup of mineral deposits. If the water in your area is especially high in minerals, do this every two weeks.

1. Fill the Mug with one part of white vinegar and three parts of cold water.
2. Pour the water and vinegar mixture into the Water Reservoir.
3. Place the Mug (Lid off) onto the Base.
4. Press the Start Button; the Indicator Light will illuminate.
NOTE: *During cleaning, more steam occurs than when brewing coffee.*
5. When the water-vinegar solution stops dripping into the Mug, allow the Coffeemaker to cool for three minutes. Remove, rinse, and replace the Mesh Filter and pour the water-vinegar mixture into the Water Reservoir again.
6. Press the Start Button. Allow all of the cleaning solution to drip into the Mug.
7. Discard the cleaning solution from the Mug.
8. Allow the Coffeemaker to cool for three minutes, then remove, rinse, and replace the Filter Basket.
9. Rinse the Coffeemaker by brewing a Mug of cold water.
10. Allow the Coffeemaker to completely cool and clean it by washing the Mug, the Filter Basket, and the Reusable Mesh Filter in soapy water; rinse and let dry.

Storing:

- Store in a cool, dry location.

Any other servicing to the unit should be performed by an authorized service representative

Electrical Specifications

Voltage	Frequency	Wattage	Amperage
120VAC	60Hz	650W	5.5A

LIMITED WARRANTY

CE North America, LLC, warrants your new product to be free from defects in materials and workmanship under normal household use for a period of one (1) year from the date of purchase. During this period, such defects will be repaired or the product replaced at CE's option. Customer is responsible for all costs associated with returning the product to CE. If the product or component is no longer available, we will replace with a similar product of equal or greater value.

This warranty does not cover glass, filters wear from normal use, use not in conformity with the printed directions, or damage to the product resulting from accident, alteration, abuse, or misuse. This warranty extends only to the original consumer purchaser or gift recipient. **Keep the original sales receipt, as proof of purchase is required to make a warranty claim.** This warranty is void if the product is used for other than single-family household use or subjected to any voltage and waveform other than as specified on the rating label (e.g., 120V ~ 60 Hz).

CE North America, LLC disclaims all responsibility for consequential, incidental, or commercial losses caused by the use of this product. Some states do not allow this exclusion or limitation of incidental or consequential losses, so the foregoing disclaimer may not apply to you. This warranty gives you Specific legal rights, and you also have other legal rights which vary from state to state.

If you have a claim under this Warranty, please call our Customer Service number. To register your product please visit our website.

Customer Service: 1-866-915-1212

Email address: customerservice@cemglobal.com

Website Address: www.cemglobal.com/customer-support

Bluetooth Function :

Turn unit on

.Press on / off button (4) for One Second.

Search for Bluetooth Signal:

.Press Bluetooth Button (2) for three seconds, the Bluetooth function is turned on.

.After the Bluetooth is turned on, the voice prompts


“Bluetooth On” , and the Bluetooth search "LED" (6) flashes as a status indicator. Start mobile phone Bluetooth search mode. tap Bluetooth Speaker from the menu, Phone will be connected to Coffee Maker. After phone is paired, the Bluetooth Coffee Maker will automatically detect your phone after coffee maker is turned on or phone is brought in range. (Phone must have Bluetooth function on)

Play the song/music:

.Open the music player in phone. Select desired song and press play on phone. To “Play or Pause music from coffee maker, press Bluetooth button (2). Short press "PREV / V-" button (1) to select the previous song, press and hold to reduce volume reduction; short press "NEXT / V +" button (3) to select the next song, press and hold to increase.

Telephone answering function:

.When a call comes in, press Bluetooth button (2) to answer. To reject call, press and hold Bluetooth button (2).

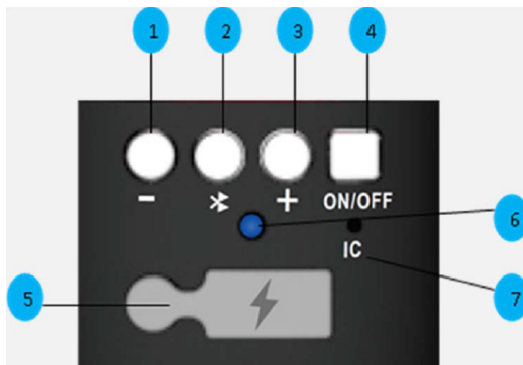

USB Charger:

Whenever the Coffee maker is plugged into the wall outlet, the USB charger is active. To charge your phone or tablet remove the silicon cover from the USB plug by rotating it counter clockwise. Be careful not to pull the silicon cover out of its socket. We recommend that you replace the silicon cover back over the USB port whenever it is not in use. Make USB cover is dry before replacing on the USB Charger.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

“This device complies with Industry Canada License-exempt RSS-210.

Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.”

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.