

User's Manual

Wireless Wi-Fi Adapter

FCC ID : 2AID7EC3F03

Index

1. Introduction	1
2. Install the Driver and Utility	2
3. Connect to Wireless Access Point (AP)	4
3.1. Use Windows Zero Configuration (WZC) (<i>For Windows XP</i>)	4
3.2. Connect to AP under Windows 7	7
3.3. Use the Wireless Configuration Utility	9
3.3.1. Utility Overview	9
3.3.1.1 General tab	11
3.3.1.2 Available Network tab	14
3.3.1.3. Profile tab	16
3.3.1.4. Status tab	18
3.3.1.5. Statistics	18
3.3.1.6. WiFi Protect Setup (WPS) tab	19
3.3.2. Software AP	20
3.3.2.1 General tab	21
3.3.2.2 Soft_AP Advanced tab	23
3.3.2.3 Soft_AP Statistics tab	24
3.3.2.4 Soft_AP ICS tab	25

1. Introduction

Thank you for purchasing the IEEE 802.11b/g/n Wireless USB Adapter. This Wireless Adapter is easy to use and easy to setup. If you have been tired of dealing with all those messy wires to connect a laptop or PC to office or home network, this Wireless adapter is an ideal access solution for wireless Internet connection.

A typical Internet access application for the USB wireless adapter is shown as the following figure:



There are two different ways to access Internet:

- With a wireless adaptor, receiving and transferring signal via a wireless router/AP, then passed to an ADSL modem, then to local ISP (Internet service supplier) through a pair of

telephone lines, or connected by fiber cable.

- With a wireless adaptor, receiving and transferring signal via local router/AP (Access Point) or so called Hotpoint directly.

Tips: An 802.11 WLAN is based on a cellular architecture where the system is subdivided into cells, where each cell (called Basic Service Set or BSS) is controlled by a Base Station (called Access Point, or in short AP).

2. Install the Driver and Utility

Before you proceed with the installation, please notice following descriptions.

Note1: The following installation was operated under Windows XP. (*Procedures are similar for Windows Vista/7*)

Note2: If you have installed the WLAN Adapter driver & utility before, please uninstall the old version first.

A Insert the Installation CD to your CD-ROM Drive. Execute the “Setup.exe” program. It is shown as follows:



B. Click “Next” to go to the next step.



C. Click “Finish” to complete the software installation.



3. Connect to Wireless Access Point (AP)

After installation is completed, a **Wireless Configuration Utility** will also be shown on the desktop of your computer automatically.


Insert the WLAN adapter into an USB port, an icon  should be shown in the lower right corner of your computer screen. The following procedures show how to do some settings to connect a preferred network (to AP by its SSID)

3.1. Use Windows Zero Configuration (WZC) (*For Windows XP*)

- A. Left click the icon  in the bottom-right corner so that

User's Manual **USB WLAN Adapter**

the configuration utility can be launched. Select "Windows zero config", and then pops up a prompt dialog box.

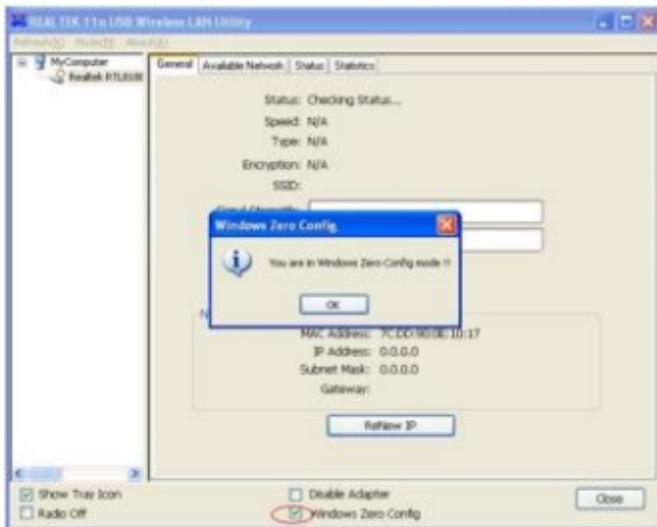


B. Right click the icon  (Wireless Network Connection) at the bottom-right corner on your screen and then select "View Available Wireless Networks". A window pops up, and it lists all available networks nearby your location. If you can't find a wanted network (by the SSID of the AP), please click the "Refresh network list" in the upper-left corner to see if it can be listed.

User's Manual USB WLAN Adapter



C. Double-click the wanted network, input the right security key and then click "Connect". After a while, you should be notified that your PC is wirelessly connected to the network.

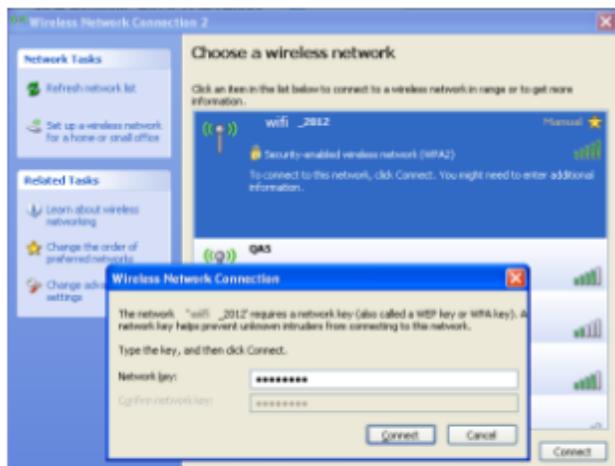

3.2. Connect to AP under Windows 7

A. After the driver is installed, the icon  of system tray appears, and left-click the icon , then it should survey and list all the available networks nearby, the list looks like:



B. Click the preferred network by its SSID, then click "Connect".



C. If the network is encryption protected, you have to input its Security key here, and then click "OK" to connect to the

network.



D. After a while, the system should show the connection information. The “Connected” means that the network is accessible now.



3.3. Use the Wireless Configuration Utility.

3.3.1. Utility Overview

The Configuration Utility is a powerful application that helps you to configure the WLAN adapter, monitor the link status and the statistics.

Right click the icon  in the system tray. There are some items for you to operate the configuration utility.




Open Config Utility :Open the configuration utility.

About : show the utility information.

Hide: Hide the utility in the system tray.

Quit: Quit the utility in the system tray.

There are several parts in the utility screen. Please refer to the following description table for more information.

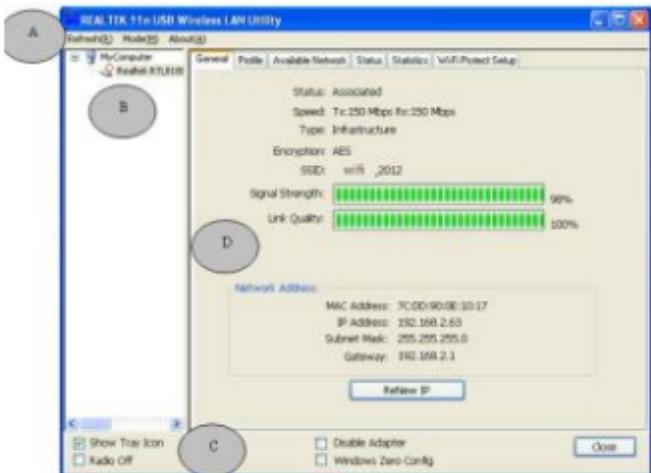

Section	Description
A	<p>Refresh – Refresh adapter list in the “B“ block.</p> <p>Mode – There are two modes: Station and Access Point. If “Station“ is selected, the adapter works as a wireless adapter. If “Access Point“ is selected, the adapter will work as a wireless AP.</p> <p>About – To check the version of the utility, select this item.</p>


B	<p>This is a list for you to configure several adapters in your PC from the utility.</p>
C	<p>Show Tray Icon – To show the icon in the system tray, select the item. Disable Adapter – This function is for you to disable or enable the adapter. Windows Zero Config – To configure the adapter from Windows Zero Configuration, check the item.</p> <p><i>Notes: For Window 7, it shows “Virtual WiFi allowed” rather than “Windows Zero Config”.</i></p> <p>Radio Off – This function is for you to turn off or turn on the radio of the adapter. If the radio is turned off, the adapter will not work.</p>
D	<p>There are several tabs in the block for you to setup the function of the adapter. Please refer to the description in the following sections.</p>

3.3.1.1 General tab

Select “General“ tab to check the connection status of the adapter. This screen shows the information of Link Speed, Network Type, Encryption Method, SSID, Signal Strength,

User's Manual USB WLAN Adapter

Link Quality and Network Address of the adapter.

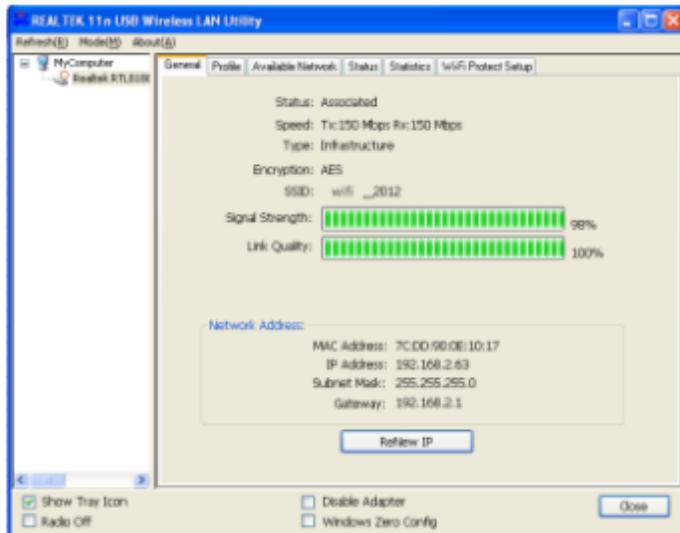

Parameter	Description
Status	It will show the connection status of the adapter
Speed	It shows the current connected data rate

User's Manual **USB WLAN Adapter**

Type	Infrastructure – This operation mode requires the presence of an 802.11 Access Point. All communication is done via the Access Point or Router. IBSS – Select this mode if you want to connect to other wireless stations in the Wireless LAN network without through an Access Point or Router.
Encryption	It displays the encryption setting of the current connection including None, WEP, TKIP or AES.
SSID	The SSID (up to 32 printable ASCII characters) is the unique name to identify an AP.
Signal Strength	It indicates the wireless signal strength.
Link Quality	It indicates the wireless link quality.
Network Address	It shows the MAC, IP address and other information of the adapter.

3.3.1.2. Available Network tab

Click on the "Available Network" tab. The configuration Utility should scan and list the surround WLAN networks (by SSID of AP), then it will connect to any unencrypted network automatically.


If you wish to connect to a specific AP, select the SSID of the AP and double-click it. If the AP you wish to connect is not displayed in the "Available Network" window, then please click 'Refresh'. You can also change the connection to another network.

Parameter	Description
Available Network(s)	This list shows all information of the available wireless networks within the range of your adapter. The information includes SSID, Channel, Encryption, Network Authentication, Signal and etc. If you want to connect to any network on the list, double-click the preferred network.
Refresh	Click "Refresh" to update the available networks list. It is recommended that you refresh the list for the latest information.

User's Manual USB WLAN Adapter

Add to Profile


A profile stores the setting of a network, so that you can connect to the network quickly. To add the selected network to a profile, click this button.

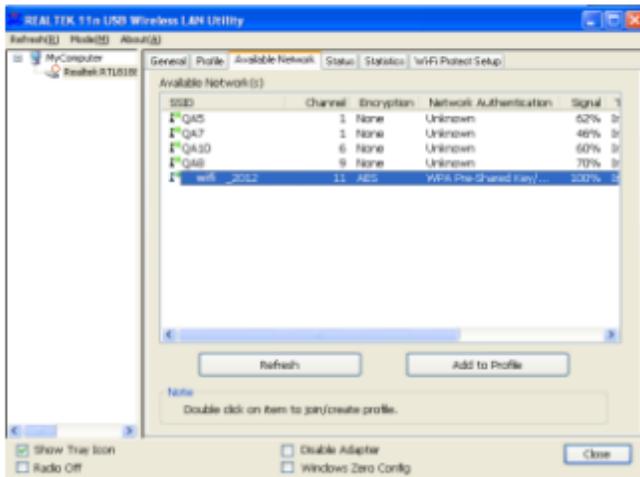

Tips: If the preferred AP is too far away from your PC or there are too many obstacles between the AP and your PC, or too much signal interference around your local area, the SSID of AP might not be listed because of its weak or poor signal received.

The system scans all the channels to find all the access points/stations within the accessible range of your adapter and automatically connect to the wireless network with the highest

signal strength.

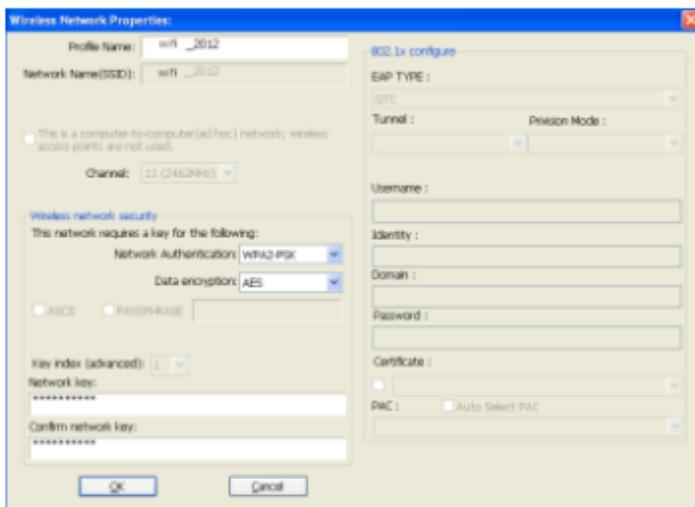


Double-click the wanted SSID, input the related security setting of the AP and click “OK” to start network connection.

3.3.1.3. Profile tab

The “Profiles List” is for you to manage the networks connected frequently. You are able to add/Remove /Edit/Duplicate/Set Default to manage a profile.

User's Manual

USB WLAN Adapter

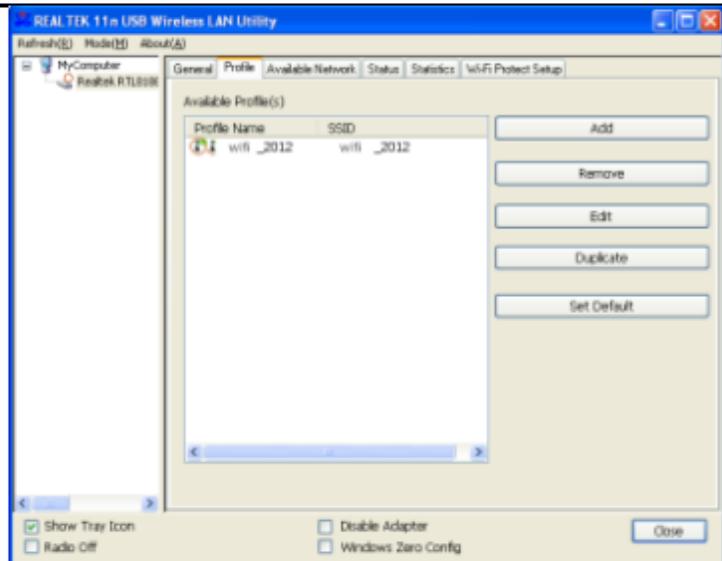

Parameter	Description
Available Profile(s)	This list shows the preferred networks for the wireless connection. You can add, remove, edit, duplicate the preferred networks or set one of the networks as the default connection.
Add/ Remove/ Edit Button	Click these buttons to add/ delete/ edit the selected profiles.


Duplicate	If you like to build up the new profile with the same settings as the current profile, then you can select this feature.
Set Default	To designate a profile as the default network for the connection from the available profiles list, click the button

3.3.1.4. Status tab

This screen shows the information of chipset manufacturer, driver version, settings of the wireless network the adapter is connecting to, linking time and linking status. If you don't ensure the status of the adapter and the network you are connecting, please go to the screen for more details.

3.3.1.5. Statistics

You can get the real time information about the packet transmission and receiving status during wireless communication from the screen. If you want to recount the statistics value, please click "Reset".

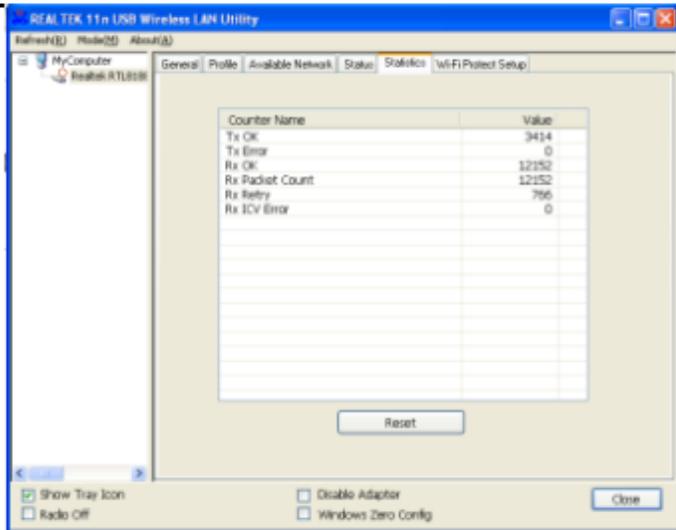


3.3.1.6. WiFi Protect Setup (WPS) tab

The adapter doesn't have a hardware WPS button to support WPS setup, but it supports software WPS setup.

Wi-Fi Protected Setup (WPS) is the latest wireless network technology which makes wireless network setup become very simple. If you have WPS-enabled router/AP, and you want to establish a secure connection to it, you don't need to complexly configure the encryption mode of the router/AP. The WPS setup page will let you easily and securely connect the adapter to a router/AP.

Click the Pin Input Config, and then press a WPS button or enter a set of 8-digit code on the router/AP you wish to

establish a secure connection.

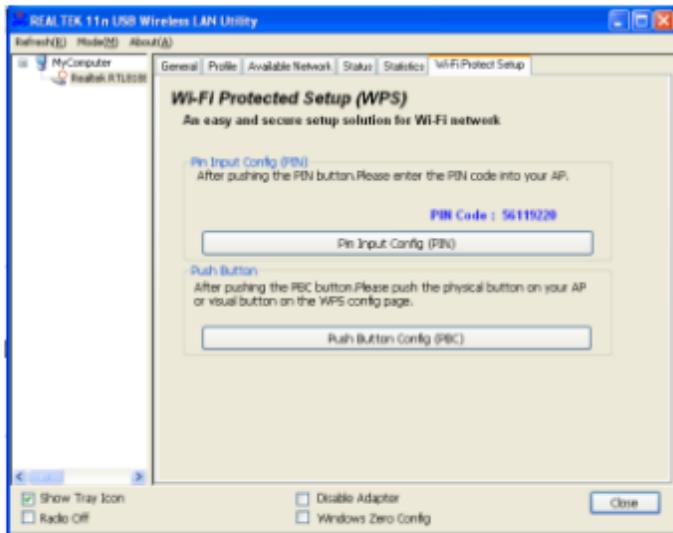


Tip: For some router/AP, the WPS button might be named as QSS.

3.3.2. Software AP

The USB wireless adapter can run as a wireless software AP. Open the USB Wireless LAN Utility, click on “Mode(M)” and select the option “Access Point”. It needs to wait a while to switch the adapter from station mode to Software AP mode.

There are several tabs for you to setup.

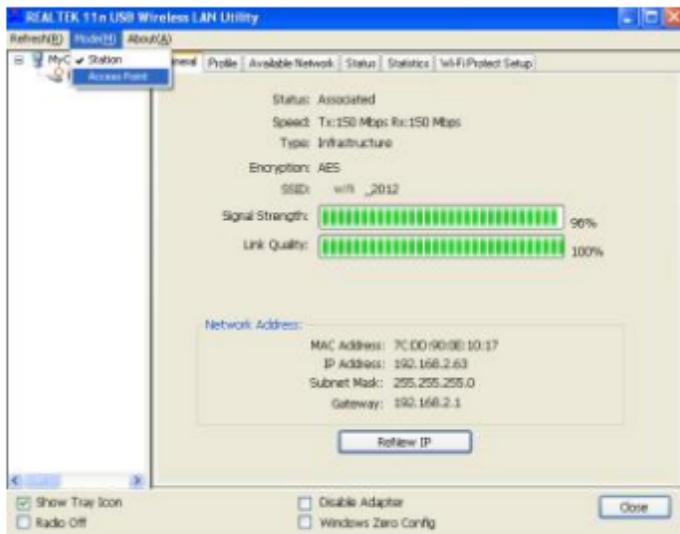


3.3.2.1 General tab

The “General” tab of the Soft_AP including SSID, config and so on are described as follows.

User's Manual

USB WLAN Adapter

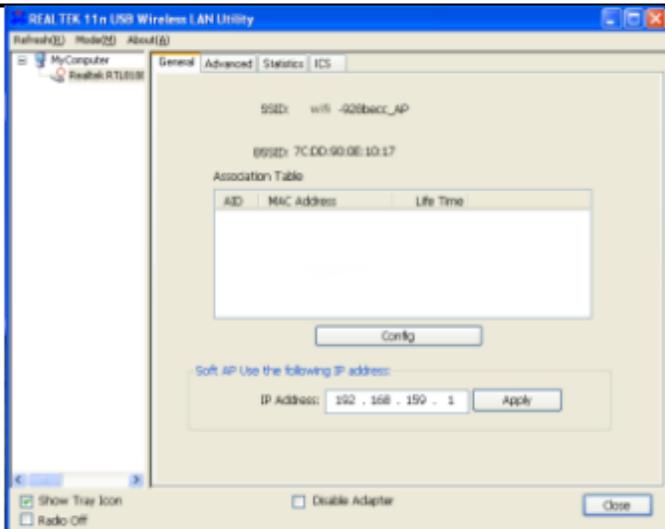


Parameter	Description
SSID	<p>The SSID (up to 32 printable ASCII characters) is the unique name to identify an AP.</p> <p>The default SSID of the AP is Full Computer Name plus “AP“. Wireless adapters connect to the AP should set up the same SSID as the AP.</p>
BSSID	Display the MAC address of the adapter.

User's Manual **USB WLAN Adapter**

Association Table	All the wireless adapters connected to the software AP will be displayed in the list.
Config	Click "Config" for setting more configuration of the AP.

3.3.2.2 Soft_AP Advanced tab

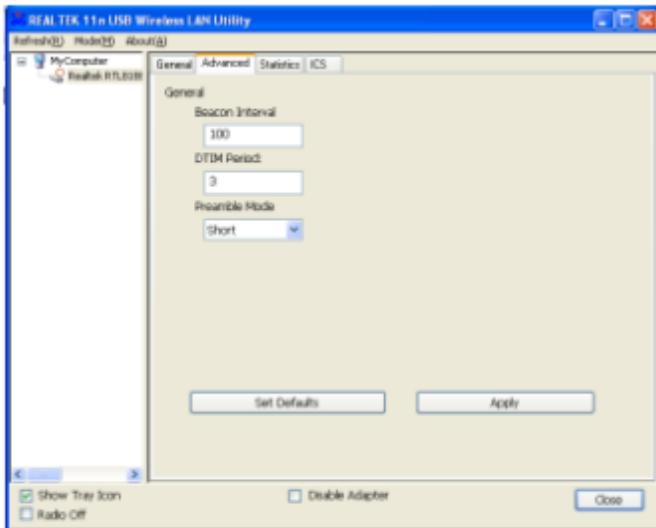


User's Manual **USB WLAN Adapter**

Parameter	Description
Beacon Interval	Beacon Interval specifies the duration between beacon packets (milliseconds). The range for the beacon period is between 20-1000 milliseconds with a typical value of 100.
DTIM Period	Determines the interval that the Access Point will send its broadcast traffic. Default value is 3 beacons.
Preamble Mode	The preamble defines the length of the CRC block for communication among the wireless stations. There are two mode including Long and Short. High network traffic areas should use the shorter preamble type.
Set Defaults	Set the setting values to defaults.
Apply	Confirm the settings in the “Advanced”.

3.3.2.3 Soft AP Statistics tab

You can get the real time information about the data packet transmission and receiving status during wireless communication from the screen. If you want to recount the

statistics value, please click “Reset“.

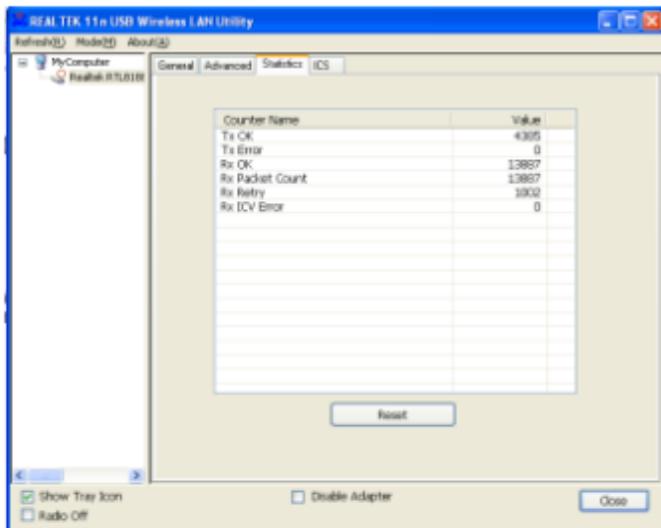


3.3.2.4 Soft_AP ICS tab

Internet Connection Sharing (ICS) is the use of the 3G cellular service, broadband with Internet access broadband via Ethernet, or other Internet gateway as an access point for other devices. It was implemented by Microsoft as a feature of its Windows operating system, for sharing a single Internet connection on one computer between other computers on the same local area network

If you want to connect to the internet through this Soft_AP, you will need to make a bridge between the Soft_AP and your internet connection. Select the internet connection and press

the “Apply” button.

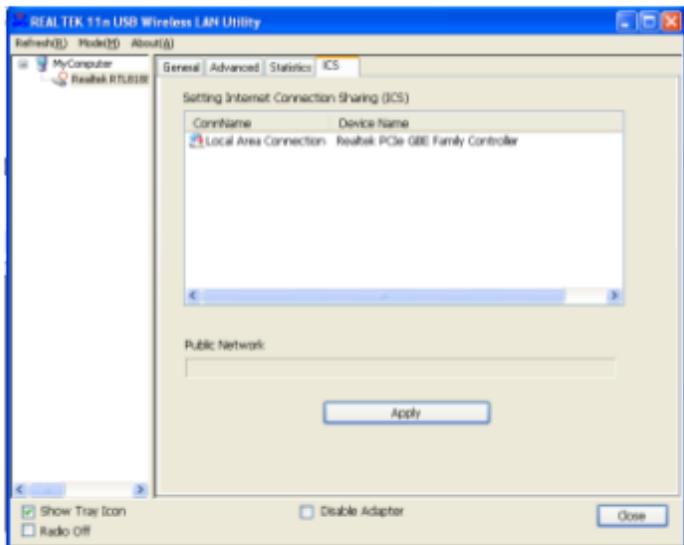

Then your internet connection is internally shared with the Soft_AP, other devices can be connected to the (AP) access point (by its SSID assigned) and then access to internet.

* As this is a modular approval, the end product will be labeled, in a visible area, with the following :

Contains FCC ID : 2AID7EC3F03