

# AUDIOBOX®

---

## Instruction Manual



**23.8inch FHD LED TV**

**TV-240SD**

**Please read and save these instruction**

## IMPORTANT INSTRUCTIONS

### SAFETY INSTRUCTIONS

#### **⚠ WARNING – TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR SERIOUS PERSONAL INJURY:**

- This product shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.
- Situate this product away from heat sources such as radiators, heat registers, stoves, or other appliances (including amplifiers) that produce heat.
- Clean the product only as recommended by the manufacturer (see “Maintenance” section for details). Unplug the power cord from the wall outlet before cleaning,
- Unplug the power plug from the wall outlet when left unused for an extended period.
- Prevent objects/liquids from falling or spilled on the product.
- Operate the product only with the supplied power cord. Route power cords so they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to plugs, convenience receptacles, and the point where they exit from the product.
- Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- Do not operate this product under the following conditions.
  - When the power-supply cord or plug is damaged.
  - If liquid has been spilled into or objects have fallen into the product.
  - If the product has been exposed to rain or water.
  - If the product does not operate when used according to the operating instructions.
  - If the product has been dropped or damaged in any way.
- Do not attempt to service the product; take it to the electronics repair shop of your choice for any servicing or repair.
- Do not overload wall outlets, extension cords, or integral convenience receptacles.

- Connect this product to the power outlet which has protective earth connection.

## **⚠ CAUTION- TO REDUCE THE RISK OF PERSONAL INJURY OR PRODUCT/PROPERTY DAMAGE:**

- This product is intended solely for non-commercial, non-industrial, personal use as a television. Do not use this product for any other purpose.
- Do not subject the product to violent shocks, extreme temperatures, or lengthy periods of direct sunlight.
- Keep the product away from magnetic objects, motors, and transformers.
- Do not use outdoors in inclement weather.
- Do not use the TV while driving; this is dangerous and is illegal in some areas.



**At full volume, prolonged listening to the portable audio device may damage the user's hearing.**

## **BATTERY HANDLING AND USAGE:**

- Keep batteries away from children and pets. Only adults should handle batteries.
- Never throw batteries into a fire or expose them to fire or other heat sources.
- Follow the battery safety and usage instructions.

## **ACCESSORIES**

User Manual.....	1
Remote Control.....	1
Car Adaptor.....	1

All the pictures in this manual are just for your reference, appearance and display should subject to the final product.

## TABLE OF CONTENTS

### GETTING STARTED

IMPORTANT INSTRUCTIONS.....	1-2
ACCESSORIES.....	2
FEATURES.....	4
GENERAL PARTS.....	5-6
REMOTE CONTROL.....	7-8
REMOTE CONTROL PREPARATION.....	9
BASIC CONNECTION.....	10-13

### OPERATIONS

INITIAL SETUP.....	15-20
HOME OF SMART TV.....	21
SETTINGS.....	22-27
TV GUIDE.....	28
MULTIMEDIA PLAYBACK.....	29
HOME DASHBOARD.....	30

### FOR REFERENCE

MAINTENANCE.....	31
WALL MOUNTING.....	31
STANDINSTALLATION.....	32
SPECIFICATIONS.....	33
TROUBLESHOOTING.....	34-35

## FEATURES

### **24" LED DISPLAY**

This unit has a built-in LED display window to provide clear vision and low radiation.

**With Parental Control**

**Support Auto TV Scanning**

**Support Digital Broadcasting Reception**

**Support TV Guide Function**

**Support USB Multimedia Playback**

**Support Multi-languages On Screen Display**

**Support Full Function Remote Control**

**Support LAN and HDMI Input**

**Support EARPHONE and OPTICAL Output**


**With Detachable Stand Holder**

**With External Antenna Jack**

**With Built-in Speakers**

## GENERAL PARTS


### MAIN UNIT

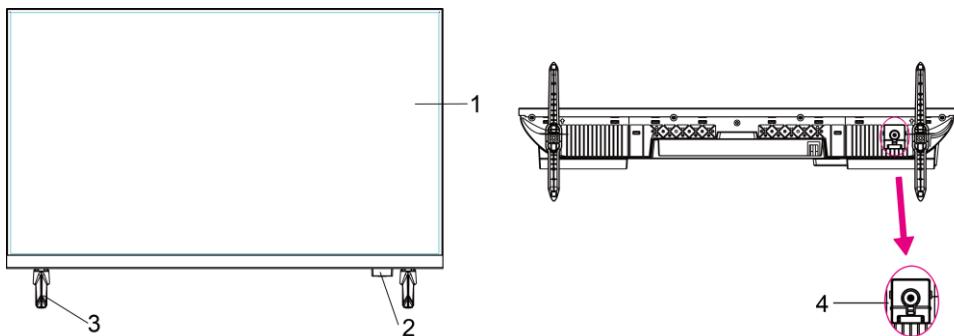

1. LED display screen
2. Remote control sensor- In standby mode the indicator light will display red color; when switching on the unit the indicator light will display blue color.
3. Stand holder
4. STANDBY button- To turn ON/OFF the TV.

## GENERAL PARTS

### Back View

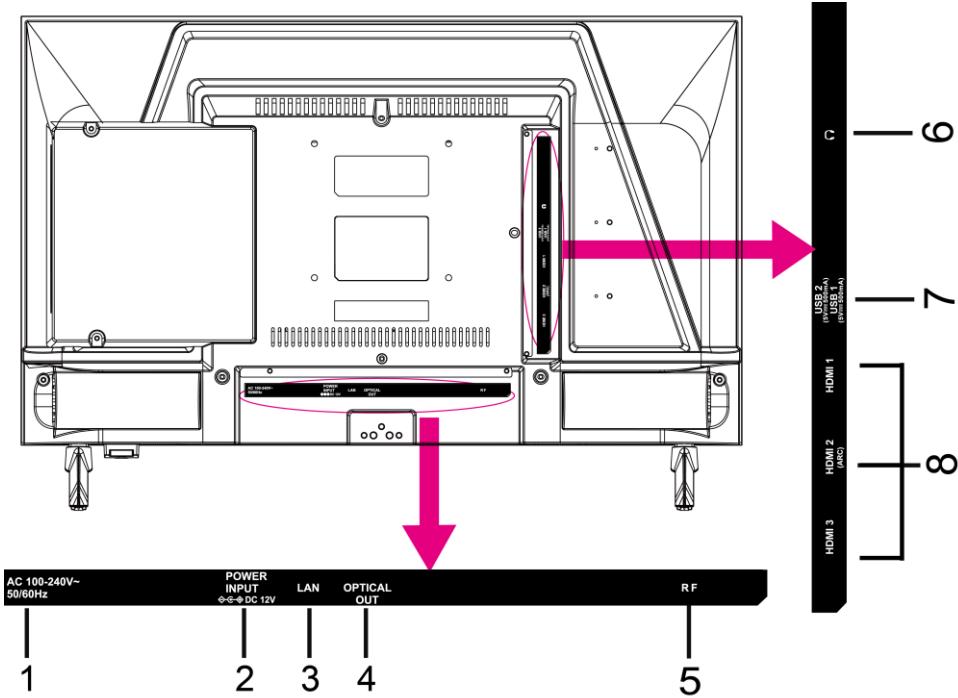

1. Power input (AC cord)
2. Power input (DC)
3. LAN output terminal
4. OPTICAL output terminal
5. RF input terminal- To connect the external antenna.
6. EARPHONE output terminal
7. USB input terminal
8. HDMI1/2/3 input terminal (Only HDMI 2 support ARC)

## REMOTE CONTROL

⌚ (STANDBY): Turn the TV ON or switch to standby.

⌚ (STANDBY): Turn the Set Top Box on or switch it to standby.

0-9: Number selection key.

—/LIST : Input / Channel List.

□ / QUICK ACCESS: Brief: Number key; Hold: Quick Access.

… / AD/SAP: Brief: Screen remote call; Hold: Audio Description.

🔉 : It adjusts the volume level.

📺: You can change the programme.

🔇: Mute the sound.

🎙: Activate Voice Recognition.

🏡 (HOME): Display the Home menu.

⚙️ : Enter the Quick Settings menu.

**Wheel button:** Scroll up/down or press to confirm the setting.

▲/▼/◀/▶: RIGHT/LEFT UP/DOWN buttons to navigate the on-screen menus.

⟲ (BACK): Move to the previous step.

GUIDE (GUIDE): You can check the program guide.

NETFLIX : Access NETFLIX.

INPUT : Select an input source.

prime video : Access prime video.

**Colour buttons** : Correspond to various functions in the menu.

(Red Button: Recording function.)

**MOVIES:** Search Movies

▶: Play.

|| : Pause.



**Note:** The marks and positions of remote control may vary depending on the model.

For Subtitles, press and hold the Mute Button to go to Accessibility Settings. Here you can turn subtitles on or off.

When you turn on the TV first time, press OK button on remote control to connect to your TV.

Press HOME + BACK button on remote control to disconnect.

## **REMOTE CONTROL(FOR DVD)**

### **1 STANDBY(POWER)**

Press to turn on/off the DVD mode (First set source to AV using the TV remote control).

### **2 ▲**

To open or close the disc compartment in DVD mode.

### **3 VOL-**

Press to decrease the volume.

### **4 VOL+**

Press to increase the volume.

### **5 ◀◀ / ▶▶ / ◀◀◀ / ▶▶▶ / ENTER**

To move fast backward.

To move fast forward.

To play previous chapter.

To play next chapter.

To confirm a selection.

### **6 ▶▶||**

Press to start/pause playing.

### **7 ■**

Press to stop playing.

### **8 SETUP**

Press to enter setup menu in DVD mode.

### **9 NUMBER BUTTONS(0-9)**


To input the number information.

### **10 GOTO**

To play a certain point in DVD mode.

### **11 MENU**


To display the main menu.

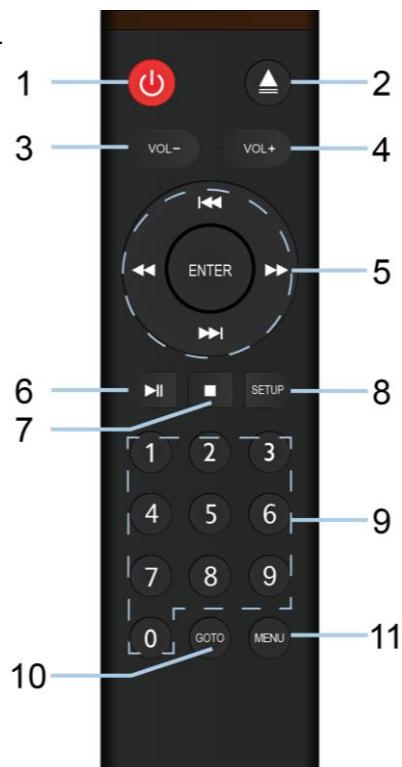

## **REMOTE CONTROL PREPARATION**

### **BATTERY INSTALLATION**

- Press and hold the arrow area on the back of Remote Control and pull out to separate the back cover from the Remote Control.
- Insert two 1.5V AA size batteries. Make sure to match the polarity markings (+/-) on the batteries with the indication inside the compartment.
- Install back the battery compartment cover.

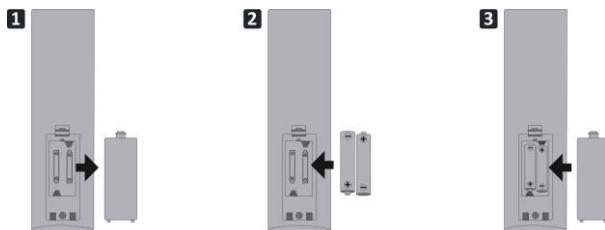

**(Note:** For reference only! The appearance may vary depending on the model.)

### **SERVICE LIFE OF BATTERIES**

- The batteries normally last for one year although this depends on how often the remote control is used.
- If the remote control fails to work even when it is operated near this device, replace the batteries.

#### **Notes:**

- Do not drop, step on or otherwise impact the remote control. This may damage the parts or lead to malfunction.
- If the remote control is not going to be used for a long time, remove the batteries.

## **REMOTE CONTROL OPERATION**

Point the remote control from no more than approximate 5 meters and within  $60^{\circ}$  from the remote control sensor.

#### **Notes**


- The operating distance may vary according to the brightness of the room.
- Do not point bright light at remote control sensor.
- Do not place objects between the remote control and the remote control sensor.
- Do not use this remote control while simultaneously operating the remote control of any other equipments.




## BASIC CONNECTION

- Ensure all the cables are disconnected from the main unit before connecting to AC power source.
- Read through the instructions before connecting other equipments.

### CONNECTING TO AC POWER SOURCE

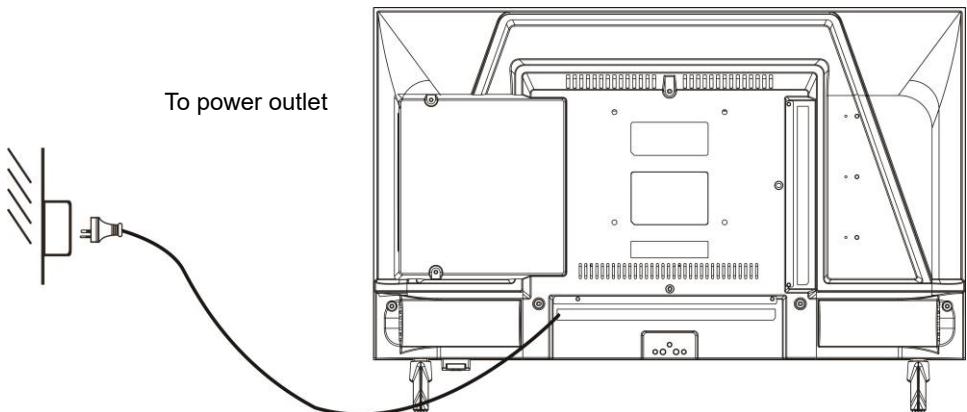


### CONNECTING TO DC POWER SOURCE

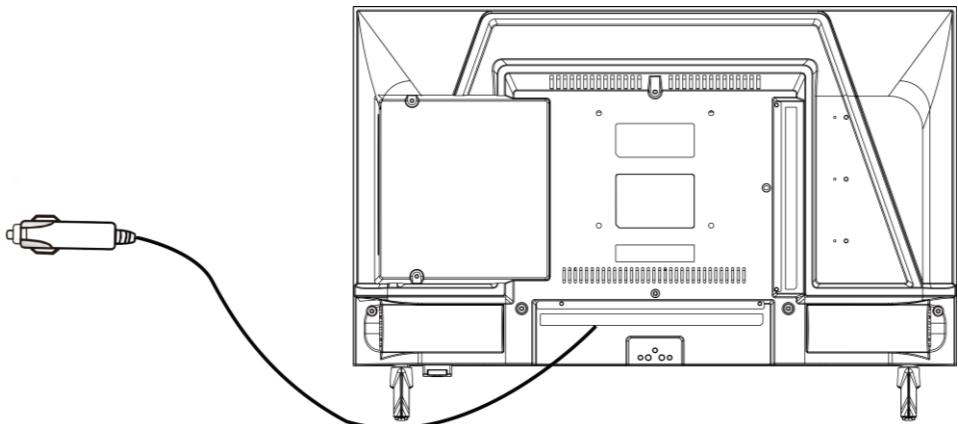




## CONNECT EXTERNAL ANTENNA TO UNIT


Install external antenna into antenna jack for best picture.

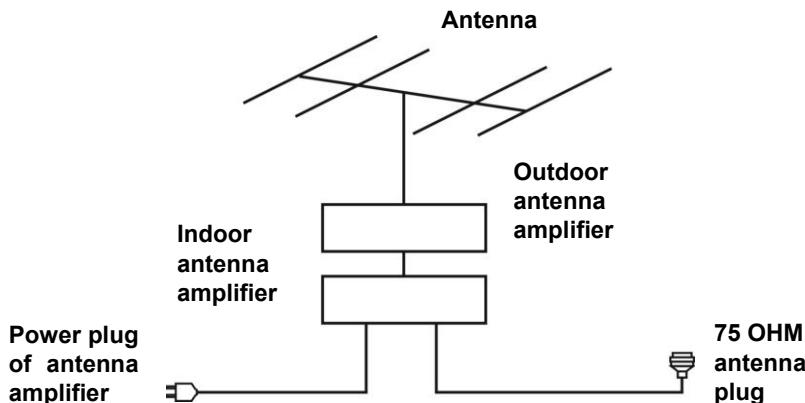


## HDMI CONNECTION

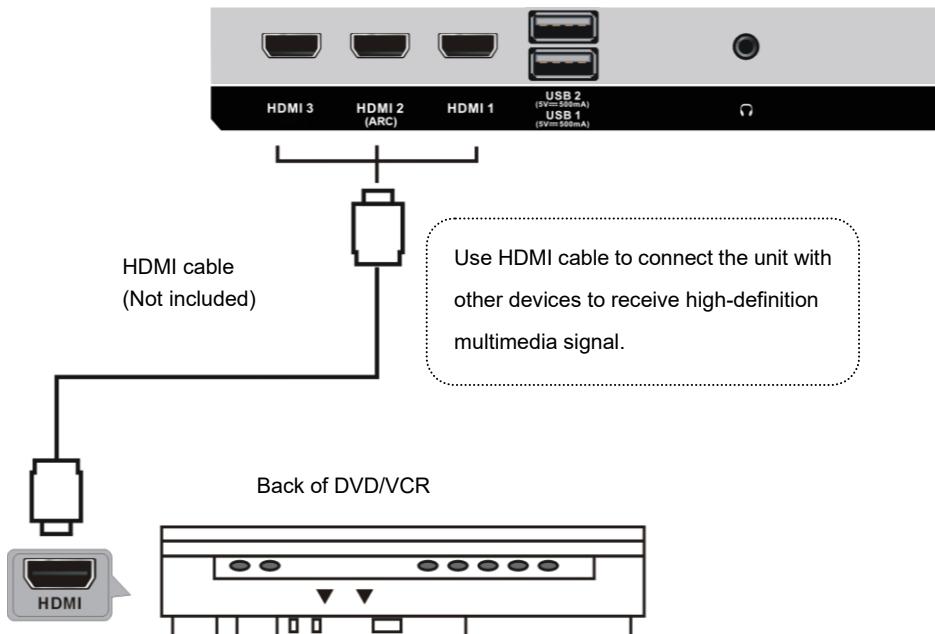

## EARPHONE CONNECTION

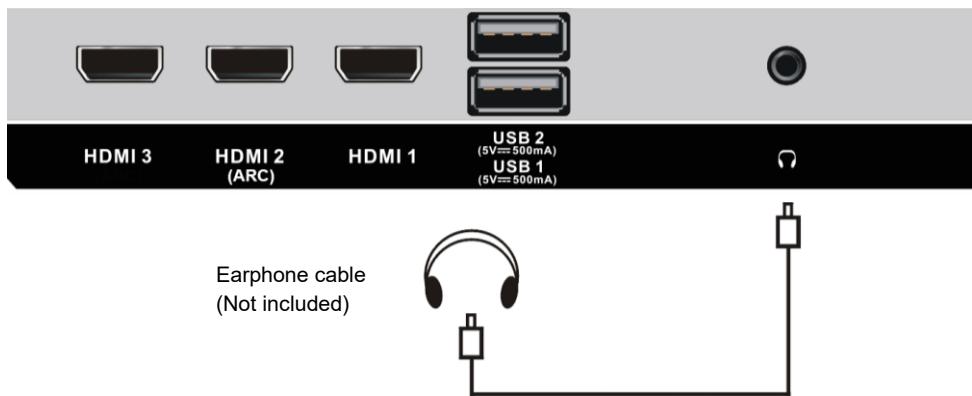

## USB CONNECTION

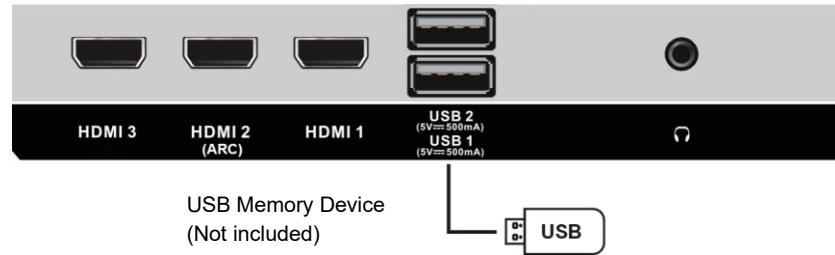

## OPTICAL CONNECTION



Use OPTICAL cable (not included) to connect the unit with amplifier or other audio decoding devices for digital audio signal output.

## LAN (Local Area Network) Connection



Use a LAN cable (not included) to connect this TV with available network.

## **Playing Sound through Bluetooth**

**Connect a smart device to the TV via Bluetooth to play sound from the smart device through the TV's speakers.**

1. Connect the TV to the network.
2. Turn the smart device's Bluetooth on, then select the TV from the list of devices.
3. The TV will be connected to the smart device.

**Note:**

The TV may not be found in the list of smart devices while searching for a broadcast programme or setting up a Bluetooth speaker.

If you connect a smart device to the TV via Bluetooth and listen to the sound of the smart device through the TV speaker, the TV may not be connected to any other smart device.


### **Connect speakers or headphones to play TV sound.**

1. Turn on the output speaker or headphones in Bluetooth mode.
2. Press  button on the remote control and select  Settings - Sound - Sound Out - Use Wireless Speaker - Bluetooth Device. Press OK Button to confirm.
3. Select the connectable Bluetooth device name and press OK to connect. Now you can play TV sound on an external speaker or Bluetooth headphones.

# Initial Setup

## ***Common operations for the initial setup:***

When you turn on the TV first time, press OK button on remote control to connect to your TV as per the screen below.

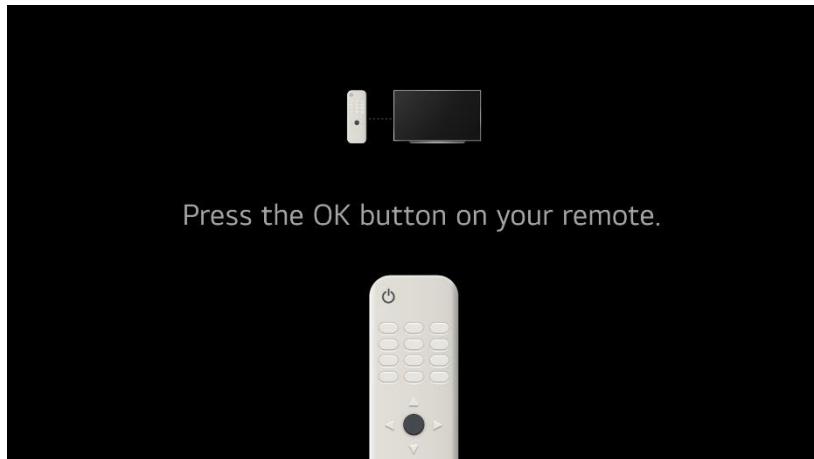

Press the OK button on your remote.

## **Select the language**

Press Navigation button to select desired language. Press RIGHT button to highlight “Next” and press OK to the next step.



## Select the country

Press Navigation button to select desired country. Press RIGHT button to highlight “Next” and press OK to the next step.



## Time Zone


Press Navigation button to select desired time zone. Press RIGHT button to highlight “Next” and press OK to the next step.

## How to set up the TV

Press Navigation button to select Mobile Device or TV.


Select TV and press OK button to confirm.

Press Navigation button to highlight “Next” and press OK button to enter the next step.

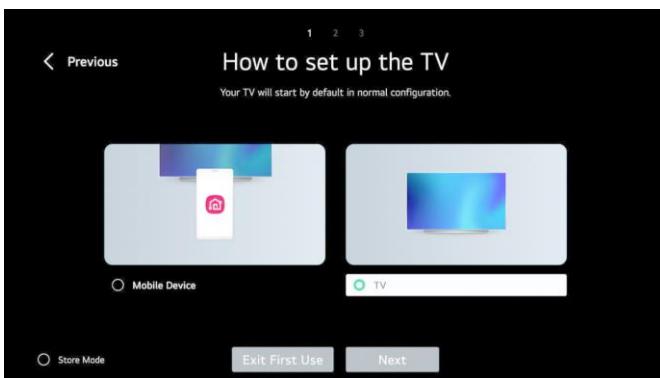


## Internet Connection

Select “Skip” to go to next step directly, or select available wireless and input the password to connect to the network.

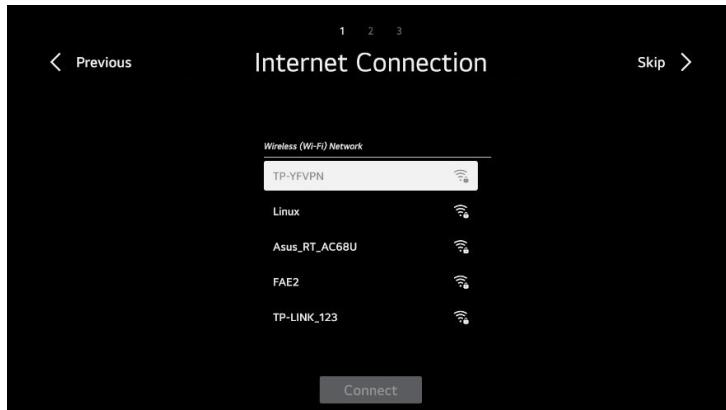


Once you connect successfully, the next step is “Terms & Conditions”. Highlight “Next” and press OK button to enter the next step.


Tick “Select All”, then highlight “Agree” and press OK button to enter the next step.

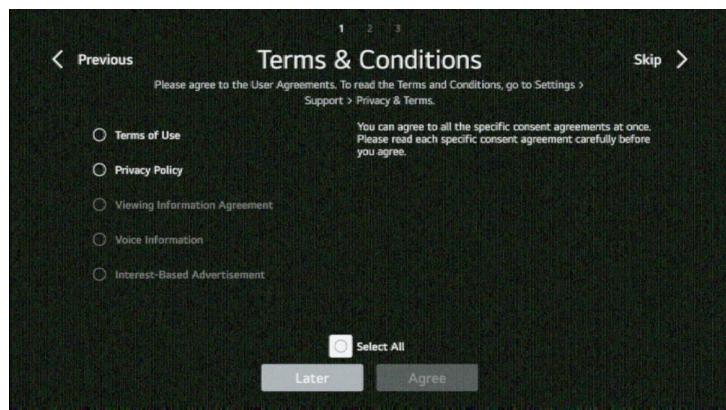

**User Environment Analysis:** select the way to watch TV.  
Highlight “Next” and press OK button to enter the next step.

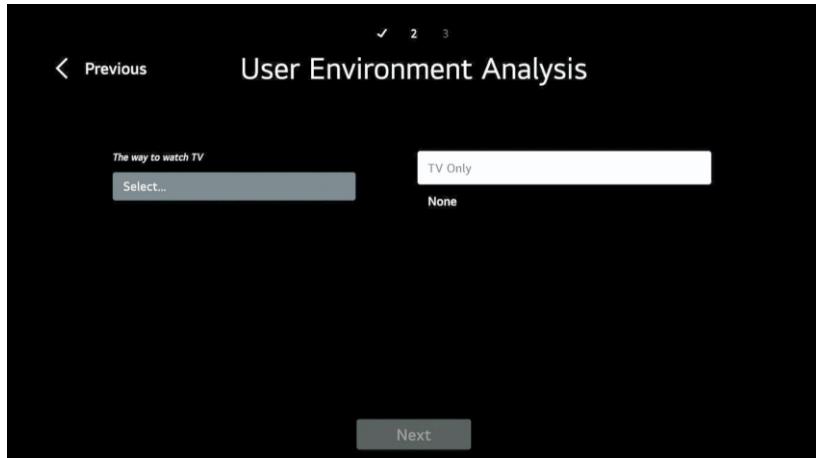


**Broadcast Address Settings:** Input the service area postcode.  
Input the postcode, highlight “Enter” and press OK button to confirm.  
Highlight “Next” and press OK button to the next step.

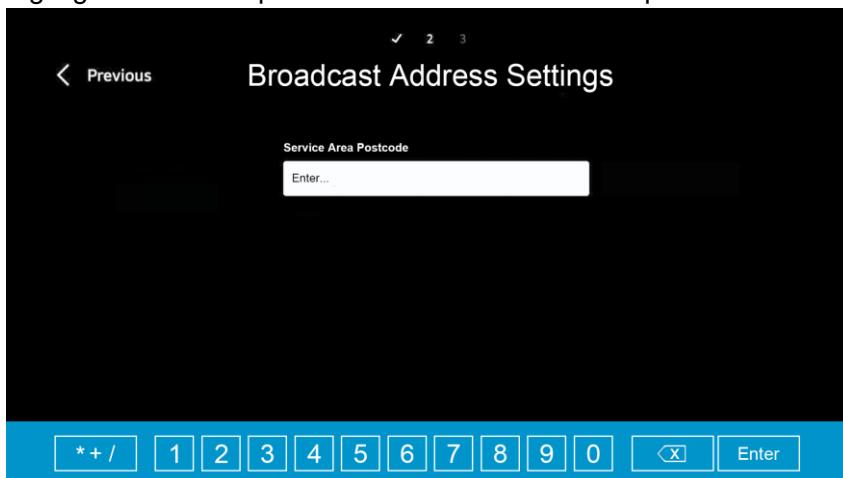

**TV installation type:** Select installation method for your TV.

Press navigation button to select “Stand” or “Wall-mounted”, then press OK button to enter the next step.

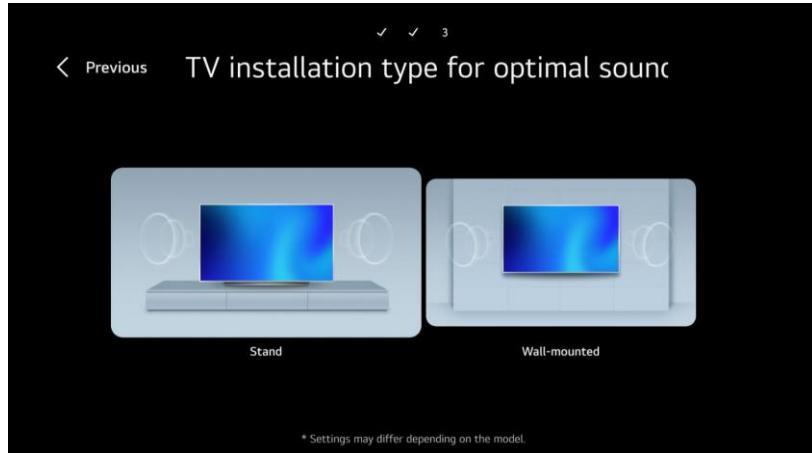



**SW Automatic Update:** Turn on/off the function of software automatic update. Press navigation button to highlight “Next” and press OK button to the next step.

## Programme Tuning

Make sure your antenna or cable line has connected to the correct port behind the TV.

Highlight “Next” and press OK button to enter the next step.

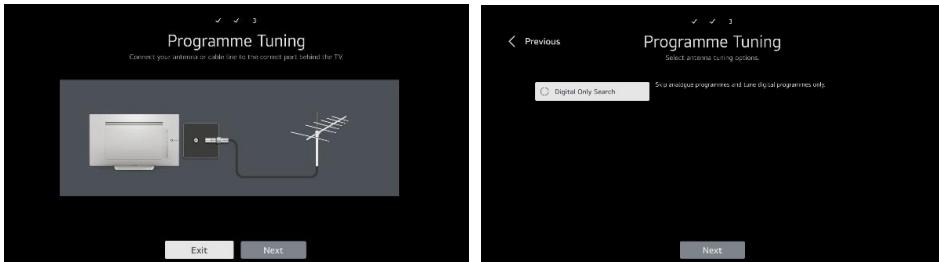

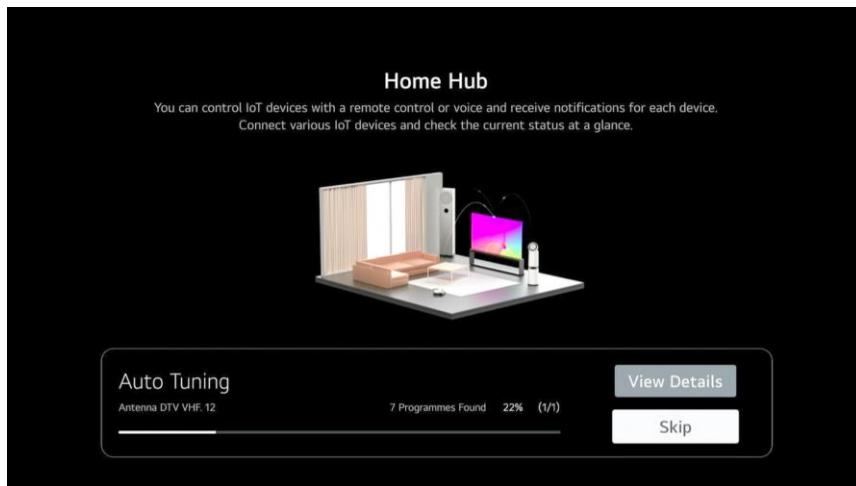

After programme tuning completed, highlight “Done” and press OK button to enter the next step.

## User Account


Sign in to your account to enjoy recommended contents and various app service. Or select “Skip” to enter the next step.

## First Use is completed

Highlight “Done” and press OK button to enjoy your TV.

# Home of Smart TV

- Before using Smart function, please connect a Wi-Fi or Wired network through “Initial Setup” or OSD menu (press  button on the Remote Control and go to “Network”).
- Press  (HOME) button on Remote Control to enter the HOME page of Smart TV.

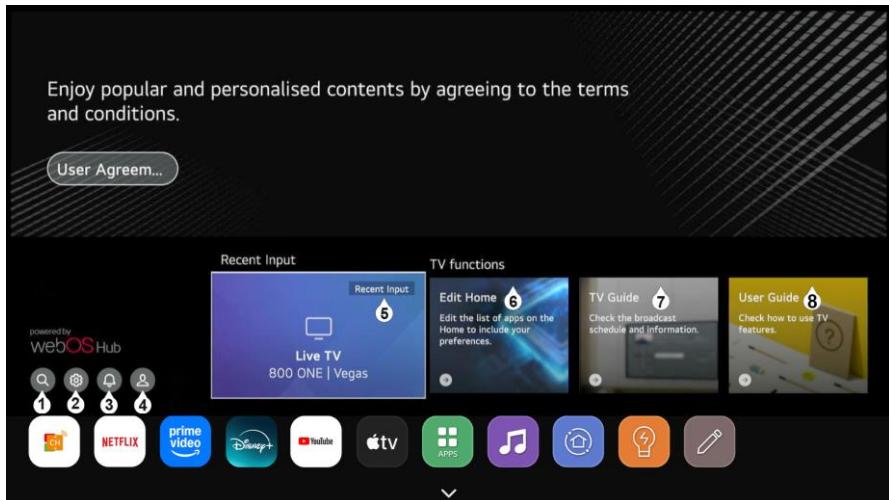

(Availability of some apps and services may vary)

---


1. Search available contents.
2. Setting: Enter the quick menus.
3. Notifications: Enter the notification list.
4. Sign in to your account.
5. Enter the TV input you watched recently.
6. Edit Home: Edit the app listed on the home page.
7. TV Guide: Enter the TV Guide page.
8. User Guide: Enter the User Guide.

---

# Setting Menus

- The unit contains different setting menus. Once the initial programming is entered, it will remain in the memory until it is changed, and the unit can always be operated under the same conditions.
- Menu pictures are for reference only. They may vary due to software upgrade.
- Press  button on the remote control to select Live TV.
- Press  (OK/ENTER) button to confirm selection.
- Press  button to go back to previous step.
- Press  button on the remote control to open the Quick menu. Select the  (All Settings) icon on the Quick menu and press OK button to open the whole settings menu.

## 1. Picture

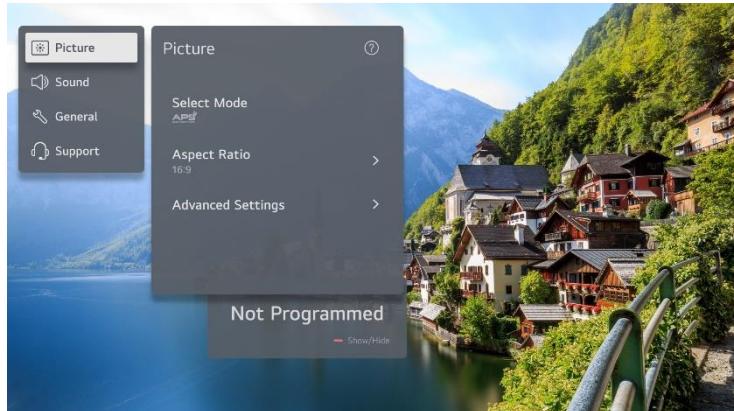

### 1.1 Select Mode

**Vivid:** Sharpens the image by increasing the contrast, brightness and sharpness.

**Standard:** Display the picture with natural contrast, brightness and sharpness levels.

**Basic:** The Energy Saver feature changes settings on the TV to reduce power consumption.

(The configurable items differ depending on model.)

**Cinema:** Suitable picture for movies.

**Cricket:** Suitable picture for sports games. Sharpens the image of rapid movements such as kicking or throwing a ball.


### 1.2 Aspect Ratio

Select the available screen size and aspect ratio.

## 1.3 Advanced Settings

You can adjust the TV screen to the finest details as you like.

## 2. Sound

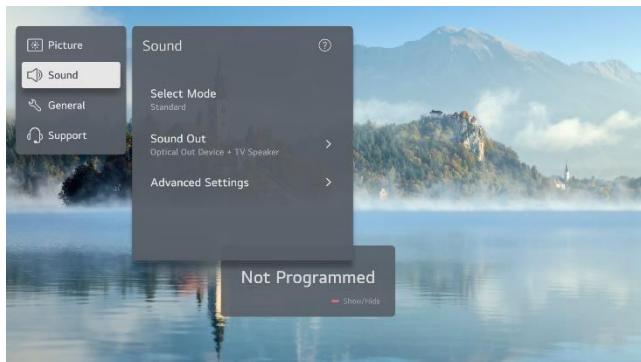

### 2.1 Sound Mode

**Standard:** Optimises the sound for all type of content.

**Cinema:** Optimises the sound for cinemas.

**Clear Voice:** Boosts voice clarity.

**Cricket:** Optimises the sound for sports games.

**Music:** Optimises the sound for music.

### 2.2 Sound Out

Select the TV internal speakers or external connected device as the sound output.

**Note:** The TV speakers will output no sound if you have selected external connected device as the sound output.

### 2.3 Advanced Settings

Adjust TV sound as you like.

### 3. General



#### 3.1 Accessibility

Set up TV to fit individual needs to create a more convenient experience.

##### **Accessibility - Subtitle**

Highlight “Subtitle” and press OK button to enter the sub-page. Press OK button repeatedly to turn on or turn off the subtitle.

#### 3.2 AI Service

Set the detailed options for the AI function.

#### 3.3 Game Optimiser

Set up various features to enjoy the game more realistically. It only works with HDMI inputs.

#### 3.4 Family Settings

To have a safe and healthy TV viewing environment, the following features are available: Usage Limits Settings, Eye Care Mode, Volume Limit Mode, and Screen Time Report.

#### 3.5 Programmes

Set up and manage settings related to broadcast programmes.

##### **Programmes - Programme Tuning - Auto Tuning)**

Highlight “Auto Tuning” and press OK button to start auto tuning.

(To get all available channels, the TV will need to be re-tuned every time you are using it at a new location.)

#### 3.6 Network

Adjust settings related to your wired/wireless network.

Highlight “Network” and press OK button to enter the sub-page.



Press navigation button to select Wired Connection or Wi-Fi Connection.

Wired Connection: If the router connected to the network supports the DHCP feature, connecting the TV and router by wire will automatically connect to the network. If the automatic setup is not supported, you can select Edit manually to set up the network connection.

Wi-Fi Connection: Select one available wireless Internet network, and input password to connect.

### 3.7 External Device


You can set up the TV and external devices connected to the TV.

### 3.8 System

Set language, Location, Time & Timer, Safety, etc.

#### System - Time & Timer - Timers - Auto Power Off after 4 Hours

Highlight “Auto Power Off after 4 Hours” and press OK button repeatedly to turn on or turn off the function.

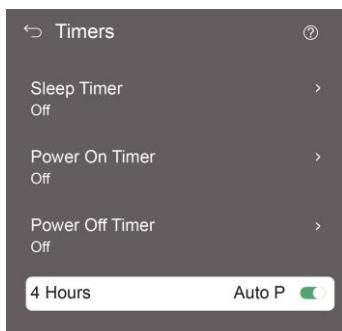


## System - Safety - Enable the function

Highlight “Enable the function” and press OK button to turn on or turn off the function. (Password is needed to turn on or turn off the function, and the initial password is “0000”.)

**TV Rating Locks:** Prevents children from watching certain adult programmers, according to the ratings limit set.

Select None/Lock All/G/PG/M/MA/AV/P, and press OK button to confirm.

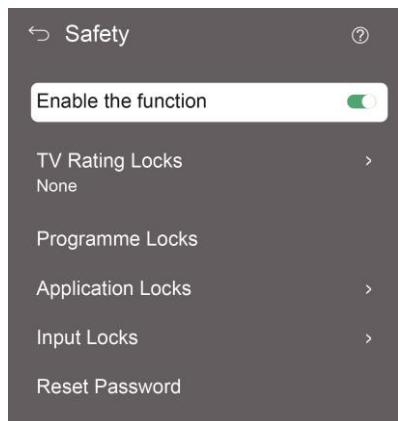

**Programme Locks:** Blocks the programmers that contain inappropriate contents for children.

Highlight “Programme Locks” and press OK button to enter the sub-page, select desired programme and press OK button to confirm your selection, then press RED button to lock it.

**Application Locks:** Restrict access to certain apps by setting up a password.

Highlight “Application Locks” and press OK button to enter the sub-page, select desired app and press OK button to lock it.

**Input Locks:** Restrict access to certain inputs by setting up a password.

Highlight “Input Locks” and press OK button to enter the sub-page, select desired input source and press OK button to lock it.

**Reset Password:** Setup a new password.

Highlight “Reset Password” and press OK button to enter the sub-page, input the initial password first to enter the “Set Password” menu, then input your new password twice and press OK.

## System - Reset to initial Settings

Highlight “Reset initial Setting” and press OK button to enter the sub-page.

Select “Reset All” : All items on the TV are changed to their default settings.

Select “Reset all except network settings” : All items except the network settings are changed to their default settings.

### Note:

The action cannot be undone.

When the “Enable the function” is turned on, password is needed to enable the reset function.)

### 3.9 Energy Saving

Adjust the brightness of the screen or set it to turn off automatically to reduce power consumption.

## 4. Support



### 4.1 Software Update

Check for software upgrade and update it if available.

### 4.2 User Guide

Check descriptions for each webOS TV function.

### 4.3 Home/Store Mode

Select where to use the TV - Home for regular TV viewing at home; Store for retail display.

### 4.4 TV Information

Check TV information.


### 4.5 Privacy & Terms

Check the Terms and conditions and Legal Information.

# TV Guide

You can view programmers and the schedule of each programmers.

In Live TV, press the GUIDE button on the remote control to enter the Guide interface.

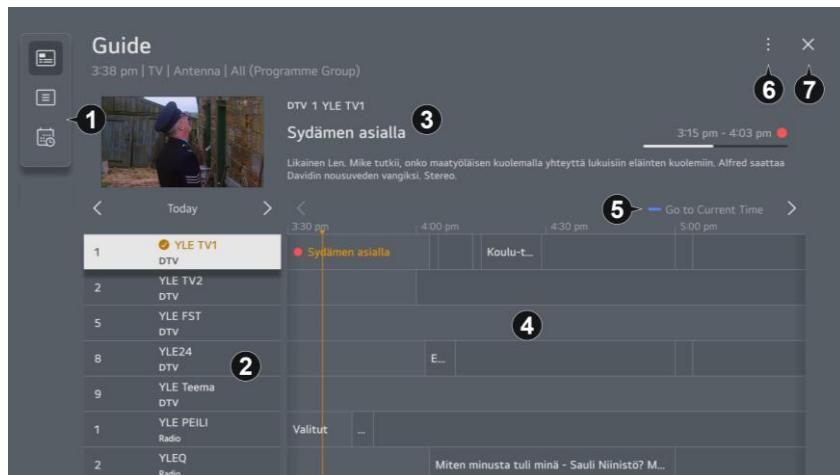

1. Select each area to access the corresponding feature.
2. You can view information on the programme and broadcaster.
3. You can view information about the programme you are currently watching as well as the focused programme information.
4. Select the See Details item or the title of the desired programme. You can view more information on the programme and perform Watch/Record (only available on certain models) or Reminder/Scheduled Recording (only available on certain models), etc.
5. You will be taken to the programme list for the current date and time.
6. Learn more options.
7. Exit the TV Guide.


# Multimedia Playback

## Connecting USB

Connect a USB storage device (USB HDD, USB stick) to the USB port on the TV to enjoy the content files stored on the USB storage device on your TV.

(Min 32GB of memory for USB stick, and Min 128G for USB HDD)


Press  and select your connected USB, press OK button and select “Media files” to enter the interface as below:

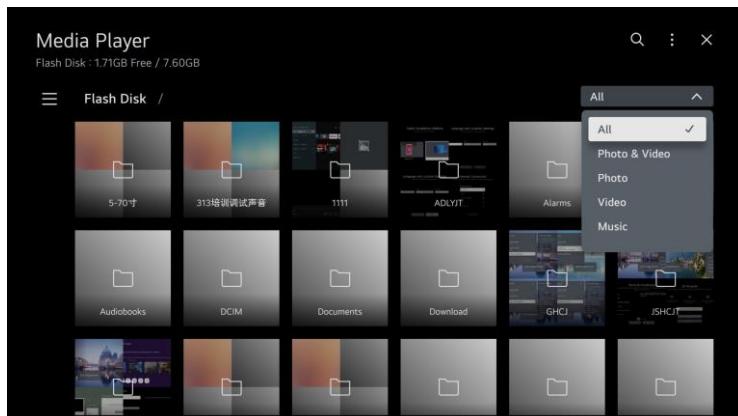

Highlight “All” and press OK button to call out the list, then press navigation button to select your preferred item: All/Photo & Video/Photo/Video/Music.

# Home Dashboard

Press the  button on remote control. Select “Home Hub” and press OK button to open it.

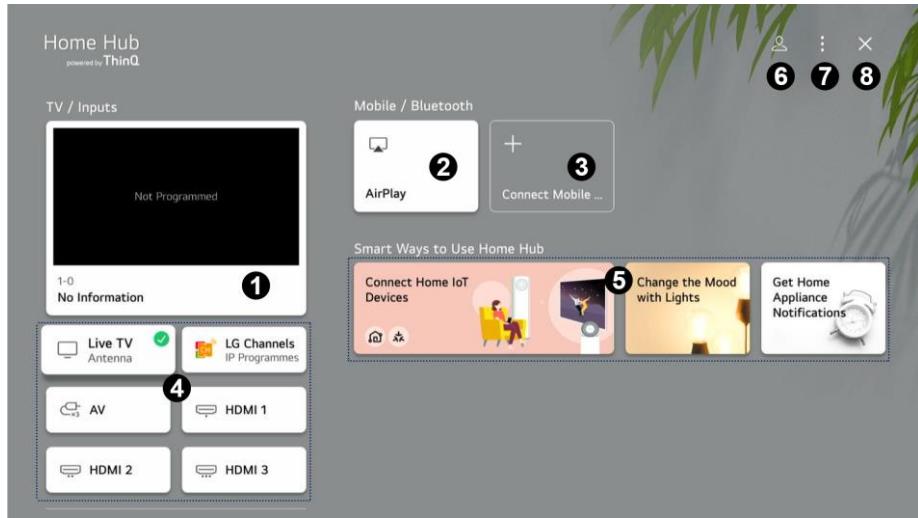

**(Note:** The Home Dashboard of Smart TV may vary for different model.)

1. Displays the content of current source.
2. Wirelessly share content from your iPhone, iPad, or Mac. Make sure your device and TV are on the same Wi-Fi or Ethernet network.
3. You can check and select the smart device connected with the ThinQ app.
4. You can check and select the input source.
5. You can connect and see devices registered with your ThinQ account. Once the device is connected, the card will be changed to a smaller size and appear at the bottom of the device connection list.
6. Log into your user account.
7. Learn more options.
8. Exit the Home Dashboard.

**Note:** Available settings vary depending on the model or region.


## MAINTENANCE

- Be sure to press STANDBY button to set the player to the standby mode and disconnect the power plug before maintaining the player.
- If the surface is extremely dirty, wipe clean with a cloth which has been dipped in a weak soap-water solution and wrung out thoroughly, and then wipe again with a dry cloth.
- Never use alcohol, benzine, thinner, cleaning fluid or other chemicals. And do not use compressed air to remove dust.
- Wipe clean with a soft cloth only to avoid scratches.

## WALL MOUNTING

- Contact a professional for assistance when wall mounting your TV. We are not responsible for any damage to the product or injury to yourself, if you mount the TV on your own.
- Do not wall mount the TV while TV is turned on. It may cause personal injury due to electric shock.
- Use standard BM4\*6mm screws (4 pieces, not included) to mount this TV.

Back of your TV

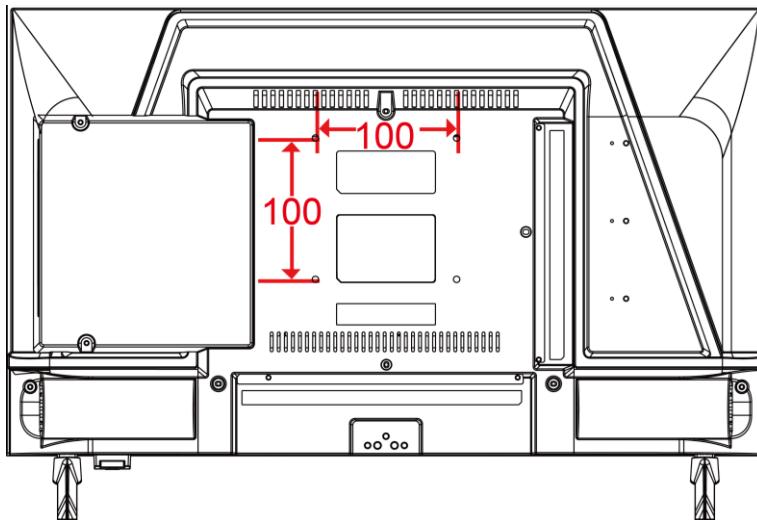

# STAND INSTALLATION

Your TV is packaged with the unit and the legs separate. Unless the TV is wall-mounted, the legs must be securely attached to the TV before use.

## Step 1

Place the TV face down on a soft cloth or cushion to prevent the panel from being damaged.

## Step 2


Align the screw holes on each Leg to the screw holes on the bottom of the TV, and press the leg into the slot.

## Step 3

Attach the Legs to the TV using the 4x Screws provided.

### NOTES:

- Unplug the power plug first when installing or removing the TV Stand.
- To avoid any damage to this TV, contact one or more persons for assistance when installing or removing the TV stand.

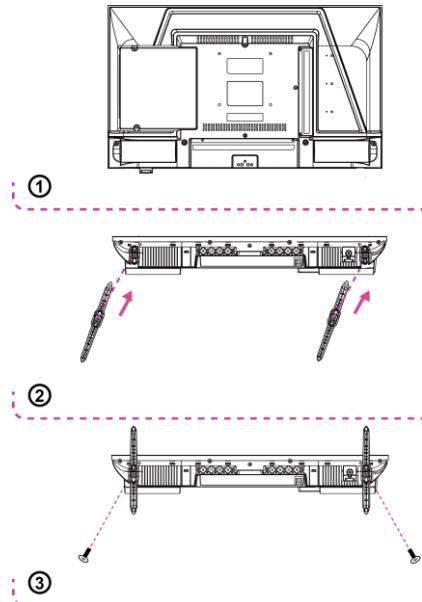

## SPECIFICATIONS

<b>Display Device</b>	23.8" LED TV
<b>Resolution</b>	1920×1080
<b>Display Colors</b>	16.7 M
<b>Contrast Ratio</b>	1000 :1(Typ)
<b>Aspect Ratio</b>	16:9
<b>USB Multimedia Playback Format</b>	<b>Movie:</b> AVI, MP4, MOV, VOB, MPEG 1/2
	<b>Music:</b> MP3, OGG, AAC, FLAC
	<b>Photo:</b> JPG/JPEG, PNG, BMP
<b>Power Source</b>	AC 100-240V, 50/60Hz, DC 12V
<b>Power Consumption</b>	Max.42W
<b>Operation Temperature</b>	-5°C to 35°C
<b>Measurement</b>	With stand: 537(W)×172(D)×368(H)mm
	Without stand: 537(W)×75(D)×320(H)mm
<b>Weight</b>	With stand: Approx.2.905Kg
	Without stand: Approx.2.87Kg
<b>Brightness</b>	180 cd/m <sup>2</sup>
<b>Refresh rate</b>	60Hz
<b>Viewing Angle</b>	178° (H); 178° (V)
<b>Memory + Storage</b>	1.5G + 8G
<b>Audio Output</b>	2x6 W

**Specifications are subject to change without notice.**

## GENERAL TROUBLESHOOTING

This section summarises a few common issues you may encounter when using this TV. Contact Customer Service if you need more assistance.

Symptom	Remedy
No power.	Connect to mains supply via the mains plug included or to a 12V supply via the 12V Car Adaptor included.
No picture.	Ensure that the equipment is connected properly.
● No sound. ● Distorted sound.	● Ensure that the equipment is connected properly. ● Ensure that the input setting for the TV and stereo system are correct. ● Adjust the master volume to a suitable volume by pressing VOL+/VOL- button.
No operations can be performed with the remote control unit.	● Check the batteries are installed with the correct polarities. ● The batteries are exhausted: replace them with new ones. ● Point remote control at the remote control sensor and operate it again. ● Operate the remote control unit at a distance of no more than 6m from the remote control sensor. ● Remove the obstacles between the remote control and remote control sensor.
No key operation (by the main unit and/or the remote control unit) is effective.	Disconnect the power plug and then reconnect it. (The player may not be operating properly due to lightning, static electricity or some other factors.)
Symptom(TV)	Remedy
No or poor picture.	● Adjust antenna or use an external antenna. ● Relocate the unit near a window (if inside a building). ● Move any units that may cause interference away from the TV. ● Do Auto Tuning again. (⚙️ - 📺 (All Settings) - General - Programmers - Programme Tuning - Auto Tuning) ● Try another channel.
No sound or poor sound.	● Check the audio settings. ● Press MUTE button on remote control to cancel mute function.

	<ul style="list-style-type: none"> <li>● The TV speakers are muted if headphones are connected. Unplug the headphones to get sound through the speakers.</li> </ul>
Noise or other interface.	Electronic equipment near the unit is causing interface. Relocate the unit or move the equipment.

## **VIEW THE LATEST USER GUIDE ON YOUR TV**

WebOS software undergoes regular updates and improvements. We recommend referring to the User Guide on your TV as explained below to get the latest information.

Press Settings  button on your remote control and select  (All Settings) to open Settings Menu.

Use arrow/OK buttons to select Support -> User Guide to view the up-to-date User Guide.



## **FCC Warning**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Note: The Grantee is not responsible for any changes or modifications not expressly approved by the party responsible for compliance. Such modifications could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement.

To maintain compliance with FCC's RF exposure guidelines, the distance must be at least 20cm between the radiator and your body, and fully supported by the operating and installation

Any emission is maintained within the band of operation under all conditions of normal operation. The max. frequency stability is less than 20ppm.