

95.00 mm

105.00 mm

2Boom™



4" LED FLAME LIGHT SPEAKER

Carefully read User Guide to operate this unit properly
Keep for future reference.

Instruction Manual

You are welcome to purchase.
To ensure the safe use of this product and to achieve the best results,
please read this manual carefully.

This product can be connected to PC, TV, CD, VCD, DVD,
TUNER, TAPE, USB, TF, BT and other audio equipment, it is easy to carry,
multi-functional with perfect design, excellent sound quality performance,
we believe it will bring you New feeling.

Warm prompt


When charging the unit, please turn off the power switch,
so as not to damage the battery, do not constantly use the machine for a long time.
In order to keep the battery in good condition,

please charge and discharge the battery for every 30 days or so.

Technical Parameters

Output Power: 5W
Speaker Unit: 4 inches*1
Impedance: 2 ohm
Frequency Response: 100Hz-18KHz
Signal-to-Noise Ratio: \geq 85dB

PANEL FUNCTION DECLARATION

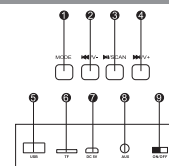

- 1.Mode:Short press to change light modes or Turn on/off light
Long press to switch to Bluetooth, MP3 and FM modes.
2. Previous song Press the button for a second to
turn down the volume.(FM: Previous channel)
- 3.Play/ Pause (FM: Automatic Search)
4. Next song Press the button for a second to
turn up the volume.(FM: Next channel)
- 5.USB socket
- 6.Micro SD card socket
- 7.Charging socket (DC 5V)
- 8.Audio input socket
- 9.OFF/ON Speaker power off / Speaker power on

Connect to BT

- Click the "MODE" button for Bluetooth mode
- Turn on your smartphone's BT and search for the device and select "2BOOM-BX214".
- Connect with Model. Click the "ok" on smartphone. Voice notice appear when connected successfully.
(play and select music with smartphone when connected through BT).

Micro SD Function

- Press "MODE" button on the product to switch to TF mode or just insert a Micro SD card. TF mode will start automatically
- Press "PLAY/PAUSE" button to continue play/pause music.
- Press "NEXT" button to go to next song.
- Press "PREVIOUS" to go back to previous song.

USB Function

- Press "MODE" button on the product to switch to USB mode or just insert a USB flash drive. USB mode will start automatically
- Press "PLAY/PAUSE" to continue play/pause music.
- Press "NEXT" button to go to next song.
- Press "PREVIOUS" to go back to the previous song.

FM Radio Function

- Press "MODE" on the product to switch to FM mode. Radio will start automatically
- Press "PLAY/PAUSE" button for seconds to enter automatic FM channel searching.Short press the button again to stay on the channel you want.
- Press "NEXT" button to go to next frequency.
- Press "PREVIOUS" to go back to previous frequency.

TWS Function

- Turn on speakers, double press the "PAUSE" button. After an indication voice, two speaker could be connected
with a same bluetooth device and then play music together. Long press PAUSE button to cancel
TWS function

FCC ID: 2AIDL-BX214

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the
following two conditions:
(1)This device may not cause harmful interference, and
(2)This device must accept any interference received, including interference that
may cause undesired operation.
Warning: Changes or modifications not expressly approved by the party responsible
for compliance could void the user's authority to operate the equipment.

Notes: This equipment has been tested and found to comply with the limits for a Class B digital device,
pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection
against harmful interference in a residential installation. This equipment generates, uses and can radiate
radio frequency energy and, if not installed and used in accordance with the instructions, may cause
harmful interference to radio communications. However, there is no guarantee that interference will not
occur in a particular installation. If this equipment does cause harmful interference to radio or television
reception, which can be determined by turning the equipment off and on, the user is encouraged to try to
correct the interference by one or more of the following measures:
--Reorient or relocate the receiving antenna.
--Increase the separation between the equipment and receiver.
--Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
--Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.
In order to avoid the possibility of exceeding the FCC radio frequency exposure limits, The device has
been evaluated to meet general RF exposure requirement.

Migear International Group LLC,
21 W. 38th Street, 14th Floor, NY, NY 10018 USA
TEL: 929-390-4504