


REMOTE CONTROL

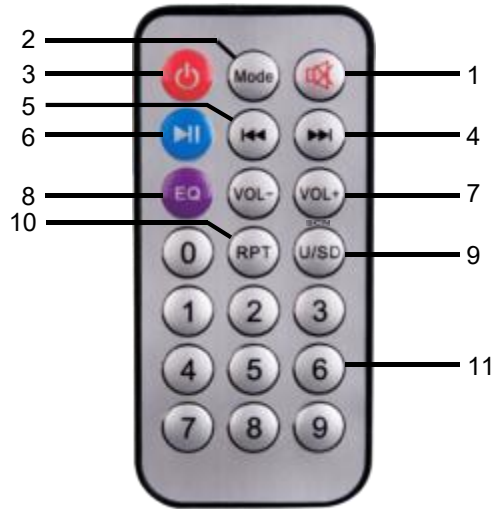

- 1. Mute ON/OFF Button
- 2. Mode Select Button
- 3. Power ON/OFF Button
- 4. Next Track/FM Station
- 5. Previous Track/FM Station
- 6. Play/Pause Button (FM tracks ) / FM Auto Search Button
- 7. Master Volume Button
- 8. Equalizer Button
- 9. USB/SD card Playback / FM Auto Search
- 10. Repeat button
- 11. Keypad (select audio tracks)

**\*\*Aim at the LED display on the control desk\*\***

User Manual



DUAL 10'' WOOFER LED SPEAKER  
FBX2106K Manual

LINE IN

- 1. Connect a 3.5mm Audio Cable to the AUX JACK of the unit. and to your external audio device eg. MP3 player.
- 2. Select the AUX feature by pressing the MODE button.
- 3. Begin playback via your external audio device.

FM RADIO

- 1. Select FM feature by pressing the MODE button.
  - 2. Press the PLAY/PAUSE button to begin automatically searching and saving available radio stations.
  - 3. Press PREVIOUS / NEXT button to select a specific radio station.
- NOTE: PLEASE MOVE YOUR SPEAKER TO ENSURE BEST RECEPTION.

USB / Micro SD CARD

- 1. Insert USB stick or Micro SD card for playback.
- 2. Playback will begin automatically.
- 3. Press the PLAY / PAUSE button to play or pause.
- 4. Press PREVIOUS / NEXT button to select a specific track for playback.

BLUETOOTH

- 1. Select the Bluetooth feature by pressing the MODE button.
- 2. Turn the Bluetooth feature on on your portable device.
- 3. Find and pair with your speaker "FISHER-FBX2106".
- 4. Begin playback via your device.

TWS

- 1. Select the **Bluetooth** feature by pressing the **MODE** button on both units.
- 2. Press and hold **PLAY / PAUSE (TWS)** button on both units to switch on TWS feature.
- 3. Turn on the Bluetooth feature on your mobile device. Find and pair with your speaker "FISHER-FBX2106".
- 4. Begin playback via your device.

CHARGING


- 1. Connect the adapter(included) to your speaker.
- 2. The battery will be fully charged after 5~6 hours.
- 3. Disconnect the charging cord from the speaker first, then the wall charger from the wall.

Note: The speaker can be used normally during charging.

WARNING ON SAFETY

The input voltage of this player is DC 15V, otherwise, the player will be damaged or can't be used. There is no part that can be repaired by a user inside the player. Ask a qualified technician for maintenance. Don't make this player wet by rain to prevent fire or electric shock. Don't open the cover of this player to reduce the danger of electric shock from dangerous voltage.

CONTROL PANEL

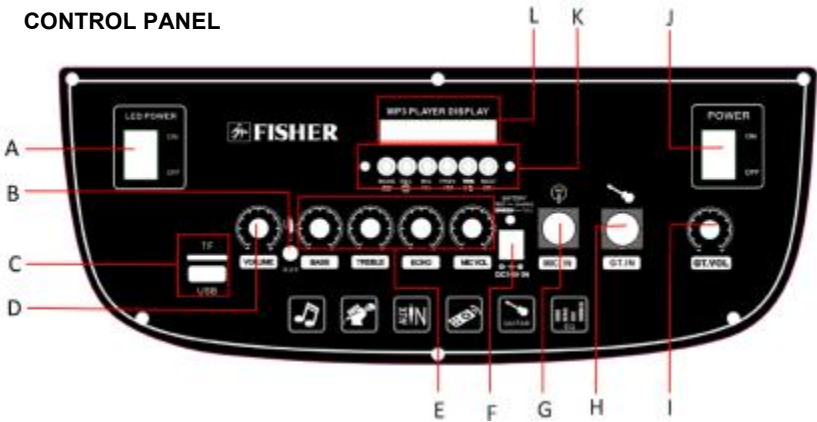

- A. LED POWER
- B. LINE IN JACK
- C. USB PORT/MICRO SD CARD SLOT
- D. VOLUME CONTROL
- E. BASS CONTROL / TREBLE CONTROL / ECHO CONTROL / MIC.VOL CONTROL
- F. CHARGING JACK DC 15V IN
- G. MICROPHONE INPUT
- H. GUITAR INPUT
- I. GUITAR VOLUME CONTROL
- J. POWER ON / OFF
- K. MODE / RECORD / MIC Priority / PREVIOUS / PLAY OR PAUSE & TWS(press and hold) / NEXT BUTTON
- L. DISPLAY SCREEN

FCC Statement:

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION:

This device complies with part 15 of the FCC Rules, Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Company name:Migear International Group LLC.  
Company address:21 West 38th Street 14th Floor New York, NY 10018  
Telephone number:0755-89585865

Caution: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

RF Exposure Statement

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance of 20cm the radiator your body. This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.