

Quick Start Guide



In a few minutes, you'll be able to capture
the world as never before

Join the GIROPTIC community:



facebook.com/giroptic



twitter.com/giroptic



youtube.com/giroptic



instagram.com/giroptic

In your Box



Camera



Quickstart



Lithium-ion battery



Tripod adapter



Micro-USB cable



Wrist strap



Micro-fiber bag

0° The basics



1. Camera Status Screen	4. Mode Button
2. Power/Shutter Button	5. Clips (3)
3. Microphones (3)	



1. Micro-USB Port

2. Universal Tripod Mount


3. Wrist-strap hook

4. Bottom door

① Getting started


1

Unlock the 3 clips, hold the top of the camera with one hand and pull gently the magnesium alloy back with the other hand to open the camera bottom door.

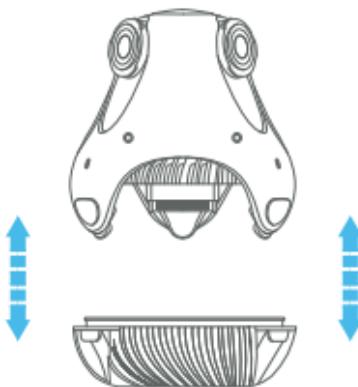


2

Insert the battery following the instructions written on the camera bottom door.

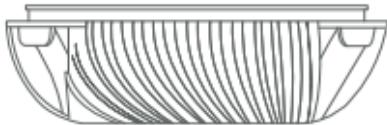


3


To insert the memory card:

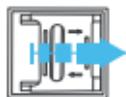

1. Slide gently the memory card lid and open it

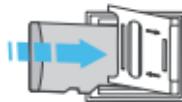


2. Insert the memory card into the card slot. Make sure the card label faces up

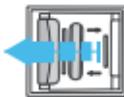

3. Close the lid and slide it to lock the card

4

Replace the bottom door to its original position. Press the bottom door on the camera and lock it by pushing firmly on the 3 clips.

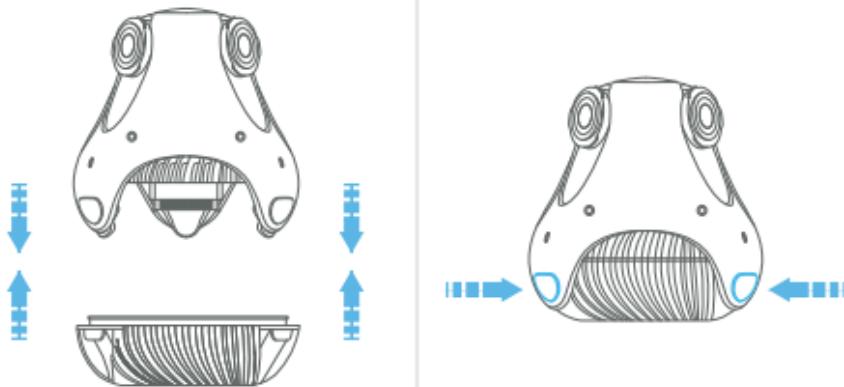

5

Charge the battery by connecting the camera to a computer or other USB charging adapter using the USB cable provided. The camera status screen turns on and displays the charging status.



Once the battery is fully charged the following icon shows on the camera status screen


NOTICE: Using a wall charger other than a 5V 1A wall charger can damage the 360cam battery. Only use chargers marked: output 5V 1A. If you do not know the voltage and current of your charger, use the included USB cable to charge the camera from your computer. When charging with a computer, be sure that the computer is connected to a power source. If the camera status light does not turn on, use a different USB port. The included lithium-ion battery comes partially charged. No damage occurs to the camera or battery if used prior to a full charge. For more battery information, see **Battery**.

WARNING: Use caution when using your 360cam as part of your active lifestyle. Always be aware of your surroundings to avoid injury to yourself and others. Abide by all local laws when using your 360cam and related accessories.

④ Here we go!

To
Power
On

Press and hold the Power/Shutter button until the camera battery level bar appears. When the camera status screen displays "Video", your camera is on.

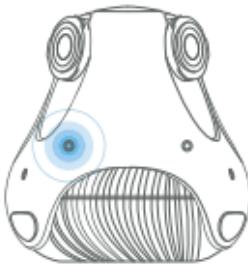


To
Power
Off

Press and hold the Power/Shutter button until the camera status screen displays the 3 "OFF" letters. Release the button. Your camera is off.



Pick your mode

The 360cam features several camera modes. To cycle through the modes, press the Mode button repeatedly.

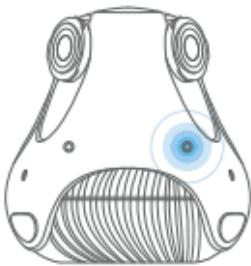

Switching between video and photo modes on the 360cam requires a few seconds, during this loading time the camera displays an animated mustache on the camera status screen.


⌚ Camera Modes

These modes appear:


Video	Record video
Photo	Capture a single photo
TimeL	Capture a photo every X seconds
Burst	Capture a serie of photos during X seconds
🔧	Adjust general camera settings
🎥	Loading video / photo mode

⌚ Be Aware of the Blind Spots

There are four (4) blind spots: one between each lens and one on the bottom of the camera. For best results, avoid placing your subject/focal point closer than 1.5 meters (5') in-between the optics on the camera.

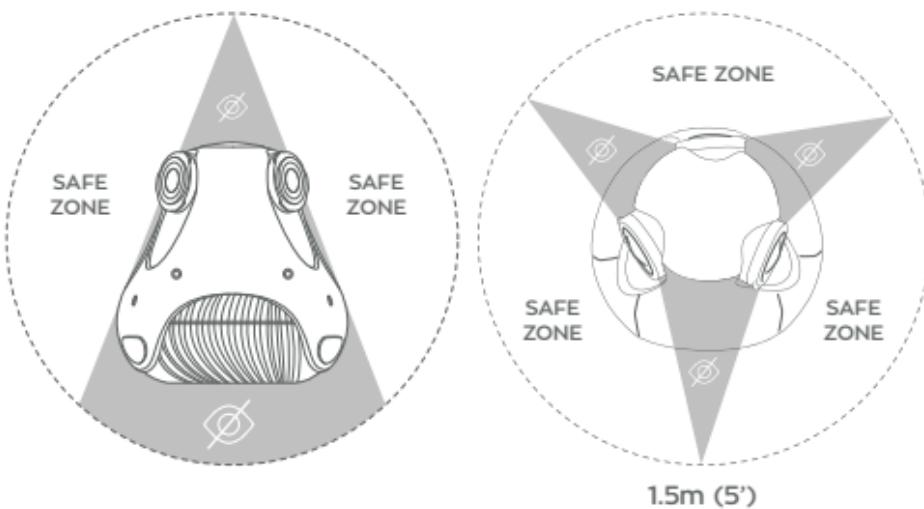

⌚ Indicators

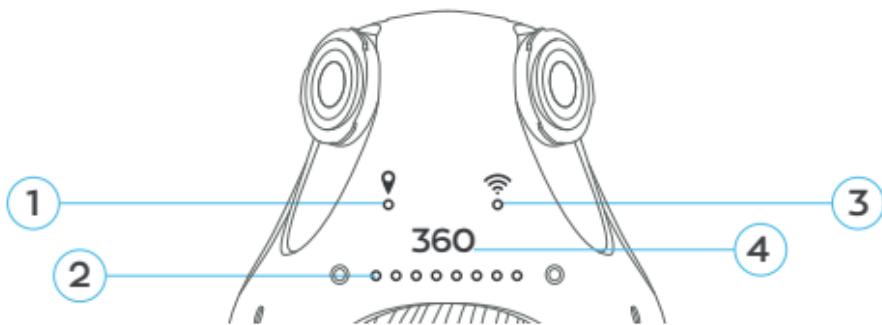

1. GPS On/Off
2. Battery Life
3. Wi-Fi On/Off
4. Camera Status Screen



Camera Default Settings

The 360cam powers up with the following default settings:

Video	25 fps
Photo	5 sec self-timer
TimeLapse	Every 5 sec
Burst	3 fps for 5 sec
GPS	Off
Wireless	Off

NOTICE: Those default settings can be changed by using the 360cam companion app (Available on iOS, Android & Windows phone).

Micro SD Cards

The 360cam is compatible with:

Type	microSD - microSDHC - micro SDXC
Capacity	8GB - 16GB - 32GB - 64GB - 128GB

- You must use a microSD card with a **Class 10** or a **UHS-1** rating.
- GIROPTIC recommends using brand name memory cards for maximum reliability in high-vibration activities.

For a list of the recommended SD cards,
visit 360.tv/support

NOTICE: Use care when handling memory cards. Avoid liquids, dust and debris. As a precaution, power off the camera before opening it to insert or remove a microSD card. Check manufacturer guidelines regarding use in acceptable temperature ranges.


⌚ Camera Firmware Update

To get the latest features and best performance from your 360cam, make sure you are using the most current camera firmware. You can update your camera firmware via the 360cam software. To download the 360cam software, visit 360.tv/start, for more information, visit 360.tv/support.



□ Download the 360cam app

Control, view and share your 360cam contents thanks to the 360cam mobile app. Connect your 360cam to your smartphone or tablet and start the 360° experience in real time. The 360cam app is available on your favorite App Store.

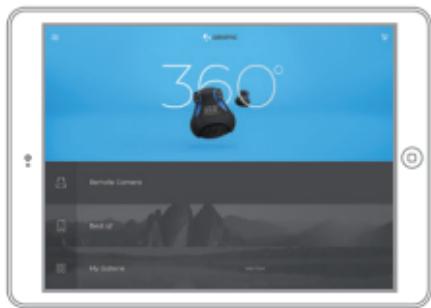

360.tv/apps



*NOTICE: When connecting to your camera for the first time over Wi-Fi, the default password is **giropic***

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: Modifications to this product will void the user's authority to operate this equipment.

To download this user manual in a different language, visit

Pour télécharger ce manuel de l'utilisateur dans une autre langue, rendez-vous sur

Wenn Sie dieses Benutzerhandbuch in einer anderen Sprache herunterladen möchten, besuchen Sie

Om deze gebruikershandleiding te downloaden in een andere taal, ga naar

Per scaricare questo manuale utente in un'altra lingua, visita

Para descargar este manual de usuario en otro idioma, visite

Para baixar este manual do usuário em outro idioma, acesse

このユーザーマニュアルの他言語版をダウンロードするには、

にアクセスしてください。

若要下载其他語言版本的使用說明書,請前往:

如需下载本用户手册的其他语言版本,请访问

Чтобы загрузить это руководство

пользователя на другом языке, посетите страницу

360.tv/start