

2  
PLAYER  
ACTION!

VERSATILE  
BUILT-IN SPEAKER WITH  
INTERACTIVE SOUND EFFECTS

WIRELESS  
OPERATE YOUR SUMO WARRIOR  
VIA WIRELESS REMOTE CONTROL  
FOR FULL-FUNCTION WRESTLING

COMPETITIVE  
PUSH AND SHOVE YOUR WAY TO  
VICTORY BY KNOCKING YOUR  
OPPONENT OVER



Twin nested wheels  
propel sumo wrestlers  
in all directions

move your player to  
shove and knock  
over your opponent

includes dual remote  
controls for wireless  
wrestling matches



THE BLACK SERIES

THE BLACK SERIES™



sumo king wrestling  
wireless head-2-head RC fighters



BATTERY  
OPERATED  
PLAY WRESTLERS  
AGES 6 AND UP

WARNING!  
CHOKING HAZARD - Small parts.  
Not suitable for children under 3 years.

2  
PLAYER  
ACTION!

THE BLACK SERIES™

sumo king  
wrestling  
wireless  
head-2-head  
RC fighters



sumo king wrestling  
wireless head-2-head RC fighters



THE BLACK SERIES™

sumo king  
wrestling  
wireless head-2-head  
RC fighters



**BATTERY WARNING:**  
• Do not mix old and new batteries.  
• Do not mix alkaline, nickel-cadmium, or rechargeable batteries.  
• Insert batteries using the correct polarity. Do not short circuit the supply terminal.  
• Remove batteries when not in use. Remove or disconnect all batteries according to safety rules and local laws. Do not dispose of batteries in fire (they may catch on fire).  
• Only use manufacturer specified batteries. Unapproved and/or damaged batteries are prohibited.  
• Always use, replace, and recharge (if applicable) batteries under adult supervision.  
KEEP THIS INSTRUCTION SHEET FOR REFERENCE AS IT CONTAINS IMPORTANT INFORMATION.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FC This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

©2019 Merctsource, LLC. The Black Series and all associated logos are trademarks of Merctsource, LLC. All rights reserved.

PATENT PENDING

 
 
For technical support, please visit [www.merctsource.com](http://www.merctsource.com) or call 1-800-374-2744. The artwork and design of this package are protected by US copyright law and may not be reproduced, distributed, displayed, published or used for any purpose without prior written permission. It is not permitted to alter, remove or reproduce any trademarks or copyright notice from this package.

OPERATING INSTRUCTIONS

Each wrestler requires 3 "AAA" 1.5V batteries (not included). Each remote control requires one 9V battery (not included). When charging batteries, adult supervision is required. Use alkaline batteries for best performance.

1. Carefully remove items from the package.
2. Locate the battery compartment on the inside of each wrestler, as well as each remote.
3. To remove wrestler battery chamber, twist base counter-clockwise until loose.
4. On wrestler, loosen the screws and remove battery door. Slide doors open on rc units.
5. Insert "AAA" batteries inside wrestlers, while observing the correct polarity in each compartment (see diagram). Insert one 9V battery into each remote control.
6. Replace the battery doors and tighten screws.
7. Switch wrestler and remote control power switches to the "ON" position. The power switch is located on the bottom of the wrestler.

NOTE: For best results, operate wrestlers on hard surface.

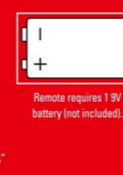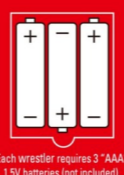

Each wrestler requires 3 "AAA" 1.5V batteries (not included).

Remote requires 1 9V battery (not included).

TURN LEFT/TURN RIGHT

FORWARD / BACKWARD

POWER ON / OFF

HOW TO PLAY

The object of the game is to knock the opposing wrestler out of the ring for circles by making contact with the player's body, thus thrusting the wrestler forward by sheer force.