

BATTERY INSTALLATION

Carefully remove items from the package.

Replace the battery compartment door.

SAFETY PRECAUTIONS

Do not operate during thunderstorms or rain.

while the vehicle is switched to "ON".

Avoid water, sand and snow when operating your vehicle.Do not submerge vehicle or controller in water. Never operate your vehicle on the street or highway.

Adult supervision is recommended when operating this vehicle.

Remove all batteries when not in use to avoid accidental operation.

Never operate your vehicle in a confined or crowded area, and do not use

people or animals as obstacles.

• Do not run your vehicle into furniture, objects or hard surfaces, as this will cause damage to both the objects and the vehicle.

Keep fingers, hair and loose clothing away from the tires, gears and motor

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Do not leave vehicle or controller near sources of heat or under direct sunlight for long periods of time.
Do not leave vehicle or controller outside overnight. Dampness is harmful to interior components.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

BATTERY WARNING:

Do not mix alkaline, standard (ct.)

Insert batteries using the correct redering the providence of the providence

Increase the separation between the equipment and receiver.
 Consult the dealer or an experienced radio TV technician for help.

The vehicle requires 5 "AA" 1.5V batteries (not included). The controller requires one 9V battery (included). When changing batteries, adult supervision is required. Use alkaline batteries for the best performance.

Locate the battery door on the bottom of the vehicle. Using a Phillips

Screwdriver, remove the screw.
 Pull the latch on the door to the left and lift up to access the battery compartment. Insert 5 "AA" batteries while observing the correct polarity (Fig.1).

• Slide the battery door on the back of the controller down to open.

Insert one 9V battery while observing the correct polarity (Fig.2).
Replace the battery compartment door.
Switch both the vehicle and controller power switches to the "ON" position.
Adjust the steering alignment lever located on the bottom of the vehicle

(between front wheels) if the vehicle does not run straight when moving forward.

OPERATING CONTROLS





