

# Bluetooth® Cassette Adapter



1201778  
User's Guide

We hope you enjoy your Bluetooth Cassette Adapter from RadioShack. This cassette adapter enables you to play music from your Bluetooth wireless technology enabled device through your home or vehicle cassette player. Please read this user's guide before using your cassette adapter.

## Package Contents

- Bluetooth Cassette Adapter
- 2.6 ft. (0.8m) Micro USB charging cable
- User's Guide


## Specifications

Input Voltage ..... DC 5V  
Battery Capacity ..... 300mAh  
Charging Current ..... 180mA  
Battery Charge Time ..... approx. 3 hours  
Operation Time ..... Up to 6 hours  
Working Distance ..... approx. 16 feet (5m)  
Bluetooth Protocol ..... V2.1+EDR  
Frequency Response ..... 100Hz – 10kHz  
Specifications are subject to change and improvement without notice. Actual product may vary from the images found in this document.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by General Wireless Operations Inc. dba RadioShack is under license.

## Charge Your Cassette Adapter

Using the supplied charging cable, connect your cassette adapter's Micro USB charging port to a USB charger (not included) to charge the cassette adapter.

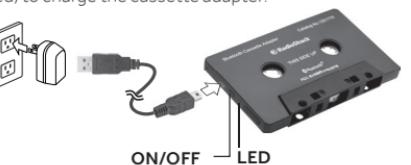

- The LED lights red when charging, and turns off when fully charged.
- Charge your cassette adapter when the LED flashes red.

## Pairing Your Device

1. Press and hold the **ON/OFF** button for 3 seconds to turn on the cassette adapter. While searching for Bluetooth devices, the LED flashes blue and red.
2. Activate your device's Bluetooth function (refer to your device's user's guide).
3. When your device locates **RadioShack BT Cassette Adapter**, select it. When paired, the LED flashes blue.

### Note:

- If prompted for a PIN, enter 0000.
- The cassette adapter automatically turns off if no devices are found in 7 minutes.

## Changing Bluetooth Devices

Your cassette adapter automatically remembers the most recently paired device. To change a device, you must first disconnect the first device.

To disconnect the paired device, disconnect the cassette adapter using your device's Bluetooth controls. The adapter starts searching for another Bluetooth-enabled device.

## Use Your Cassette Adapter

1. Insert the cassette adapter into your home or vehicle cassette player.



2. Turn on the audio source and the cassette player.
3. To turn off the cassette adapter, press and hold the **ON/OFF** button for 4 seconds. The LED flashes red once.

### Note:

- Cassette player mutes playback when answering calls and resumes playback when call ends.
- Insert the cassette adapter properly, with "THIS SIDE UP".
- If you are using an auto-reverse cassette player, set it to play side A.
- Keep all magnetic heads clean.

## FCC Information

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

If you cannot eliminate the interference, the FCC requires that you stop using your equipment. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

## Limited Warranty

Go to [www.radioshack.com/help](http://www.radioshack.com/help) for details.

RadioShack Customer Relations  
300 RadioShack Circle, Fort Worth, TX 76102

## RoHS

Complies with the European Union's "Restriction of Hazardous Substances Directive," which protects the environment by restricting specific hazardous materials and products.

[www.radioshack.com](http://www.radioshack.com)

© 2016 General Wireless Operations Inc.  
All rights reserved. RadioShack is a registered trademark used under license by General Wireless Operations Inc. dba RadioShack.



06A16  
1201778  
Printed  
in China