



1201784
User's Guide



Bluetooth® Portable Music Receiver

We hope you enjoy your Bluetooth Portable Music Receiver from RadioShack. This receiver allows you to wirelessly connect Bluetooth devices to non-Bluetooth speakers, so that you can play and listen to your favourite music wirelessly. Please read this user's guide before using your receiver.

Package Contents

- Bluetooth Portable Music Receiver
- USB charging cable
- User's Guide


Specifications

Battery Type.....Built-in 160 mAh lithium polymer
Bluetooth Protocol.....Version 4.2
Support Profile.....A2DP
Operating Distance.....33 ft. (10 m)
Battery Charge Time.....Approx. 2 Hours
Operating Time.....Up to 5 Hours
Charging Port.....Micro USB
Charging Cable Length.....3 ft. (0.91m)
Specifications are subject to change and improvement without notice. Actual product may vary from the images found in this document.



2

Charge

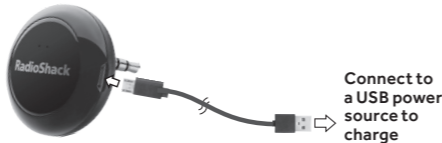

You can charge the receiver when it is idle or in use.

1. Use the USB charging cable to connect the receiver to a USB power source. While charging the receiver, the red LED lights, and turns off when charging is complete.

A full charge takes about 2 hours, and provides up to 5 hours play time.

2. After charging, unplug the charging cable. Do not attempt to overcharge.

Note:


- If the receiver's red LED flashes every 8 seconds, the receiver battery is weak. Follow steps 1-2 to charge the receiver.
- Use only the supplied cable, or one with the same specification to charge. Use of any other cables may damage the receiver.

Set up the Receiver

1. Connect the 1/8" (3.5 mm) stereo output jack to the audio input port on your stereo system. Refer to your stereo system's user manual for the location of the audio input port.

3

2. To turn on the receiver, press and hold the receiver button for 3 seconds until the blue LED flashes 3 times.
3. The LEDs on the receiver then flashes red and blue rapidly as the receiver searches for Bluetooth-enabled devices.

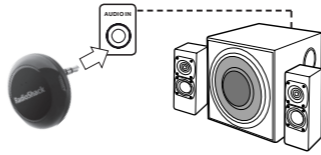

Pairing

1. Turn on the Bluetooth function on your device.
2. Locate the Bluetooth devices list, and select "RadioShack 1201784" from the list.
3. Once paired successfully, the LED lights blue every 8 seconds.
4. To turn off the receiver, press the receiver button until the red LED flashes 3 times.

Note:

- The receiver automatically pairs with the previously paired device when the Bluetooth function of the device and the receiver are both turned on.
- The receiver can pair and memorize 8 paired devices. If you wish to pair with more than 8 devices, the least used device is deleted from the memory and replaced.
- If your device is out of connection range and disconnects, move back within 10 minutes to reconnect automatically.

4

Using the Receiver

To...	Press the button...
Play/ Pause	× 1
Next Track	× 2

Changing Bluetooth Devices

To pair a new device, you must disconnect your device's Bluetooth connection with the receiver first. The LEDs on the receiver then flashes blue and red steadily. Follow the instructions in "Pairing" to connect to a new device.

FCC Information

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

If you cannot eliminate the interference, the FCC requires that you stop using your equipment. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not

5

cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Limited Warranty

Go to www.radioshack.com/help for details.
RadioShack Customer Relations
300 RadioShack Circle, Fort Worth, TX 76102

The Bluetooth® word mark and logos are owned by Bluetooth SIG, Inc. and any use of such marks by General Wireless Operations Inc. is under license.

RoHS

Complies with the European Union's "Restriction of Hazardous Substances Directive," which protects the environment by restricting specific hazardous materials and products.



© 2016 General Wireless Operations Inc.
All rights reserved. RadioShack is a registered trademark used by General Wireless Operations Inc. dba RadioShack.
radioshack.com

11A16
1201784
Printed
in China

6