

The following features are available in
this PDF document.



Quick Keyword Search

Enter the keyword in the search box
and hit the search button



Quick Jump between Chapters

Click the title of a specific chapter on
the Contents to jump to it

*Reading software such as Adobe Reader is
needed to support the functions above.



ZHIYUN CINEPEER WEEBILL 3E

User Guide

Contents

□ Product List

Product List	1
--------------	---

□ Get to Know ZHIYUN CINEPEER WEEBILL 3E

Get to Know ZHIYUN CINEPEER WEEBILL 3E	3
--	---

□ Battery and Charging

Battery and Charging	6
----------------------	---

□ Mounting and Balancing

Mounting the Tripod	7
---------------------	---

Mounting the Camera	7
---------------------	---

Balancing	13
-----------	----

□ How to Use ZHIYUN CINEPEER WEEBILL 3E

Button Description	15
--------------------	----

Display Screen Description	16
----------------------------	----

Icon Description	17
------------------	----

Menu Description	19
------------------	----

Motor Torque Adjustment	23
-------------------------	----

Bluetooth Shutter Control	25
---------------------------	----

Gimbal Mode Description	26
-------------------------	----

Manual Reposition	29
-------------------	----

□ How to Use the App

Downloading the App	30
---------------------	----


How to Connect	30
----------------	----

ZY Play Feature Description	32
-----------------------------	----


<input type="checkbox"/> Firmware Upgrade & Calibration	
Circumstances When Calibration Is Needed	33
Six-side Calibration	33
Motor Fine-Tuning	35
Firmware Upgrade	35
<input type="checkbox"/> Product Specifications	
<input type="checkbox"/> Disclaimer and Warning	
Reading Tips	42
WARNING	42
Safe Operation Guidelines	43
<input type="checkbox"/> Warranty Card	
Warranty Period	44
Warranty Exclusions	44
Warranty Claim Procedure	44
<input type="checkbox"/> Contact Card	

Product List


Before using this product, please check carefully that all the following items are included in the product package. In case that any item is found missing, please contact ZHIYUN or your local selling agent.

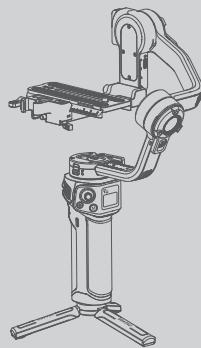

WEEBILL 3E (Standard) x1*

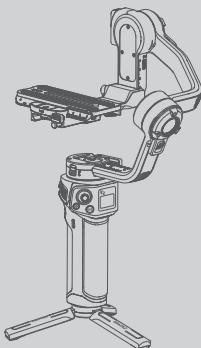


WEEBILL 3E (Lite) x1*

 


Quick Release Plate x1




Tripod x1**

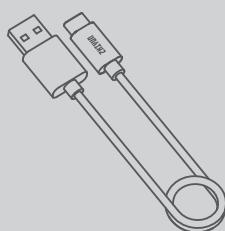

USB Type-C Cable x1

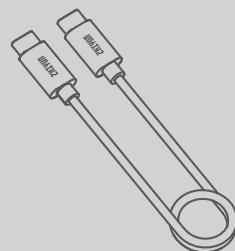

Type-C to Type-C USB LN-UCUC-A02
Camera Control Cable x1

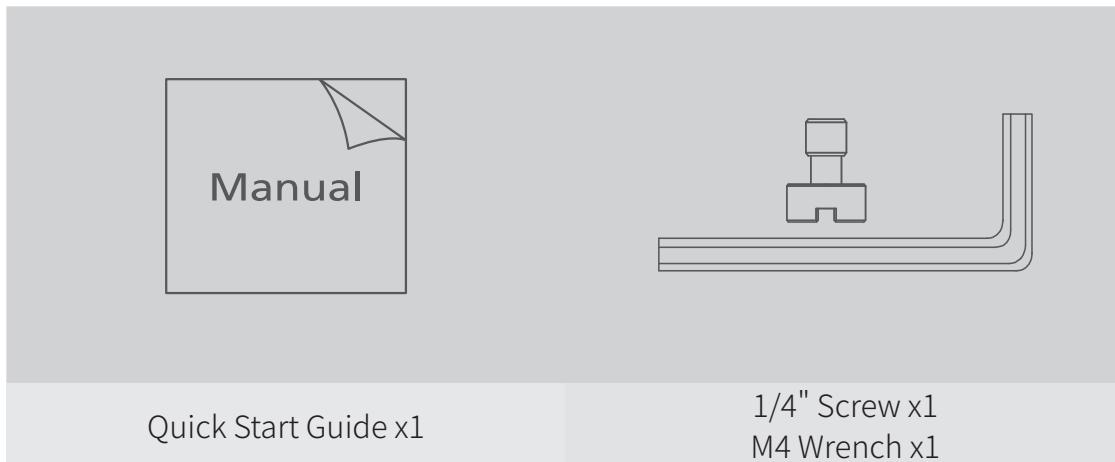


Purchasing ZHIYUN CINEPEER WEEBILL 3E Standard version or Lite version includes the corresponding version of the gimbal.


Items marked “**” are included in WEEBILL 3S standard version.

Get to Know ZHIYUN CINEPEER WEEBILL 3E

Standard Version

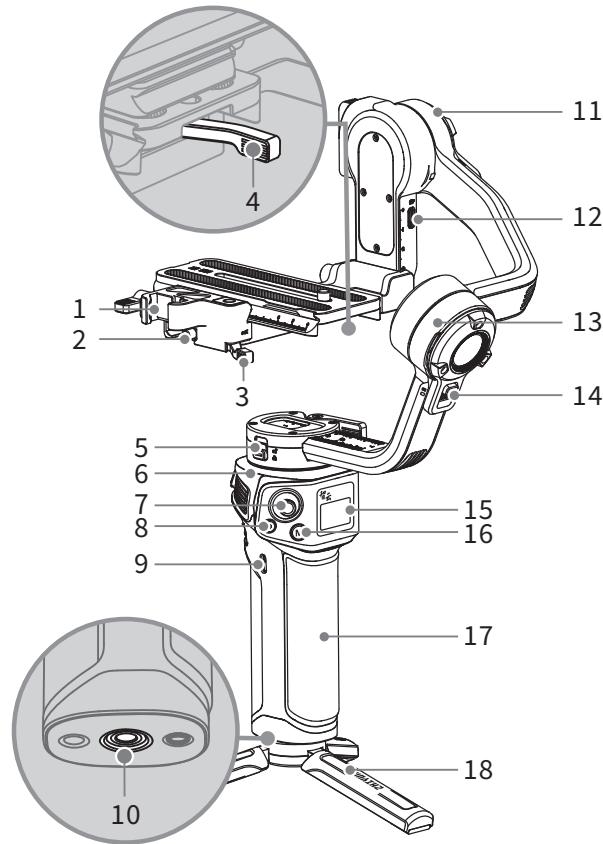

- | | |
|--|---------------------------|
| 1. Quick Release Plate Leveling Base | 10. 1/4" Threaded Hole |
| 2. Leveling Base Safety Lock | 11. Tilt Axis Motor |
| 3. Quick Release Plate Latch | 12. Camera Control Port |
| 4. Quick Release Plate Leveling Base Latch | 13. Roll Axis Motor |
| 5. Pan Axis Lock Switch | 14. Roll Axis Lock Switch |
| 6. Pan Axis Motor | 15. Display Screen |
| 7. Joystick | 16. Mode Switch |
| 8. Photo/Video Button | 17. Gimbal Handle |
| 9. Firmware Upgrade/Charging Port | 18. Tripod |

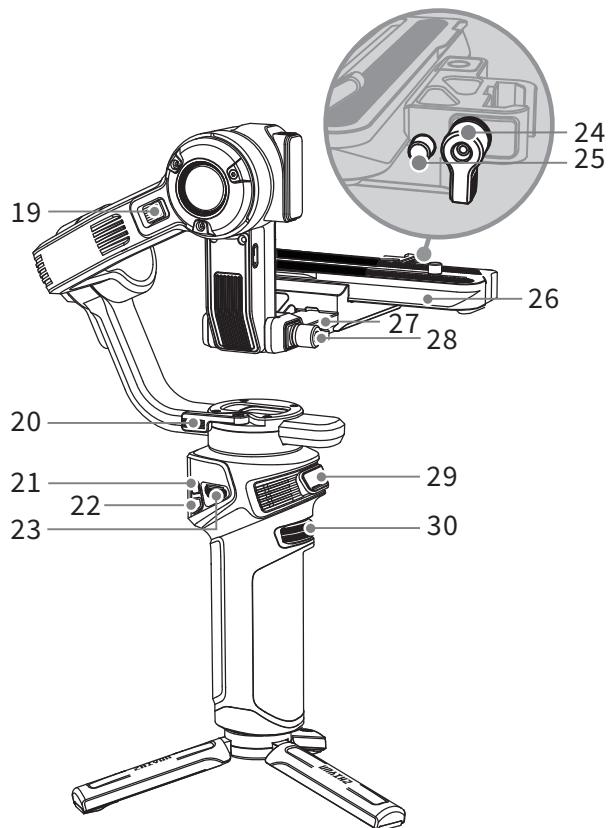

19.Tilt Axis Lock Switch

20.Pan Axis Latch

21.Power Button

22.Menu/Return Button

23.Control Dial

24.Leveling Base Lock Screw

25.Quick Release Plate Safety Lock

26.Quick Release Plate


27.Level Mount

28.Level Mount Lock Screw

29.Trigger Button

30.Adjustment Wheel

Lite Version

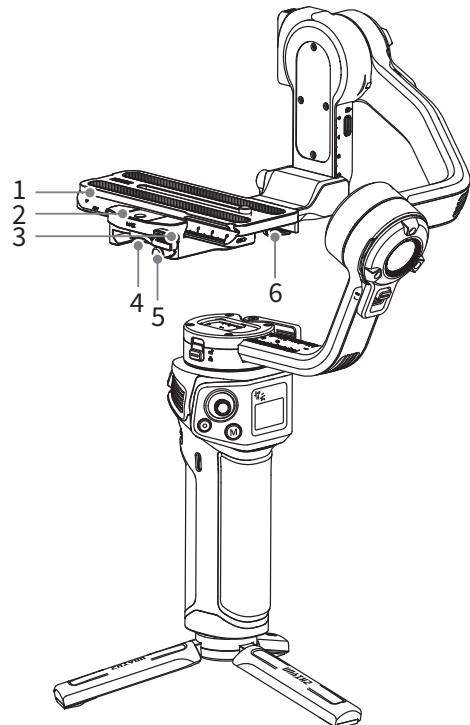


- | | |
|-------------------------------------|-------------------------------------|
| 1.Quick Release Plate Leveling Base | 5.Quick Release Plate Safety Lock |
| 2.Quick Release Plate | 6.Quick Release Plate Leveling Base |
| 3.Quick Release Plate Latch | Latch |
| 4.Level Mount | |

 Unlisted components of the Lite version gimbal are the same as those of the Standard version.

Battery and Charging

ZHIYUN CINEPEER WEEBILL 3E adopts built-in battery. When using ZHIYUN CINEPEER WEEBILL 3E for the first time, please activate the gimbal by fully charging the battery to ensure the proper function of the gimbal.


Charging method: Use provided USB Type-C cable to connect the USB charger (not included in the package) to charge ZHIYUN CINEPEER WEEBILL 3E. It is recommended to use USB chargers that meet the PD protocol. (supports 14W PD charging at most).

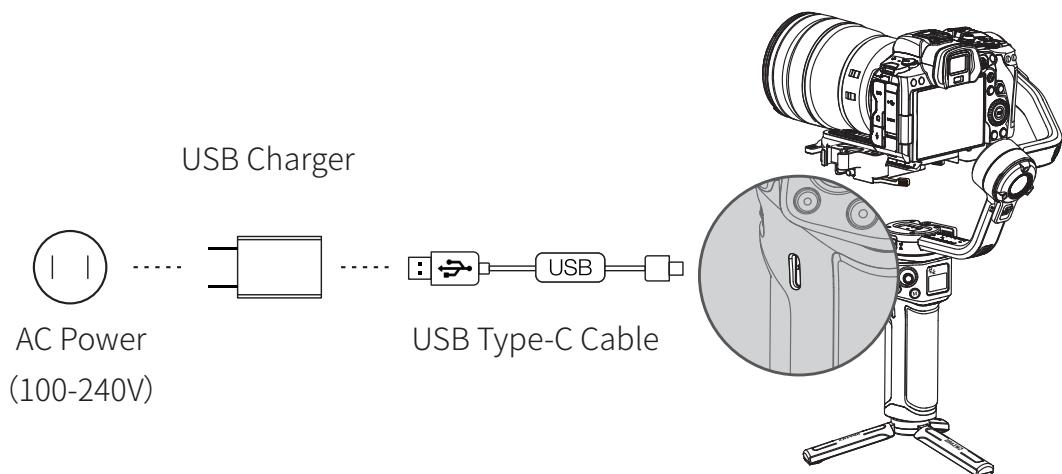

- 💡 ① USB charger is not provided.
- ② Please power off ZHIYUN CINEPEER WEEBILL 3E to charge.


Mounting the Tripod

Mount the tripod to the bottom of the ZHIYUN CINEPEER WEEBILL 3E handle, then unfold the tripod and place the ZHIYUN CINEPEER WEEBILL 3E on a flat surface.

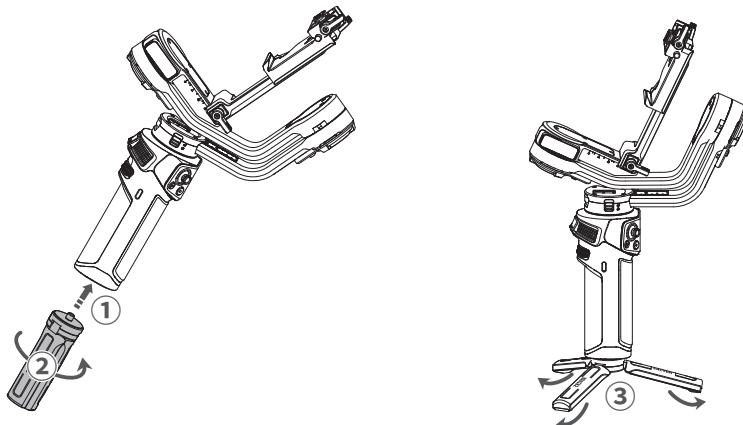

Mounting the Camera

1. Each axis of the gimbal is equipped with a lock switch. You can use these lock switches to lock the axes for convenient installation and storage. The storage state is the default state. Please toggle the lock switch to unlock the three axes, expand the gimbal as shown in the image, and lock the axes again for convenient camera installation.

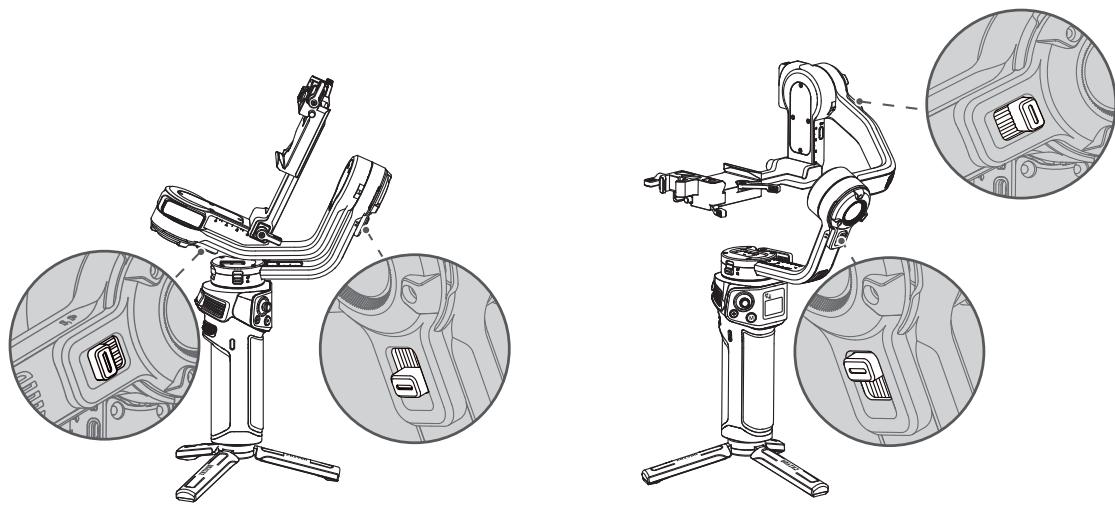


Locked state for storage

Locked state for installation

- 💡 ① Please mount the camera before powering on ZHIYUN CINEPEER WEEBILL 3E and balance the gimbal. Do not power on ZHIYUN CINEPEER WEEBILL 3E when there's no camera mounted on it.
- ② Before mounting the camera, make sure it is prepared ahead of time. Remove the lens cap and make sure the camera's battery and memory card are already in place.


2. 将相机安装到快装板上①，并用螺丝锁紧②。

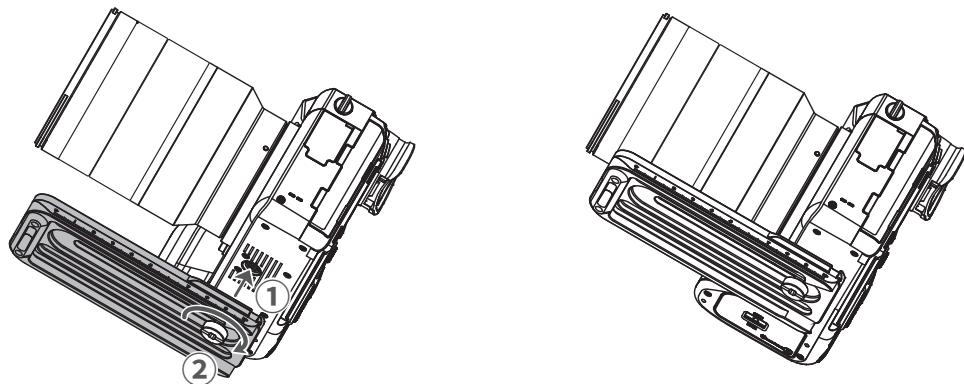

Installation Steps for Standard Version


(1) Installation for Landscape Orientation

Unlock the quick release plate latch ①, install the quick release plate and camera onto the quick release plate leveling base ② and then tighten the latch ③.

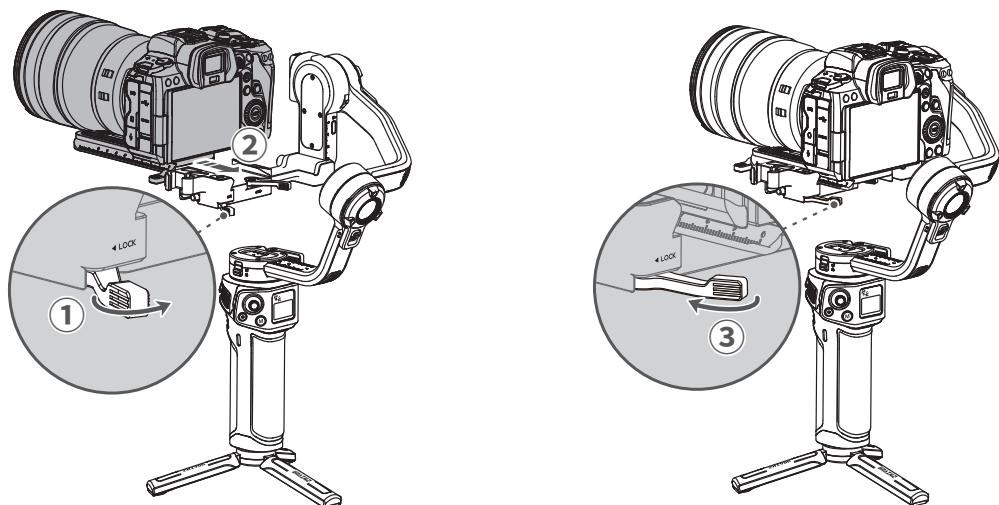


(2) Installation for Portrait Orientation


Unlock the quick release plate leveling base latch ① . Press and hold the leveling base safety lock ② and push the leveling base to the left until the it is removed from the level mount ③ . Install the camera and quick release plate as a whole onto the leveling base ④ and tighten the latch ⑤ . Install the camera, quick release plate, and leveling base as a whole onto the level mount ⑥ . Tighten the leveling base lock screw ⑦ .

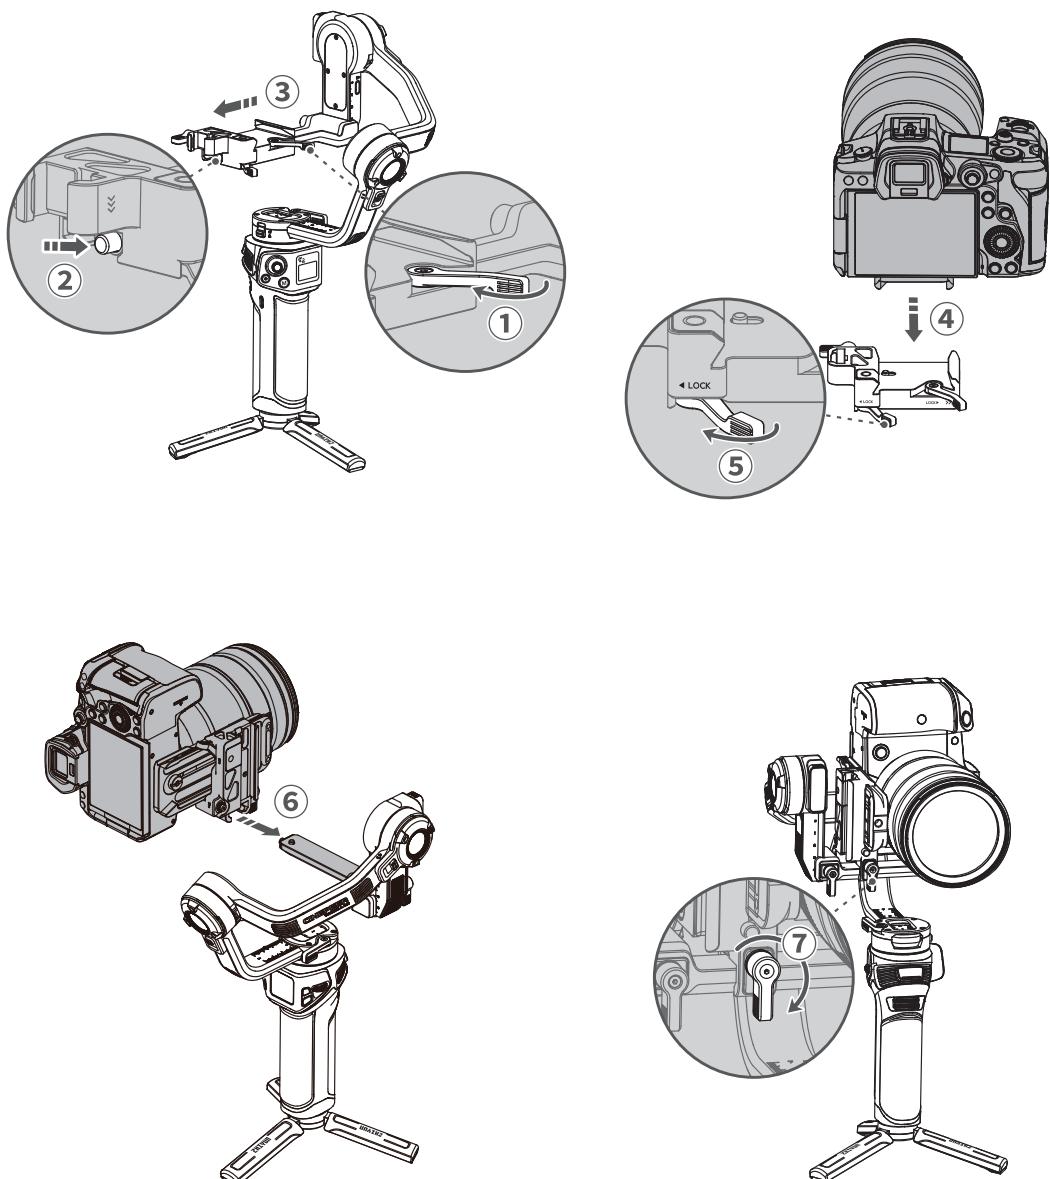

 When disassembling at horizontal orientation, please unlock the quick release plate latch ① and hold down the safety lock of the quick release plate ② to remove the camera and quick release plate as a whole ③ .

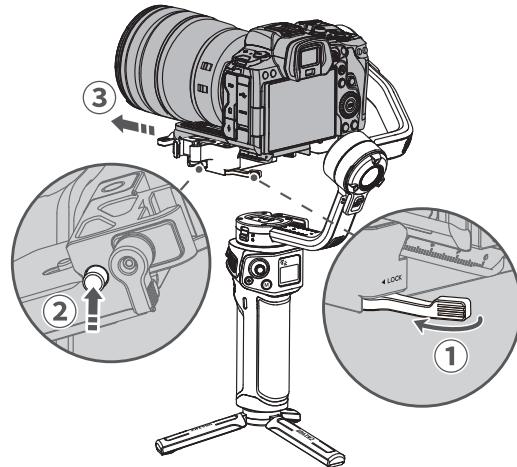


 When disassembling at portrait orientation, please loosen the screw that locks the leveling base ① , and hold down the safety lock of the leveling base ② to remove the camera, quick release plate and leveling base as a whole from level mount ③ .

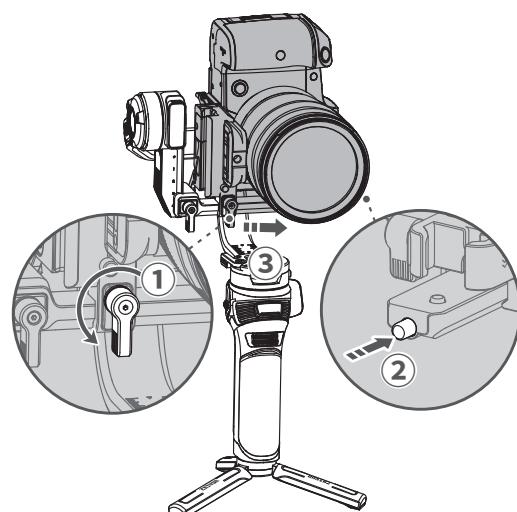

Installation Steps for Lite Version

Install the quick release plate and camera onto the quick release plate leveling base ① and then tighten the latch ② .

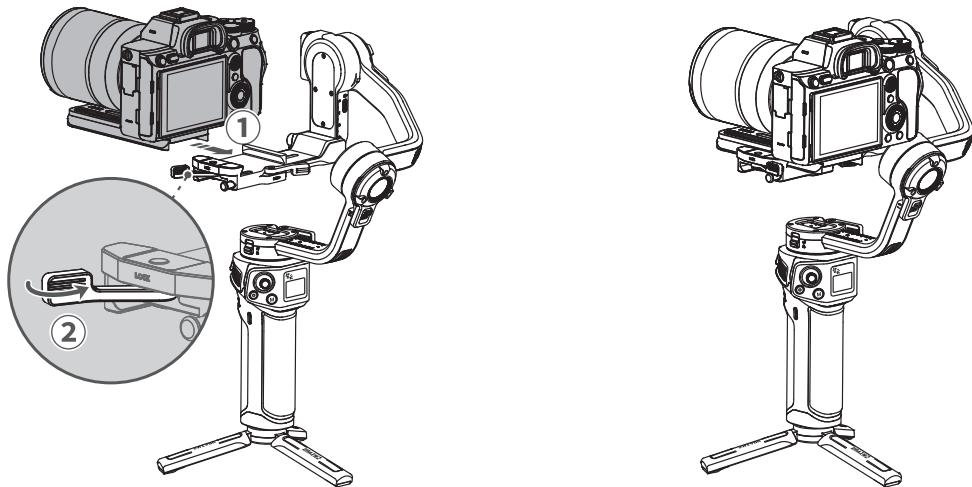

💡 When disassembling, please unlock the quick release plate latch ① and hold down the safety lock of the quick release plate ② to remove the camera and quick release plate as a whole ③ .

