



Swissdigital Design Find My network (FMN) Finder works with the Apple Find My network helping to locate belongings in an easy and secure way. The Find My network is a crowdsourced network of almost one billion Apple devices that use Bluetooth wireless technology to detect missing devices or items nearby, and report their approximate location back to the owner in the Find My app. The entire process is end-to-end encrypted and anonymous, so no one else, not even Apple or Swissdigital Design can view a device's location or information. Visit www.apple.com for more information.

1. HOW TO PAIR
Requires: iOS or iPad OS with the latest software

1. Place the Finder next to your iPhone, iPad, iPod touch or macOS. (Fig: 1)
2. Hold the Finder button down until you hear a beep, then release. (Fig: 2)
3. Open the **Find My app** on your iPhone, iPad, iPod touch or macOS device.
4. In the Find My app, tap **Items - Add item - Add Other item**.
5. Tap **Connect**.
6. Name your Finder then click **Continue**.
7. Choose an emoji.
8. Click on **Continue** and tap **'Agree'** then **'Finish'** to complete the pairing process.

2. BATTERY
The FMN Finder contains a coin cell battery. The battery may need to be replaced during the life of the product. Replace only with the same type (CR2032) and rating of battery and replace by observing the correct negative & positive connection.

Battery replacement:

1. Using the tool, insert into the gap and twist to open the casing (Fig: 3).
2. Replace with a new CR2032 battery, place the battery with the positive side (+) facing up (Fig: 4).
3. Close the FMN Finder by aligning the two holes on both lids (Fig: 5).

Caution: There is a risk of fire or electric shock, if the battery is replaced by an incorrect type.

3. ADDITIONAL TIPS

1. To change between **Active mode** into **Disable mode**: Press and hold the button. A beep will sound immediately. After five seconds, a second beep will sound; after another five seconds, a third beep will sound. Release the button after the third beep.

4. HOW TO PAIR

Requires: iOS or iPad OS with the latest software

5.1

Do not ingest battery. Chemical Burn Hazard. If the coin battery is swallowed, can cause severe internal burns in just 2 hours and can lead to death. Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention. Caution! Lithium battery inside. Risk of explosion in case of incorrect use. Please do not expose the product to a direct heat source. Please do not expose the product to any mechanical stress or impact. Do not attempt to disassemble the battery. If carelessly operated, you might face the risk of electric shock. This product is not a toy or edible. When using the tool, the sharp part of the specified tool should only face the gap, be careful not to hurt your fingers.

5.2

Disclaimer: This is neither an anti-theft nor an anti-lost device. This device provides the last detected location.

5.3

Learn More instructions: Press and hold the button. A beep will sound immediately. After five seconds, a second beep will sound. Release the button after the second beep.

5.4

To remove the **FMN Finder** from your Apple devices, open the **Find My app** on your device, click on the **'Items'** to find the device then scroll down and click on **'Remove this device'**.

5.5

If the **FMN Finder** fails to connect to the Find My app, follow 3.2 to complete a factory reset then restart the pairing process.

5.6

Outside materials such as certain types of mobile phone case can cause interference with the **FMN Finder** affecting its visibility.

5.7

6. WARRANTY

The **FMN Finder** is covered by a one-year limited warranty. Any physical damage caused to the **FMN Finder** by users will void the warranty.

5.8

7. DECLARATION OF CONFORMITY

SPECIFICATIONS

Product Name: SDD Finder 2

Model Name: SWISSDIGITAL DESIGN 2

Range: 20-50m(65-164 feet) depending on environment

Temperature range: -15 °C to +50 °C (5 °F to 122 °F)

Modulation method: GFSK, Antenna power: ≥ +4dBm,

Operating frequency band: 2.4GHz

Alarm: max. 110 dB, ABS/PC alloy material

Three-dimensional size: 36x32x9.5mm

4. SUPPORT

For further information visit www.swissdigital.com/support or contact support@swissdigital.com

5. SUPPORT

6. WARRANTY

7. DECLARATION OF CONFORMITY

SPECIFICATIONS

4. SUPPORT

5. SUPPORT

6. WARRANTY

7. DECLARATION OF CONFORMITY

SPECIFICATIONS

4. SUPPORT

5. SUPPORT

6. WARRANTY

7. DECLARATION OF CONFORMITY

SPECIFICATIONS

4. SUPPORT

5. SUPPORT

6. WARRANTY

7. DECLARATION OF CONFORMITY

SPECIFICATIONS

4. SUPPORT

5. SUPPORT

6. WARRANTY

7. DECLARATION OF CONFORMITY

SPECIFICATIONS

4. SUPPORT

5. SUPPORT

6. WARRANTY

7. DECLARATION OF CONFORMITY

SPECIFICATIONS

4. SUPPORT

5. SUPPORT

6. WARRANTY

7. DECLARATION OF CONFORMITY

SPECIFICATIONS

4. SUPPORT

5. SUPPORT

6. WARRANTY

7. DECLARATION OF CONFORMITY

SPECIFICATIONS

4. SUPPORT

5. SUPPORT

6. WARRANTY

7. DECLARATION OF CONFORMITY

SPECIFICATIONS

4. SUPPORT

5. SUPPORT

6. WARRANTY

7. DECLARATION OF CONFORMITY

SPECIFICATIONS

4. SUPPORT

5. SUPPORT

6. WARRANTY

7. DECLARATION OF CONFORMITY

SPECIFICATIONS

4. SUPPORT

5. SUPPORT

6. WARRANTY

7. DECLARATION OF CONFORMITY

SPECIFICATIONS

4. SUPPORT

5. SUPPORT

6. WARRANTY

7. DECLARATION OF CONFORMITY

SPECIFICATIONS

4. SUPPORT

5. SUPPORT

6. WARRANTY

7. DECLARATION OF CONFORMITY

SPECIFICATIONS

4. SUPPORT

5. SUPPORT

6. WARRANTY

7. DECLARATION OF CONFORMITY

SPECIFICATIONS

4. SUPPORT

5. SUPPORT

6. WARRANTY

7. DECLARATION OF CONFORMITY

SPECIFICATIONS

4. SUPPORT

5. SUPPORT

6. WARRANTY

7. DECLARATION OF CONFORMITY

SPECIFICATIONS

4. SUPPORT

5. SUPPORT

6. WARRANTY

7. DECLARATION OF CONFORMITY

SPECIFICATIONS

4. SUPPORT

5. SUPPORT

6. WARRANTY

7. DECLARATION OF CONFORMITY

SPECIFICATIONS

4. SUPPORT

5. SUPPORT

6. WARRANTY

7. DECLARATION OF CONFORMITY

SPECIFICATIONS

4. SUPPORT

5. SUPPORT

6. WARRANTY

7. DECLARATION OF CONFORMITY

SPECIFICATIONS

4. SUPPORT

5. SUPPORT

6. WARRANTY

7. DECLARATION OF CONFORMITY

SPECIFICATIONS

4. SUPPORT

5. SUPPORT

6. WARRANTY

7. DECLARATION OF CONFORMITY

SPECIFICATIONS

4. SUPPORT

5. SUPPORT

6. WARRANTY

7. DECLARATION OF CONFORMITY

SPECIFICATIONS

4. SUPPORT

5. SUPPORT

6. WARRANTY

7. DECLARATION OF CONFORMITY