

PANEL FUNCTION

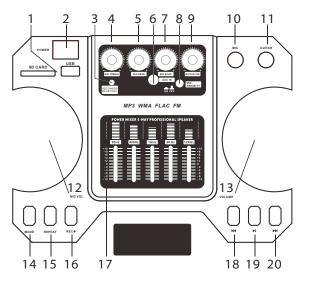

- 1. USB/SD Card jack
- 2. Power on/off
- 3. Charging indicator
- 4. MIC Treble Adjustor
- 5. MIC Bass Adjustor
- 6. AUX IN
- 7. MIC Echo Adjustor
- 8. MIC Priority
- 9. GUITAR Volume Adjustor
- 10.MIC jack
- 11.GUITAR jack
- 12. MIC Volume Adjustor
- 13. Main Volume Adjustor
- 14. USB/SD player control input mode key
- 15. USB/SD player control repeat key
- 16.RECORD
- 17.EQ control
- 18. USB/SD player control prev key
- 19. USB/SD play/pause control key
- 20. USB/SD player control next key

REMOTE CONTROL FUNCTION

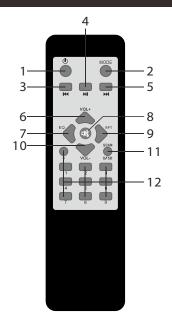

- 1.Power
- 2. Control input MODE key
- 3. Control prev key
- 4. Play/pause control key
- 5. Control next key
- 6. Volume+ Adjustor
- 7.EQ control key
- 8. MUTE
- 9. Control repeat key
- 10. Volume- Adjustor
- 11.SCAN
- 12.0-9 control key

OPERATION MANUAL





DP-T534

Carefully read operating manual to oprate this unit properly, and keep this manual handy for further reference.

FUNCTION DESCRIPTION

Features

- 1.Bluetooth® function
- 2. Plays MP3 Files stored in your SD Card or USB Drive or external audio device.
- 3.FM Radio
- 4. One Karaoke jacks.
- 5. One Wireless MIC included
- 6. With Infrared remote control for convenience
- 7. Trolley for easy portability
- 8. Built in rechargeable battery.

Playing MP3 Files through the Speaker using the SD Card or the USB Stick

- 1. Use "Mode" button on the unit or remote control to switch between USB/TF/FM/AUX/Bluetooth or from remote control can press "USB/SD" button to switch between USB or SD.
- 2. Plug in your USB disk and /or SD card in the slots provided. Please make sure you use the correct file format in your media devices-MP3Files only. Please ensure that your media is properly connected and that your files are MP3 format, or that the MODE button is on the correct source.
- 3. Turn up the volume to the desired level, either from the unit's volume control knob on the control panel or from the remote by pressing Vol- for Down or Vol+ for up. The sound output quality off the speakers will depend on the quality of the MP3 files. Volume from remote will be maximum to the level set manually through unit volume knob.
- 4. Press | ◀ to listen to the previous track and ▶ I to skip to the next track from unit control panel or remote control.
- 5. To pause or release pause, press the | I | button from the control panel or remote control.
- 6. Disconnect AUX (LINE IN) while using other audio devices through speaker.
- 7. Please remember to turn off the power of the speaker before removing the USB Disk or SD card.

Using Bluetooth

- 1. To select Bluetooth use" MODE" button on unit main panel or from remote control, "BLUE" will show on display.
- 2. Scan from your phone, tablet, notebook for "BT-SPEAKER" and pair the device to listen Audio files through speaker.
- 3. Unpair from speaker when finished listening.

Listening to the FM Radio from the Speaker

- 1. To select FM use "MODE" button on unit main panel or from remote control or from remote control press "FM".
- 2. From the unit control panel. Long press ►|| to scan for station or press | ◄ / ►►| to manually access preset stations up or down.
- 3. From remote control press "SCAN" to scan for FM frequency or press I◀◀ / ▶▶I to manually select preset station up or down.
- 4. "FM Antenna" to be used for better reception for FM station.

FUNCTION DESCRIPTION

Using Microphone

- 1. When using Microphone-plug your microphone into the microphone jack on unit main control panel.
- 2. Use the MIC VOL knob to control the voice level of the microphone
- 3. Use the "ECHO" knob to control microphone echo.

Using WIRELESS Microphone

- 1. When Using included wireless Microphone, switch on microphone, make sure unit power is on.
- 2. Microphone is designed to be used together with this unit only.
- 3. Wireless microphone uses "AA"*2 batteries (not included), make sure batteries are charged.
- 4. Wireless MIC Antenna" to be used for better reception of wireless microphone while using karaoke.

Using Guitar Jack.


- 1. When using Guitar-plug your guitar into the guitar jack on unit main control panel.
- 2. Use the Guitar VOL knob to control the volume level of the Guitar.

"BASS" & "TREBLE" on unit control panel can be used to adjust sound when using MICRO SD, USB, FM. "EQ" button on unit control panel or remote control can be used to adjust sound effect to preset levels.

Using Aux(LINE IN 3.5mm)

- 1.To select Aux use "MODE" button on unit main panel or from remote control "LINE" will show on display
- 2. Disconnect USB, SD Microphone while using Aux.

PANEL FUNCTION

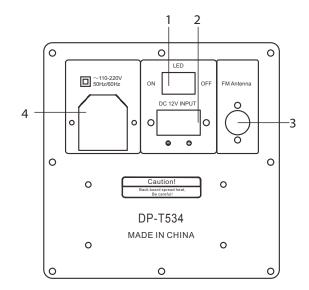

- 1.LED Light ON/OFF
- 2.DC 12V INPUT
- 3.FM Antenna
- 4.AC~110-240 50Hz/60Hz

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -Reorient or relocate the receiving antenna.
- -Increase the separation between the equipment and receiver.
- -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -Consult the dealer or an experienced radio/TV technician for help.