

Security+ 390MHz 3 Channel Remote Control

Descriptions

The Security+ remote control works only with door openers and light controls having an orange “Smart” button and a yellow indicator light.

Programming instructions are described and illustrated below. The additional push buttons can also activate other garage door openers and/or light controls.

(Instructions for programming light products are included with those accessories.)

Security+ GARAGE DOOR OPENERS

To Program the Opener to Accept the Remote Control Code

Select a remote control push button to operate the opener. The large button is recommended for use with a garage door opener.

1. Press and hold the selected remote control push button. See Figure 1.

SECURITY+ Remote Control



Figure 1

2. Press and release the “Smart”(learn)button on the opener panel. See Figure 2. The indicator light on the panel will begin to blink and the opener lights will flash once.

SECURITY+ Garage Door Opener

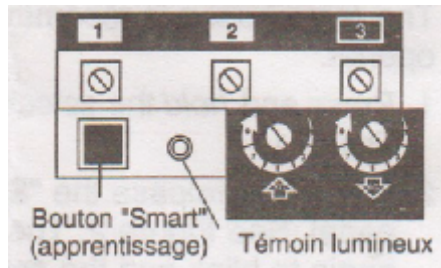


Figure 2

3. Release the remote push button.

Now the opener will operate when that remote control button is pressed. Test it by pressing the remote button to see that the door goes up and down.

Adding a remote can also be done from the door control, as follows:

1. With the door closed, press and hold a remote push button.
2. Press and hold the light button on the door control.
3. Press and hold the door control push bar.
4. After the opener lights flash, release all button.

Open/Close/Stop Operation

Your Security+ remote control can be programmed to operate one door using all 3 buttons: the large button will only open the door, the middle button will only close the door, and the third button will stop the door's movement. You may set up this feature as follows:

1. With the door closed, press and hold the large remote push button.
2. Press and hold the Lock button on the door control.
3. Press and hold the door control push bar.



When the opener lights flash, release all button. Test by pressing the large (open) button on the remote, The door should open. Press it again while the door is open and nothing should happen. Press the middle (close) button and the door should close. Press the third (stop) button while the door is moving and it should stop immediately.

NOTICE

To comply with FCC rules, adjustment or modifications of this receiver and/or transmitter are prohibited, except for changing the code setting or replacing the battery. THERE ARE NO OTHER USER SERVICEABLE PARTS.

FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.