

SPEAKERS



USER'S MANUAL

THANKS For purchase of speakers, kindly read the manual carefully before starting the use of the speaker to avoid any damage . If you have any problem, kindly contact only the professional person to handle it.

Attentions:

1. Accessories

When you open the packing box, you will find the speaker /remote control/user's manaul etc .

2. Voltage

Please be sure your voltage is AC 110V/60HZ.
If you use the wrong voltage, the transformer will be broken at once.Then you can not use the speaker .You need to change the new one.

3. Warning

* Please don't open the back and touch the inner parts by yourself. It is better to call the experienced repairman to help you if the speaker has problems.

* Don't put the speaker in a high moisture or a dusty place. And please don't put the water container above the speaker.

Battery Speaker

1.In order to keep battery life longer.please charge the battery everytime after the power is finish.Or it will damage the battery if long time without charge or not use.

2.You have to charge the battery for about 8-12 hours in the first time.Next time recharge the betttery for about 5 hours.Battery normal working time is 4-5 hours according to the volume of speaker. Please refer the charging indicator lights on the control panl.

4.Keep it away from children please.

How to use

The following introduction just for your reference only!

1. POWER

Press "Power"switch to choose ON or OFF to control the speakers. After use the speaker, please set the master volume to the min.level to keep the speaker for long term use.

2. INPUT SLOTS

There are USB/SD/earphone jack etc. Please choose the suitable ones to play the songs.

3. PLAY MODE

There is the " MODE" button on the control panel ,you can press the button to pay the songs by the USB or SD .Also you can listen FM if the speaker with the FM function.

4. Mic. Vol/bass/echo

You can adjust the related knobs to get the mic.effecton you wanted.

5. Music tone

You can adjust the " bass" "treble" knobs to get the effection you like.

6. Master Vol.

You can adjust " Master vol." from turn right volume up , turn left volume down.

7. AUX IN

You can connect the DVD or CD player to play the songs. If there is AUX IN button,please choose it.

8. Built-it DVD/Screen

You can see the video through the DVD .

USER'S MANUAL

FAQ

1. No power

- * The AC power cable is disconnected
- * The wall socket is not workable.

2. No sound

- * The speakers and parts disconnected
- * Volume knob at lowest level

3. Bad sound

- * The place is not good for the speakers
- * Incorrect speaker connections
- * Bass and treble knobs are set too low

4. Mic. no sound

- * Mic. volume is too low
- * Wired mic. not turn on
- * Mic. wire is short or open

If you still can not solve the problems, please call the seller for help.

NOTES:

Our company reserve right to bring changes in product without any notice.

If any issue with product kindly contact the professional person to handle as the speaker is with high power.

So please don't open the units.

Thanks for your cooperation! Welcome to buy our other models.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.