

Start now
to set up your panel
computer ►



Set up the Android system

When you first switch to the Android system, please choose language and wireless network according to the hints on the screen.



HOME

Open the main screen/Return to the main screen speedily.



The recent applications

Open the recently used list of applications.



Return

Open the previous screen/Return to the previous operation.



Voice Search


This can make the function of voice and search used by cooperating.

Note:

1. Please touch the icon  in the face of the machine when you want to return to the home screen speedily.
2. You can uninstall software, open a new window or adjust the size etc by long-pressing the icon on the screen.
3. There might be some difference of the screen appearance.

Basic functional operation on the main screen:

Slide on the right side of the screen, access to the cable, share, start, equipment, settings options.

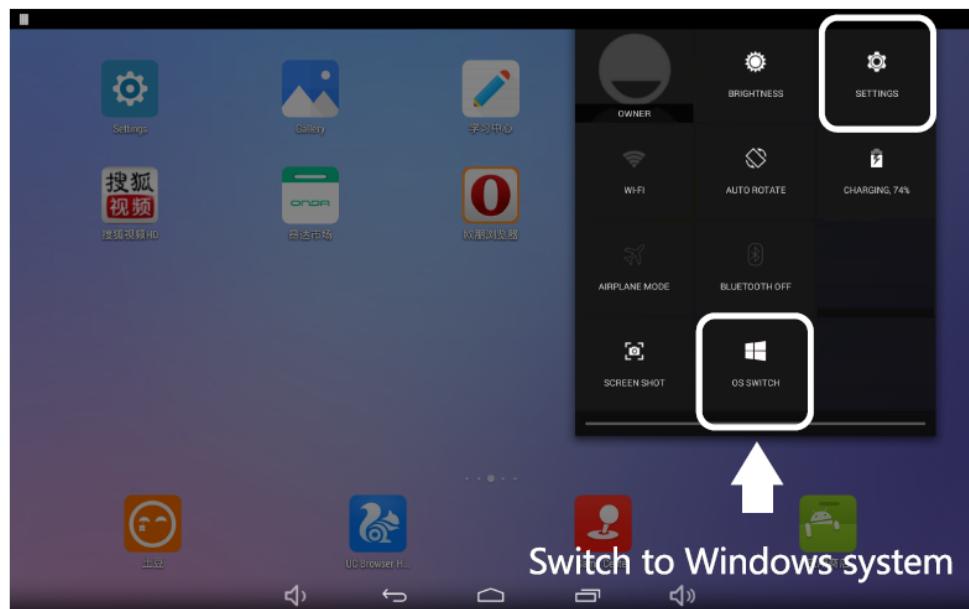

set an option



Input settings




WiFi wireless network settings



Folder management

1. Click the folder icon on the screen of main screen, the applications inside will appear.
2. Long press the program icon, you can add its shortcut on the main screen. Long press the shortcut icon, the icon of uninstalling the program will appear on the screen. Drag the shortcut icon that you have long pressed to the icon of uninstalling, you can delete this shortcut.

Bluetooth settings

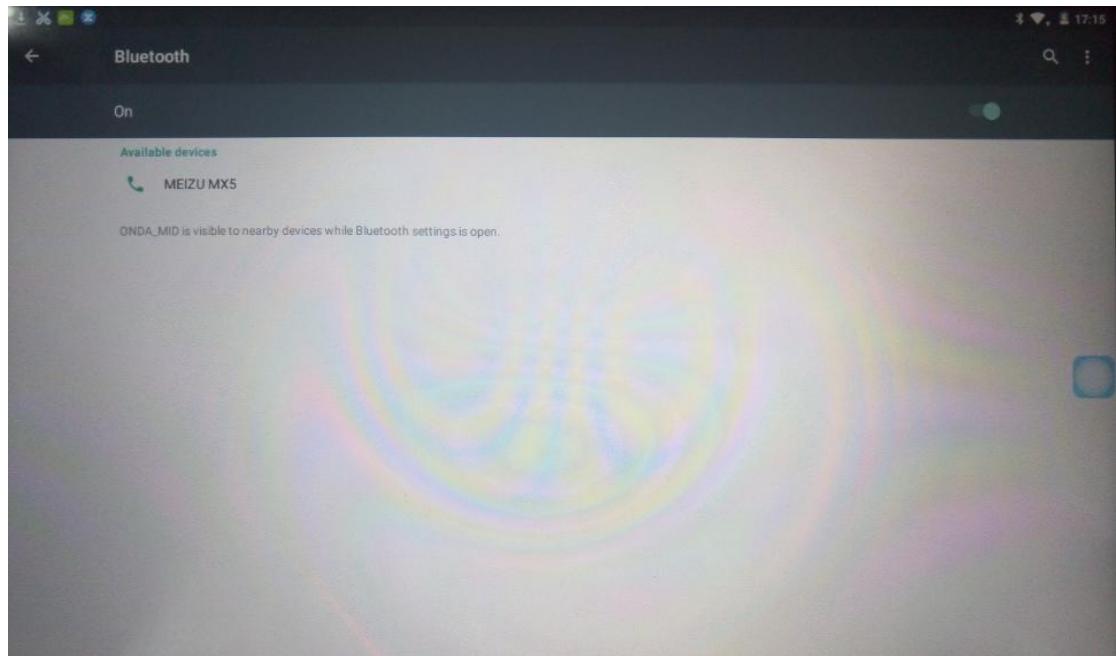


Turn on Bluetooth, the tablet PC will automatically search the other bluetooth devices.



Use gesture:


You can use the following gesture on your tablet:

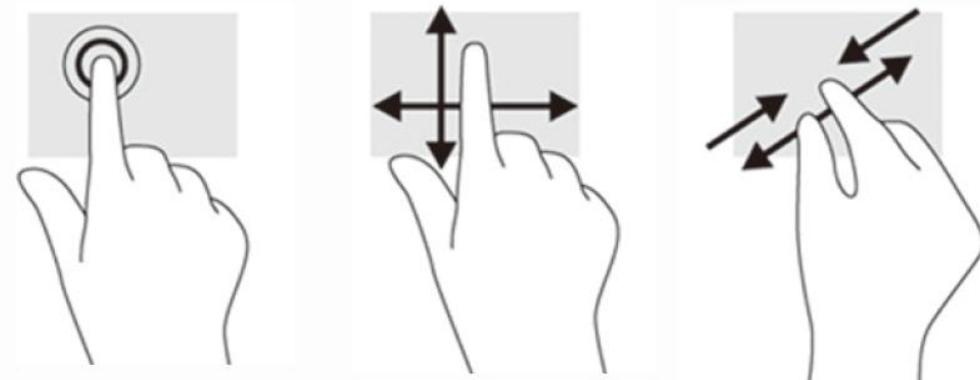


Screen switch:

You can use the automatic rotation function to change the view of the tablet PC.

Horizontal placement The tablet computer can get the lateral view, vertical longitudinal view can be obtained.

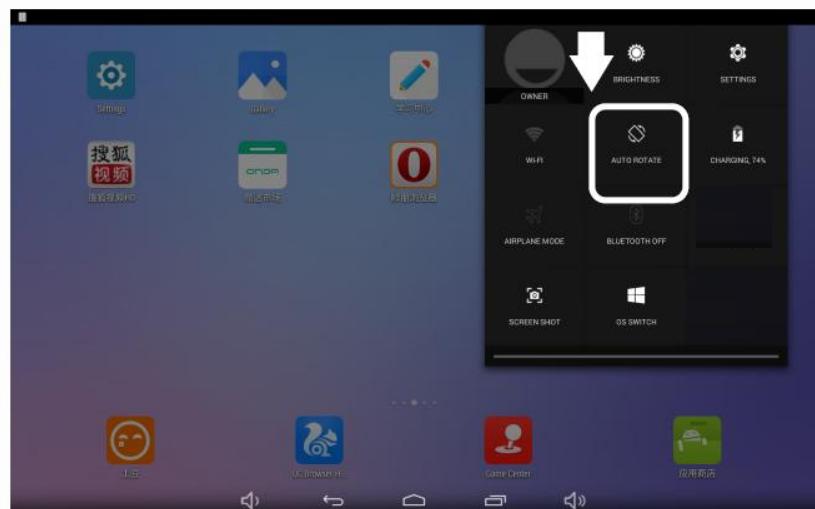

(Some applications can not revolve automatically. To change the setting of automatic revolving, please slide down your finger from the top of the screen to see the notices and touch the icon of screen rotation to lock or to unlock screen rotation.)

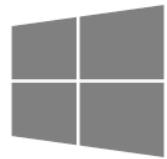

Windows

Set Windows system

You buy the ONDA Tablet PC, Microsoft has installed the latest version of the Windows 10 operating system, the first boot use, the need to carry out a simple setup, and its operating procedures and methods are as follows:

Region and language:

the first boot will enter the "regional and language" settings interface, click on "China", and then click "next" button to continue to set.



License terms:

after the confirmation is correct, click on the "I accept" button to continue to set.



Choose your love:
personalized interface
colors, and set the tablet
name, click "next" button to
continue setup.



Internet: in the scan to wireless networks in the list, select can be connected to the wireless network, enter "network security key to complete the connection; if no available wireless networks, please skip this step.




Settings: please set according to the requirements, it is strongly recommended that you click on the "use of fast set" button to continue to set.




Log in your account: Please set it up according to your actual situation. If you have register your "Microsoft Account", please enter your "account" and

"password" directly and go ahead for the next step; if you have not got a

"Microsoft Account", please click the button "create a new account" for a next-step setting.

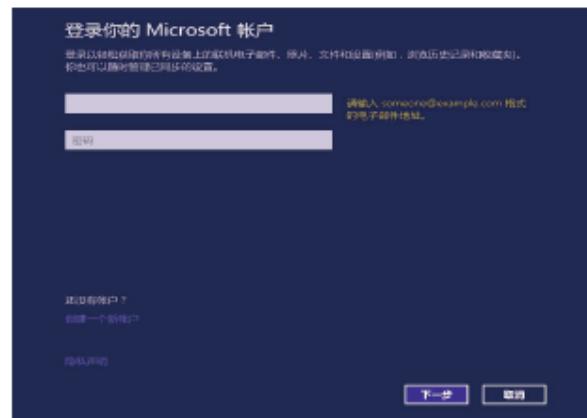

Create an account: Please set up the account information of your computer in the pop-up window and click "next" to continue your setting. (Note: If you do not want to create a "Microsoft Account" now, please click "log in without using the Microsoft Account" directly and skip the setup of registering.)

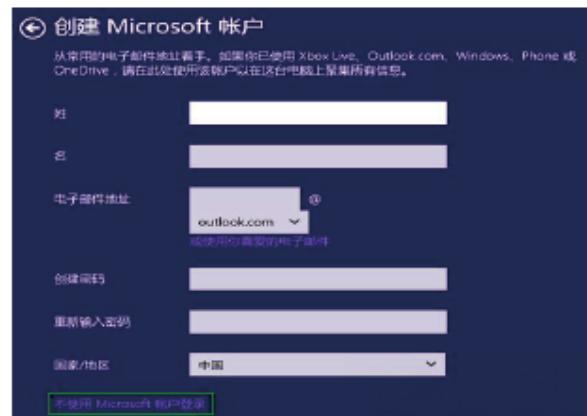


Your account: Please set up the "user name" and "password" of the Windows 10 operating system in the window showed in the below diagram, and click "done" to set it up. For easy the operation, you can continue without setting a password as needed.



Activate genuine copy of Windows

This product runs the licensed Microsoft Windows 10 operating system. When you first get it networked, the operating system will get activated by networking automatic in the background. If you can not get it networked at present time, you can get it activated by phone (toll-free number:8008301832,8008203800 or 4008301832) through a free call to the Microsoft telephone. The concrete steps are as follows:

1. On the Windows desktop, long press the  icon at the bottom left of the screen, and a pop-up menu as shown in the right figure will occur. Choose the "command prompt" and enter the Windows command mode.

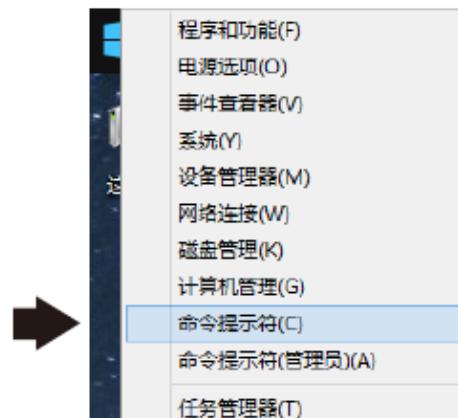

2. Press the enter button after type the command of slui 4.



3. The following screen will occur after you press the enter button. Choose "China" as the country or area you are in and click "next". The Microsoft phone number in China will appear, and the installation ID of the native Windows 10 will be showed as well.



4. Prepare a pen and a piece of paper according to telephone voice prompts, type the installation ID and click "type the confirmation ID". Click "activate Windows" after the previous step, then the process of being activated by phone has been done.



Warnings:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



using gestures:

You can finish **multiple** assignments with one or more of your fingers touching the screen.

Common gestures	Execute the task	finger
Click Click on an option. 	Execute a task, like: open an APP, open a connection or execute an order. Similar to click the left	one
Long-press Press down your finger and hold it for a few moments. 	Enable you to select an optionBefore, view its details.In addition, this operation can also be significant Show a number of options menu. similar Right click on the right mouse button.	one

Common gestures	Execute the task	finger
Swipe From the screen edge to the middle of the screen light sweep.	From the top or bottom edge of the screenSwipe, can display applicationsThe command, including the preservation, Edit and delete. In addition, alsoCan enter or close current openApplication program. Similar to theThe application, click the mouseRight click.	two
 		one
 	From the screen to the right side of the light sweep, can show the super button. Similar to moving the mouse to the lower right of the screenAngle.	

Common gestures	Execute the task	finger
<p>Shrink</p> <p>Close your or open two of your fingers on the touch screen.</p> 	<p>Enlarge or narrow a image application, like a picture or a map.</p>	two
<p>slide</p> <p>Drag your finger on the screen.</p> 	<p>Translation or scrolling list or page. In addition, according to different applicationsProgram, you can also pass thisGesture translation operation object, pictureDrawing or writing. Similar to hold downAnd drag the mouse to the translationOr rolling.</p>	one

One keyboard toggle to Android system.


Enter the Windows desktop and click the icon  on it and you can switch the Windows system of the panel computer to the Android system.



Click  to switch to the
Android system.

One keyboard toggle to Windows system.

Enter the homepage of the Android, bring up the drop-down menu by sliding downward and click the icon  and you can switch the Android system of the panel computer to the Windows system.

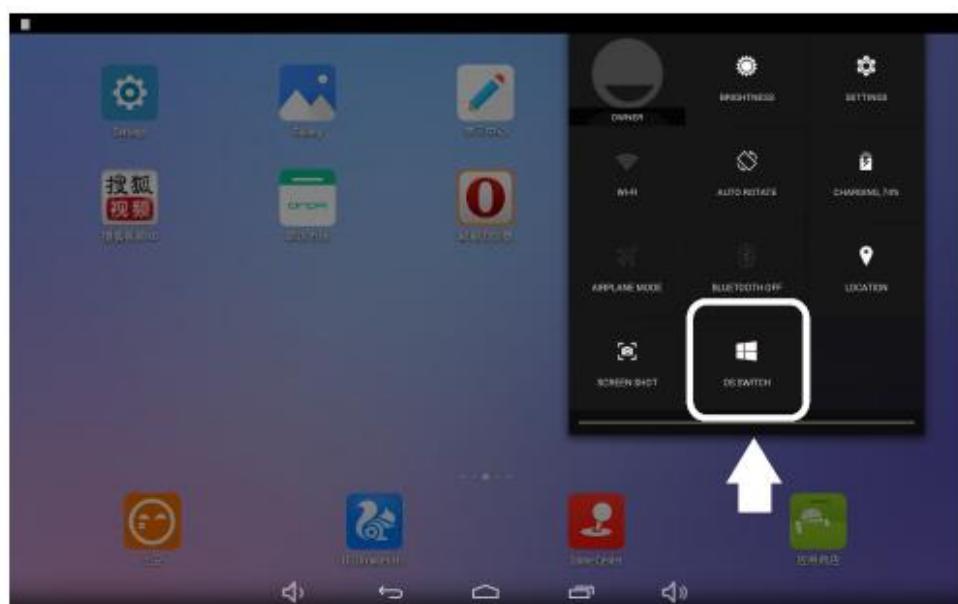

Click  to switch to the Windows system.

Statement:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



Thank you for choosing ►
ONDA panel computer.