

S@UNDLOGIC

5B039BT

Bluetooth speaker



INSTRUCTION MANUAL
PLEASE READ ALL INSTRUCTIONS CAREFULLY
AND RETAIN FOR FUTURE USE

1

Getting Started

- Remove the speaker from the box.
- Remove any packaging from the product.
- Please retain all packaging until you have checked and counted all the parts and the contents against the parts list.

Package Contents

- Bluetooth Speaker
- USB rechargeable cable
- Instruction Manual

Key Features

- Multi-colored Lights
- Built-in Mic for hands-free speaker phone
- Built-in Bluetooth Speaker
- Connect Bluetooth enabled devices such as Smart Phones, Tablets, etc. to stream wireless music
- Bring your music with you
- FM Radio
- Built-In USB Card Slot and Micro SD (TF) Card Slot to play music from USB Drive and Micro SD (TF) Card respectively
- 3.5mm AUX universal connectivity for MP3/MP4 Players, iPods, computers, netbooks, laptops etc.
- Built-in rechargeable battery

2

Stream music from Micro SD (TF) Card or USB Drive –

- Turn ON the device.
- Insert the Micro SD (TF) Card or USB Drive preloaded with songs, into the Micro SD (TF) Card Slot or USB Card Slot of the speaker respectively.
- Speaker will automatically start playing songs from the Micro SD (TF) Card or USB Drive.
- To Skip Track Forward – Short press the **▶▶** button.
- To Skip Track Backwards – Short press the **◀◀** button.
- To Pause the Track – Short press the **■■** button.
- To Play the Track – Short press the **▶▶** button.
- Long press + to increase the volume or - to decrease the volume.

Listening to FM radio

- Turn ON the device.
- Insert the Micro USB end of the included USB rechargeable cable with Aux pin into the charging port, and leave the other end of the cable open. USB rechargeable cable serves as FM Antenna while in FM Radio mode.
- You can press **◀◀** or **▶▶** button each time until clear FM radio station is received.
- Long press + to increase the volume or - to decrease the volume.

Play music through "Auxiliary" mode

- Turn ON the device.
- Insert the Micro USB end of the included USB rechargeable cable with Aux

8

pin into the charging port. Plug the Aux pin to the audio device (such as phone / MP3 Player / computer / tablet /etc.).

- Select your favourite song at the source device to play.
- Press the Mode button each time until it reaches Aux mode.
- Long press + to increase the volume or - to decrease the volume.

Note: Media can be controlled only through source devices, while playing music in Auxiliary mode.

Tips!!

1. Press the "Mode button" to switch different functions of the speaker between – Bluetooth / USB-Micro SD (TF) / FM radio / AUX-In.
2. When the unit is not in use, turn OFF the device to save the battery power.

Specifications –

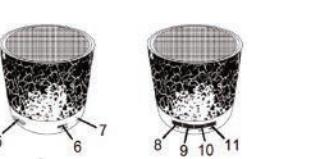
Bluetooth® Version: v2.1+EDR
 Speaker: 3 Watts
 Size: 6.0cm(L) x 6.0cm(W) x 7.5cm(H)
 Weight: 3.7 Oz approx.
 Power Input: DC 5V
 Charging Time: Up to 3 Hours
 Play time: Up to 2 hours
 Built-In Rechargeable Battery: 3.7V / 300mAh
 (Note: Battery life & charging time may vary based on usage & types of devices used.)

9

SAFETY INSTRUCTIONS

- Keep the unit away from heat sources, direct sunlight, humidity, water and any other liquids.
- Do not operate the unit if it has been exposed to water, moisture or any other liquids to prevent against electric shock, explosion and/or injury to yourself and damage to the unit.
- Do not use the unit if it has been dropped or damaged in any way.
- Repairs to electrical equipment should only be performed by a qualified electrician. Improper repairs may place the user at serious risk.
- Do not use the unit with wet hands.
- Do not put objects into any of the openings.
- Keep the unit free from dust, lint etc.
- Do not use this unit for anything other than its intended use.
- Keep the unit out of reach of children.
- This appliance is not a toy.
- Batteries (battery pack or batteries installed) shall not be exposed to excessive heat place, such as sunshine, fire or the like.

3

Description of Parts

4

INSTRUCTIONS FOR USE**Charging the speaker**

The speaker has built-in rechargeable battery. When the battery is drained out, device would turn OFF automatically. Please recharge the battery every time it drains out.

Plug the Micro USB end of the included USB rechargeable cable into the charging port. Plug the other end into a USB port on your computer or other devices made for USB charging. Red LED illuminates indicating that the device is being charged.

It takes up to 3 hours to fully charge the device. Once the device is fully charged, LED light would turn OFF.

Turning ON/OFF the Speaker –

Before turning ON the device, please ensure that the unit is fully charged. To Turn ON the device – Slide the ON/OFF Switch to "ON" position. To Turn OFF the device – Slide the ON/OFF Switch to "OFF" position.

Connect using Bluetooth Technology

- Turn On the Speaker. You would hear an indication tone, and Multi-colored Lights inside would flash, indicating that you are now in Bluetooth Pairing Mode.
- Activate the Bluetooth function on your source device (Mobile Phone or Tablet). Please refer to manufacturer's instructions for instructions on enabling Bluetooth on your device.
- Search for available Bluetooth devices and you would find "SL LIGHTUP SPKR" – Pair it with this device.

5

- If required, enter the password "0000" to pair with the device.
- Once paired successfully, you will hear another indication tone.
- You can now stream wireless music on your speaker through your source device.

Talking using the Bluetooth Speaker

Please ensure that you are paired with the Bluetooth Speaker to use the below functions.

Function	Operation	Button
Answer Incoming Call	Incoming Call	Press the Phone once to answer an incoming call.
Reject incoming call	Incoming Call	Press and hold the Phone button
End Call	Incoming Call	After your Phone conversation, short press the Phone button
Increase Volume	During a call	Press and hold the + button to increase the volume
Decrease Volume	During a call	Press and hold the - button to decrease the volume
Redial last number	Standby mode and connected to a device	Short press the Phone button twice

6

Listening to Music Wirelessly

Please ensure that your device (iPhone, Tablet or Other Smart Phone) is paired with the Bluetooth Speaker to stream music wirelessly. Once it is paired, play music from your device.

Function	Operation	Button
Increase Volume	Playing music	Press and hold the + button to increase the volume
Decrease Volume	Playing music	Press and hold the - button to decrease the volume
Pause	Playing music	Short press the ■■ button will pause the music
Play	Pausing	Short press the ▶▶ button will resume the music
Previous track	Playing music	Short press the ◀◀ button will return you to the previous track
Next track	Playing music	Short press the ▶▶ button will take you to the next track

(Note: The above functions only can be used in Bluetooth mode only. An indication tone will alert you when the volume is adjusted to the minimum or maximum level. In Aux mode, besides the volume increase/decrease, you will need to control through your source device.)

7

Troubleshooting

- Don't expose the unit to contact with sharp objects as this will cause scratches and damage.
- Don't let the unit fall down onto the floor. The internal circuit might get damaged.
- Don't attempt to disassemble the unit as it may get damaged if you are not professional.

Notes!!

1. Press the "Mode button" to switch different functions of the speaker between – Bluetooth / USB-Micro SD (TF) / FM radio / AUX-In.
2. When the unit is not in use, turn OFF the device to save the battery power.

Specifications –

Bluetooth® Version: v2.1+EDR
 Speaker: 3 Watts
 Size: 6.0cm(L) x 6.0cm(W) x 7.5cm(H)
 Weight: 3.7 Oz approx.
 Power Input: DC 5V
 Charging Time: Up to 3 Hours
 Play time: Up to 2 hours
 Built-In Rechargeable Battery: 3.7V / 300mAh
 (Note: Battery life & charging time may vary based on usage & types of devices used.)

10

Care and maintenance

Read the following recommendations before using the Bluetooth Speaker. Following these you will be able to enjoy the product for many years.

- Do not expose the unit to liquid, moisture or humidity to avoid the product's internal circuit being affected.
- Don't use abrasive cleaning solvents to clean the unit.
- Do not expose the unit to extremely high or low temperature as this will shorten the life of electronic devices, destroy the battery or distort certain plastic parts.
- Don't dispose of the unit in fire as it will result in an explosion.

11

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Limited Warranty

This manufacturer's product warranty extends to the original consumer purchaser of the product. Neither the retailer nor any other company involved in the sale or promotion of this product is a co-warrantor of this manufacturer warranty.

WARRANTY DURATION: All materials and workmanship are warranted to the original consumer purchaser for a period of ninety (90) days from the original purchase date.

WARRANTY COVERAGE: This product is warranted against defective materials or workmanship. This warranty is void if the product has been damaged by accident, in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel or other causes not arising out of defects in materials or workmanship. This warranty is effective only if the product is purchased and operated in USA, and does not extend to any units which have been used in violation of written instructions furnished by manufacturer or to units which have been altered or modified or, to damaged products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

WARRANTY DISCLAIMERS: This warranty is in lieu of all warranties expressed or implied and no representative or person is authorized to assume for manufacturer any other liability in connection with the sale of

our products. There shall be no claims for defects or failure under any theory of tort, contractor, commercial law including but not limited to, negligence, gross negligence, strict liability, breach of warranty and breach of contract. Under no circumstances will Manufacturer's maximum liability exceed the retail value of the product.

WARRANTY PERFORMANCE: During the above 90 day warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at manufacturer's option). The repaired or replacement product will be in warranty for the balance of the 90 day warranty period and an additional one-month period. No charge will be applicable for such repair or replacement.

SERVICE AND REPAIR: If service is required for this product, you should first contact Midwest Trading Group Customer Service at info@mtradinggroup.com or by calling 1 (866) 815-4714, Monday to Friday 10am to 6pm EST.

NOTE: Manufacturer cannot assume responsibility for loss or damage during incoming shipment. As a precautionary measure, carefully package the product for shipment, and insure it with the carrier. Be sure to enclose the following details with the product: your full name, return address and daytime phone number, a note describing the problem you experienced, a copy of your sales receipt or other proof of purchase to determine warranty status. C.O.D. shipments cannot be accepted.

RF exposure

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

12

13